



STEP ONE

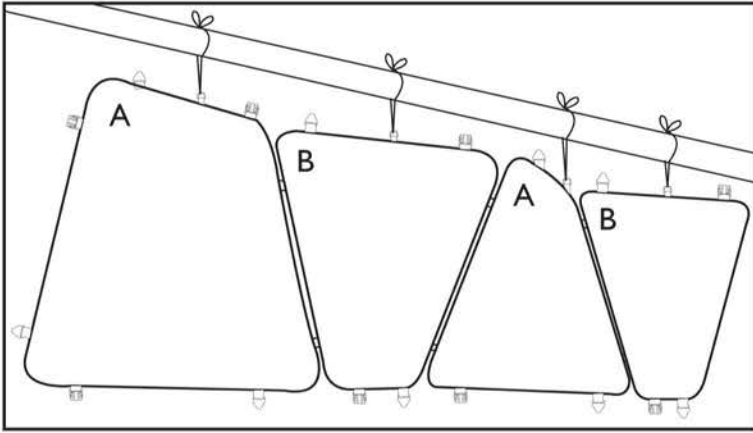

Start by hanging the top row. Alternate between A and B panels. Position the panels so that the male and female buckles line up. Connect all buckles with their vertical or horizontal match.

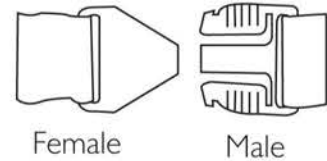


Important Notes

The wafers connect with tabs that have male and female buckles. Take a minute to identify the different connectors. This is the key to setting up the Wafer Wall correctly.


Observe that each wafer to be used for the top row is marked A or B on the tie line.

STEP TWO

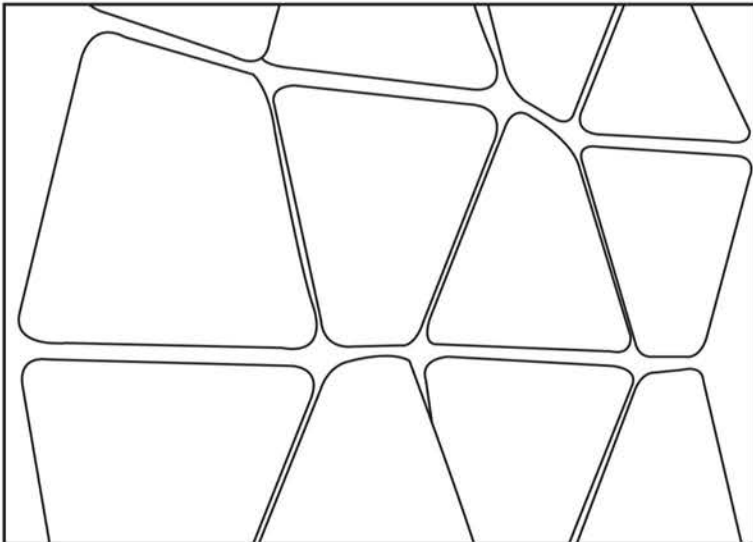

Continue to add panels until the desired wall size is reached. The corners of each row should match up to create peaks and valleys. This will be more evident as the wall is created.

STEP THREE

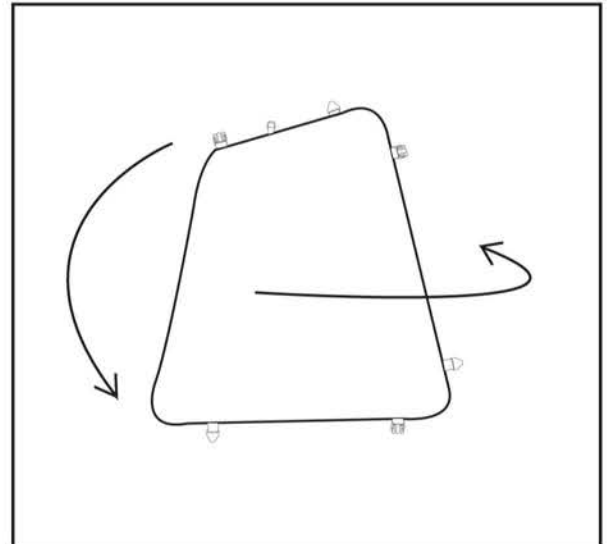

Flip or spin the wafer to continue the pattern of peaks and valleys.

Questions about ATOMIC products? Give us a ring! 717-626-4408

www.atomicdesign.tv