


STEP ONE Starting at one end of the truss, begin to secure the first row of concertina panels using the tie-line provided. The individual panels should be evenly spaced.

STEPTWO Raise the truss so that more concertina panels can be added by attaching the buckles on the tops and bottoms of the panels. Follow this procedure until the desired column height is reached.

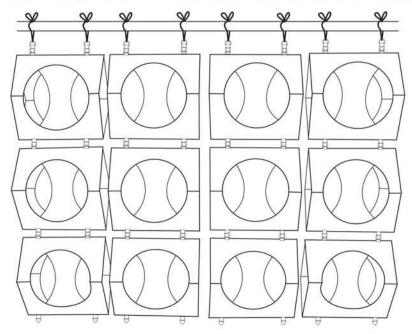

Questions about ATOMIC products? Give us a ring! 717-626-4408 www.atomicdesign.tv