

INSTALLATION INSTRUCTIONS



STEP ONE

Tie Confetti Cloth on pipe or truss via grommets and tieline.

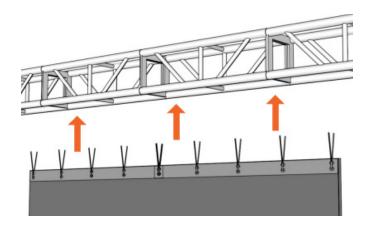

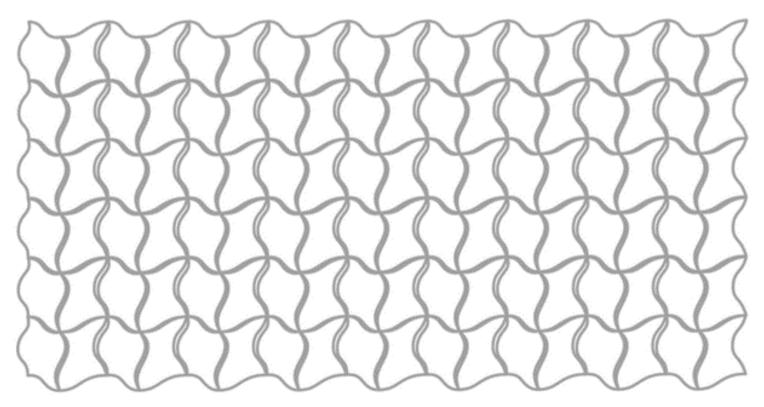

Questions about ATOMIC products? Contact your Modular Systems Account Manager! www.atomicdesign.tv/contact