


Dimensions: One FASTwall
14" Deep (22.5" Deep with bases)
Maximum height and width dependent on product

STEP ONE


Slide two FASTwall panels together to create one unit.

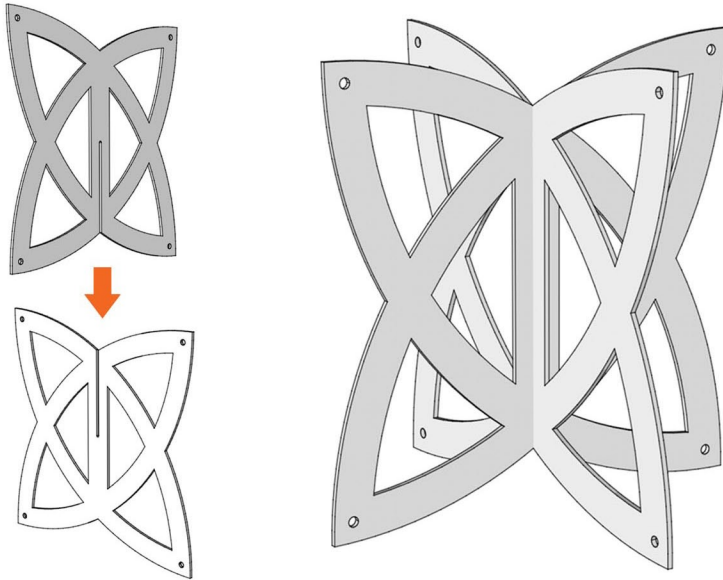

STEP TWO

Align desired width of bases in a row, with white feet facing the ground. Be sure that the handle holes are all aligned to the back of the FASTwall.

When aligning bases, place one more base than the width of the FASTwall
i.e. 5 units wide = 6 bases,
7 units wide = 8 bases, etc.

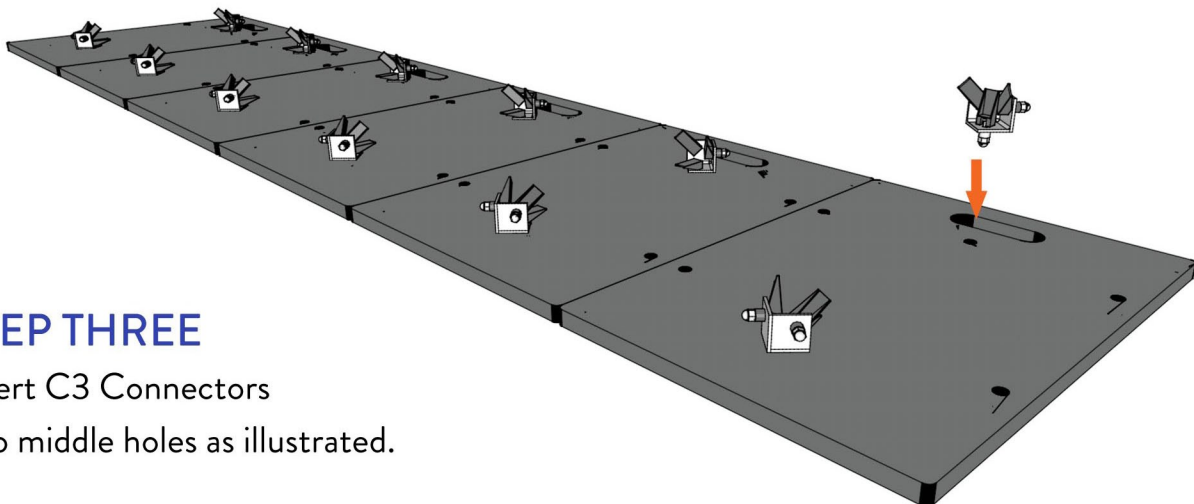


STEP THREE

Insert C3 Connectors
into middle holes as illustrated.


STEP FOUR

Connect risers to bases using C3 connectors.
Connect panels to risers using C4 connectors

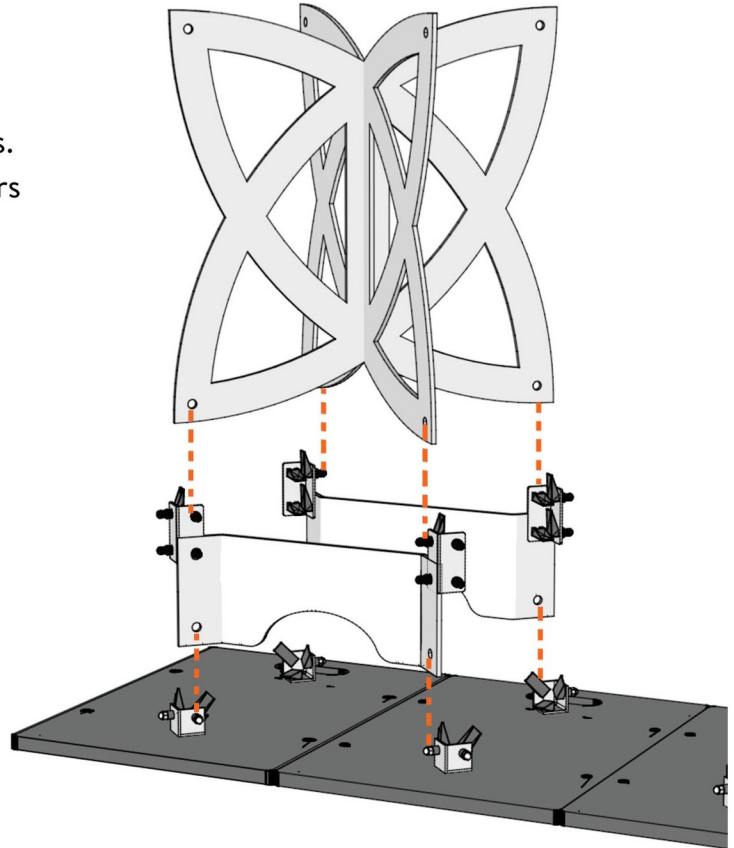

STEP FIVE

Use C4 connectors to continue assembling the FASTwall units.

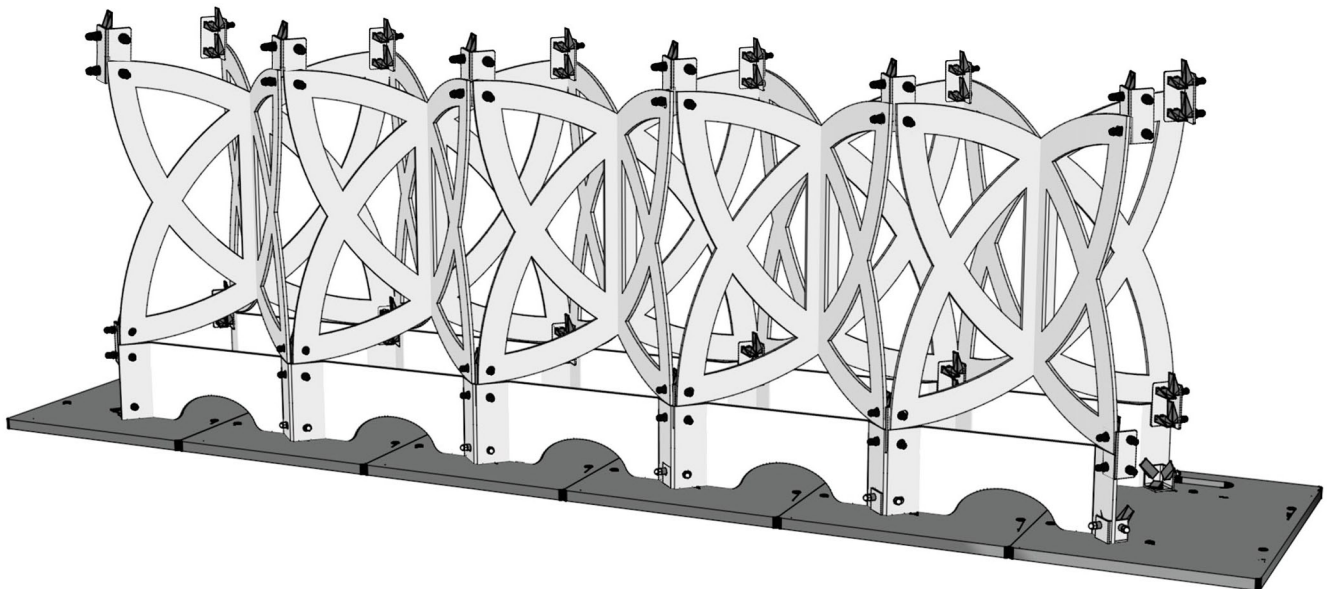

STEP SIX

Continue building FASTwall
one row at a time
Finish top row with C2 connectors

DISASSEMBLY INSTRUCTIONS:

FASTwall **MUST** be
disassembled from top
down, in reverse order as
the assembly process.
Removal of bottom panels
first may result in a
toppling wall.

