



## Channeled FABlok Frame

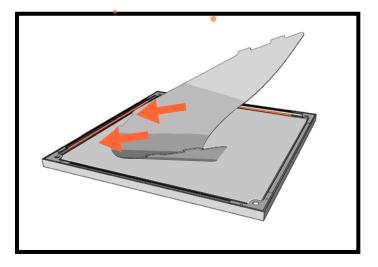


Place tabs into channel marked in orange.


## Slotted FABlok Frame

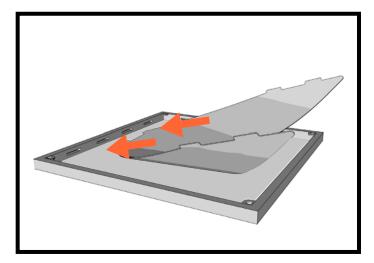

Place tabs into frame slots as illustrated.

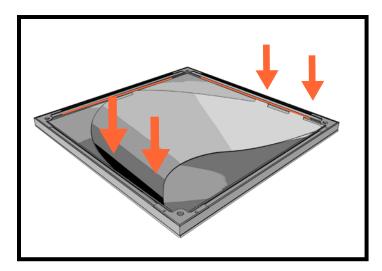

Bend Dune insert into fabric, lifting the frame to allow the insert to bend into the fabric. Place sides of Dune insert into frame channels or slots.

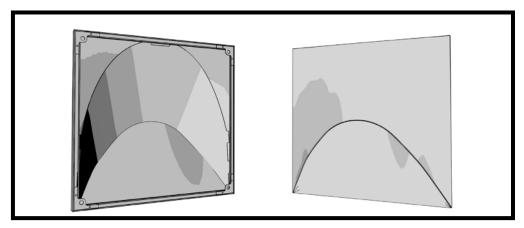

Questions about ATOMIC products? Give us a ring! 717-626-4408 www.atomicdesign.tv