


### STEP ONE

Place tabs into channel or slots in frame as illustrated.

### STEP TWO

Bend Dune insert into fabric, lifting the frame to allow the insert to bend into the fabric. Place Dune insert edge into frame channel or slots.

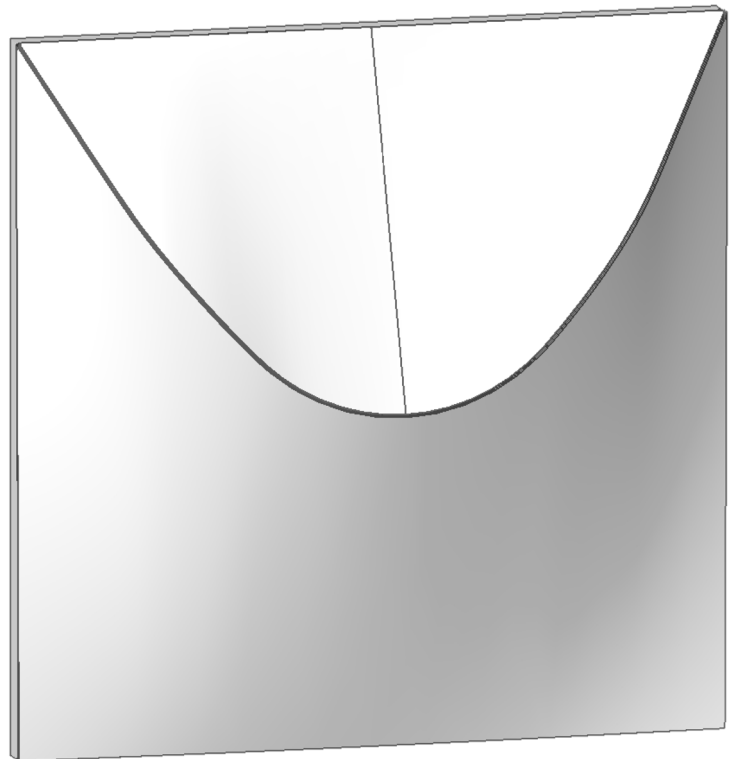

Questions about ATOMIC products?  
Contact your Modular Systems Account Manager!  
[www.atomicdesign.tv/contact](http://www.atomicdesign.tv/contact)