
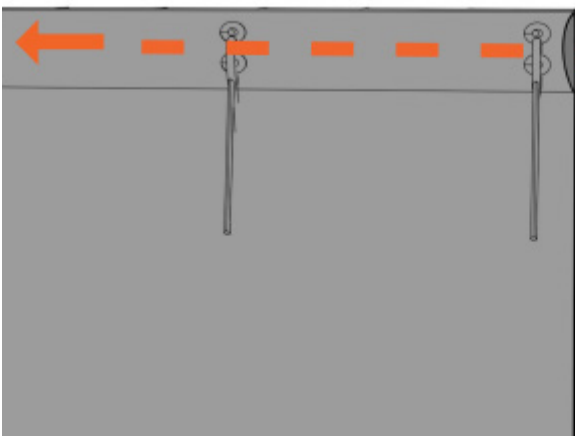


HANGING

STEP ONE

Tie Black to pipe or truss using tieline on the back.

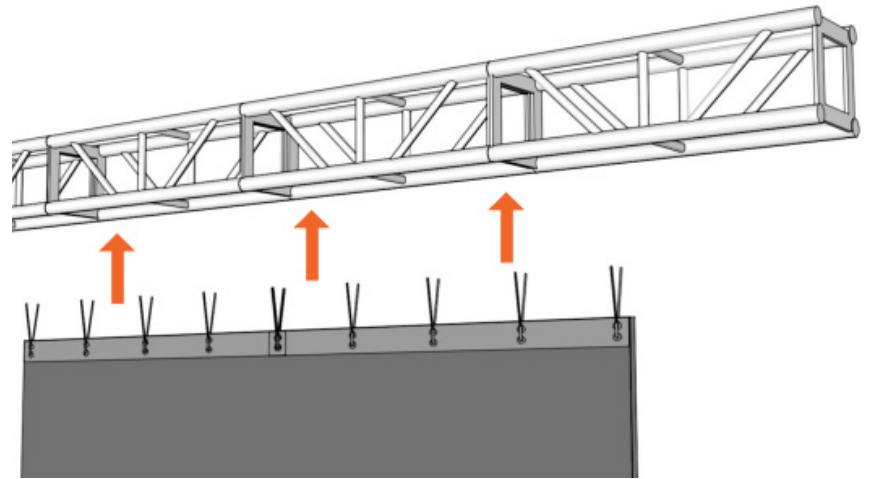


PIPE & BASE

STEP ONE

Before flying up run cross pipe through hidden pipe pocket. Access holes are cut every 4' for pipe access.

STEP TWO

Attach crosspipe to vertical pipe and upright base. Raise pipes to desired height.

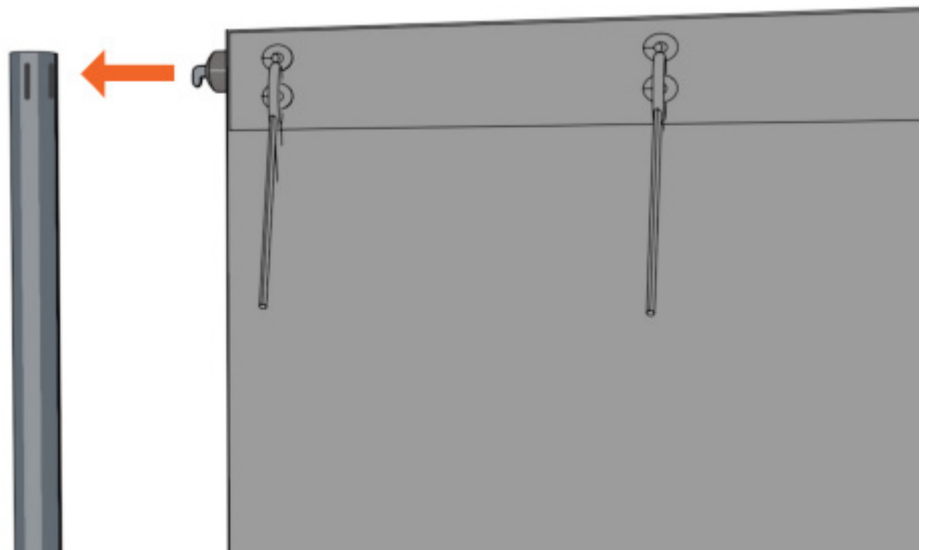

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact