


#### NOTE:

- SuperLever No-Show panels are interchangeable, and the following instructions show a product representation. Actual panel design may vary.
- No-Show SuperWalls require internal support walls every two panels wide.
- SuperLever black connectors must be used with No-Show panels.

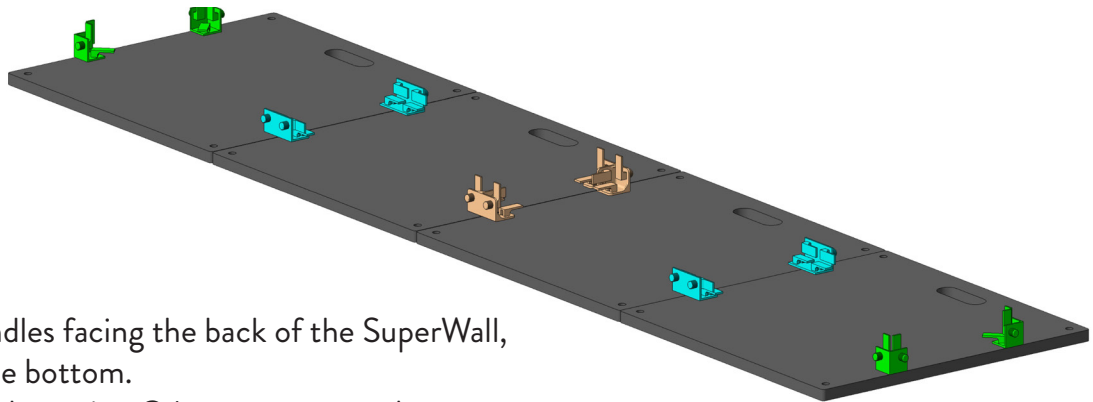

#### STEP ONE


- Align bases with handles facing the back of the SuperWall, and white feet on the bottom.
- Connect bases together using C4 connectors as shown.
- Attach C3 connectors to both ends and T5 connectors in center for support panels.

#### NOTE:


- T5 Connectors should be oriented with open area face down.

#### STEP TWO

- Attach No-Show Panels on the front and back.
- Attach Half Panels to the sides and center support.
- Attach C4, F4 and T6 connectors as shown.

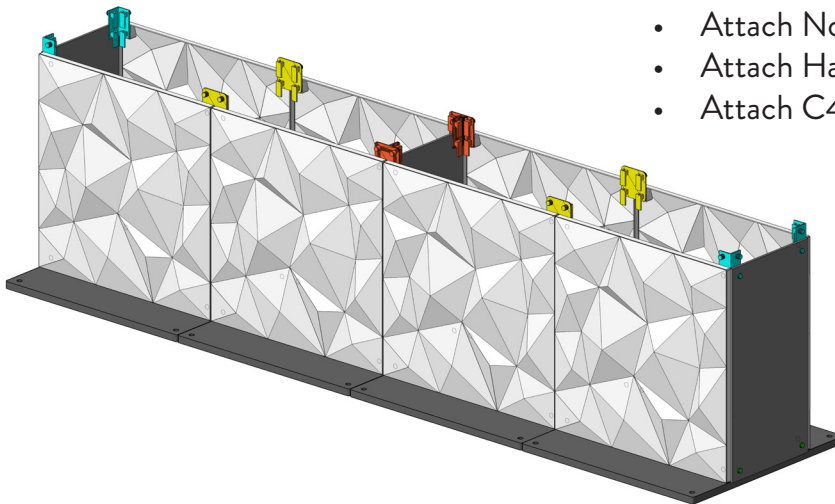

Questions about ATOMIC products?  
 Contact your Modular Systems Account Manager!  
[www.atomicdesign.tv/contact](http://www.atomicdesign.tv/contact)

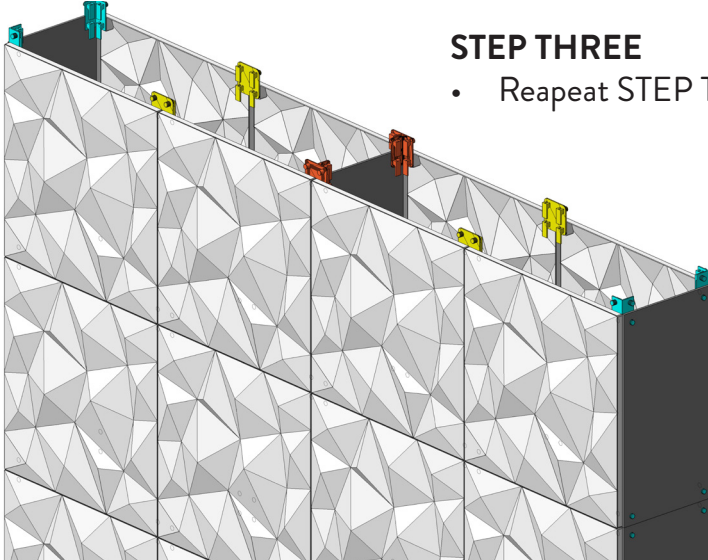

### STEP THREE


- Repeat STEP TWO for the middle rows of your SuperWall.

### STEP FOUR

- For top of SuperWall, add the top row of the No-Show panels and Half Panels.
- Attach C3, C4, and T5 connectors as shown.

#### NOTE:

- T5 Connectors should be oriented with open area face up.

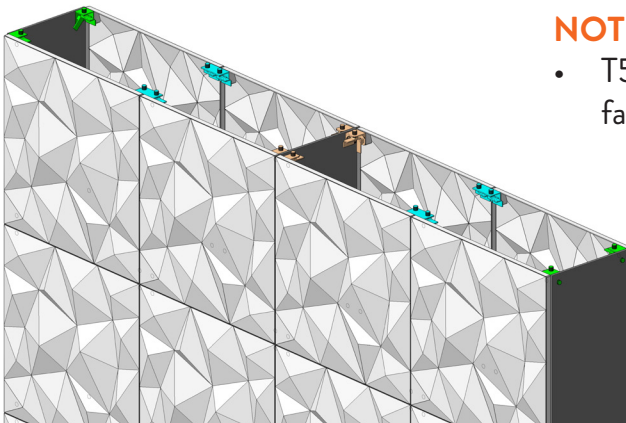

### STEP FIVE

- Complete SuperWall by attaching Half Panels to the top of the SuperWall.
- Ensure structure is stable before repositioning.

### DISASSEMBLY INSTRUCTIONS:

SuperWall MUST be disassembled from top down, in reverse order as the assembly process. Removal of bottom panels first may result in a collapsing wall.

