
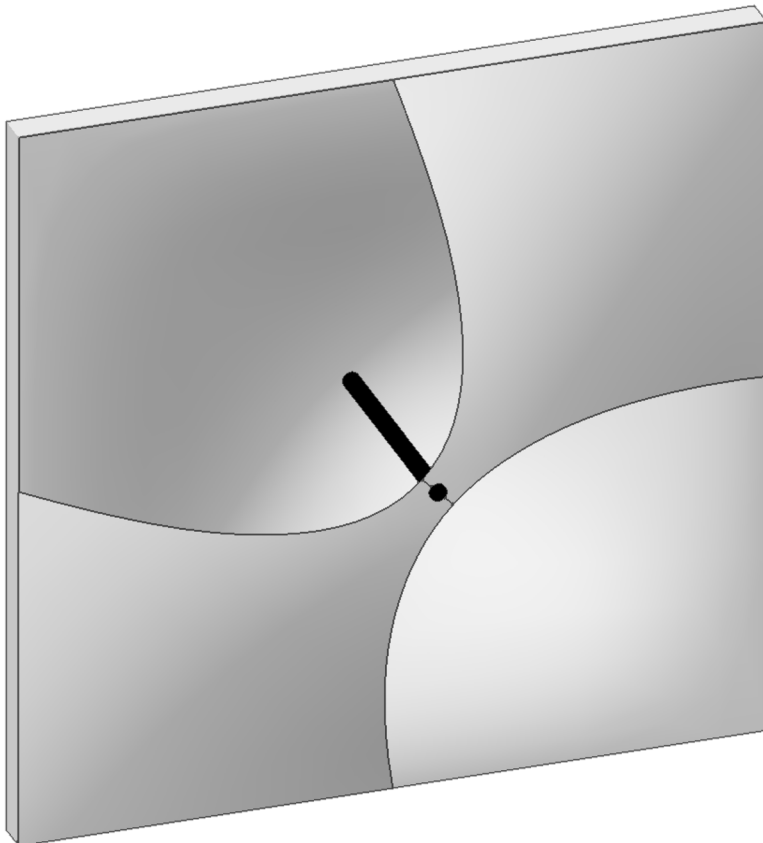


### STEP ONE

Hold Turbine panel vertically. A metal rod is attached to the front fabric, hanging freely.

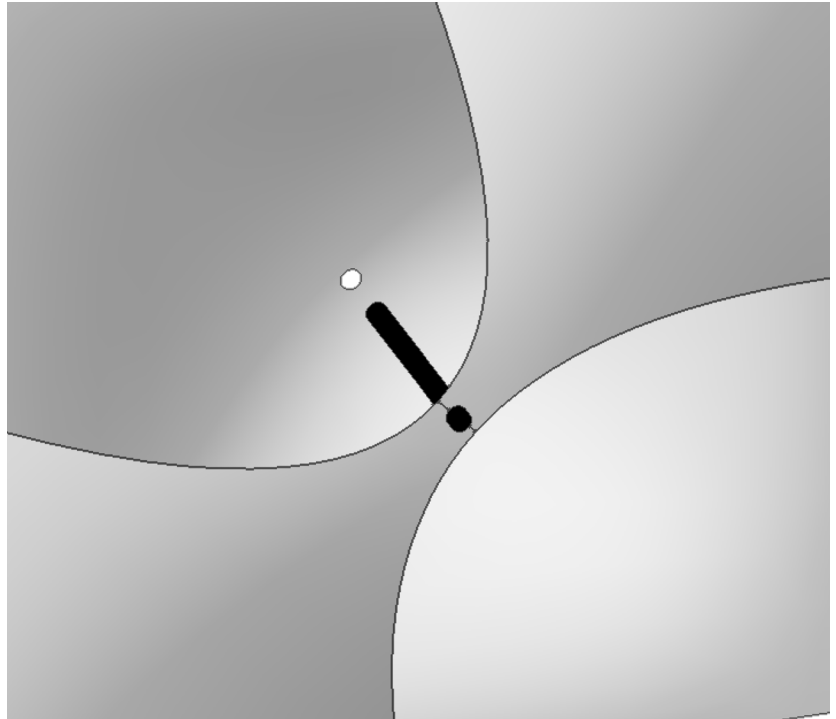

### STEP TWO

Hold metal tube. Stretch fabric outward until the bottom of the metal rod fits into the metal pin attached to the back fabric.