


NOTE:

- “S-hooks” are not included; SuperLever panels and connectors are designed to work with tieline. Hanging SuperLever panels from covered truss or pipe (i.e., with drape or truss sock) requires “S-hooks” or similar hardware not provided by ATOMIC.

NOTE:

- Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.
- For safety and greatest efficiency while building Backdrop, begin with the truss at working height. Gradually raise the truss as you continue to build.

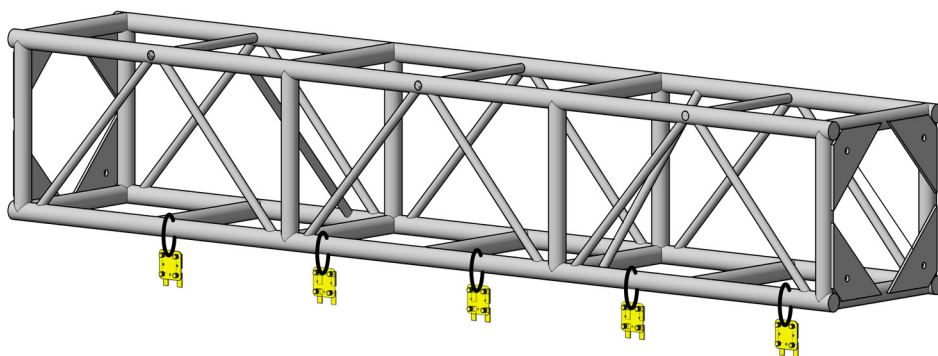


STEP ONE

Tie off F4 connectors to truss and ensure connectors are level with each other.

NOTE:

If using F2 connectors, the top swell latch of the F2 will need to be removed for the tie line.

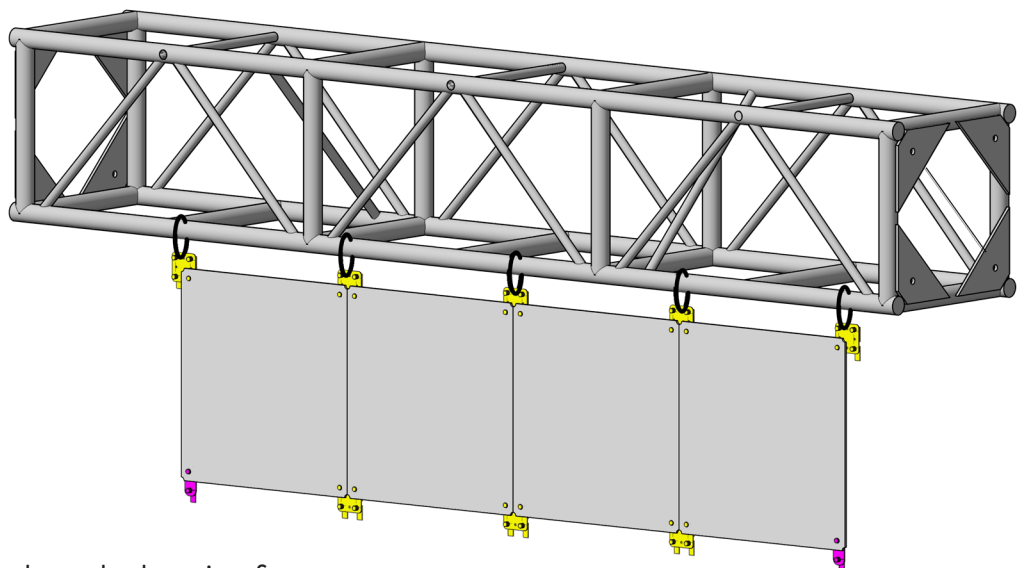


STEP TWO

Attach SuperLever panels to the hanging fasteners.
Attach F2 and F4 connectors as shown.

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

STEP THREE

Repeat STEP TWO for the middle rows of your backdrop.

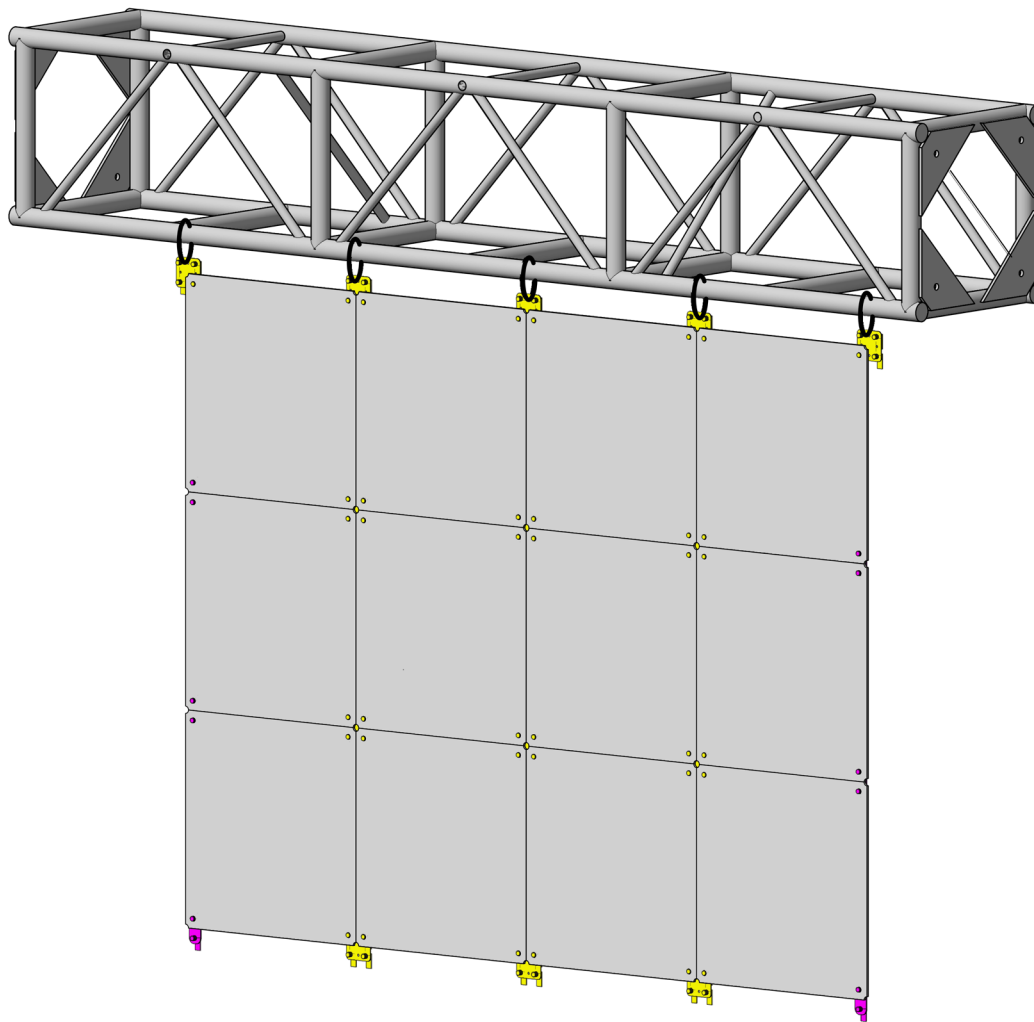


Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

STEP FOUR

Add panels to the bottom row.

Attach F2 connectors between the panels as shown above.

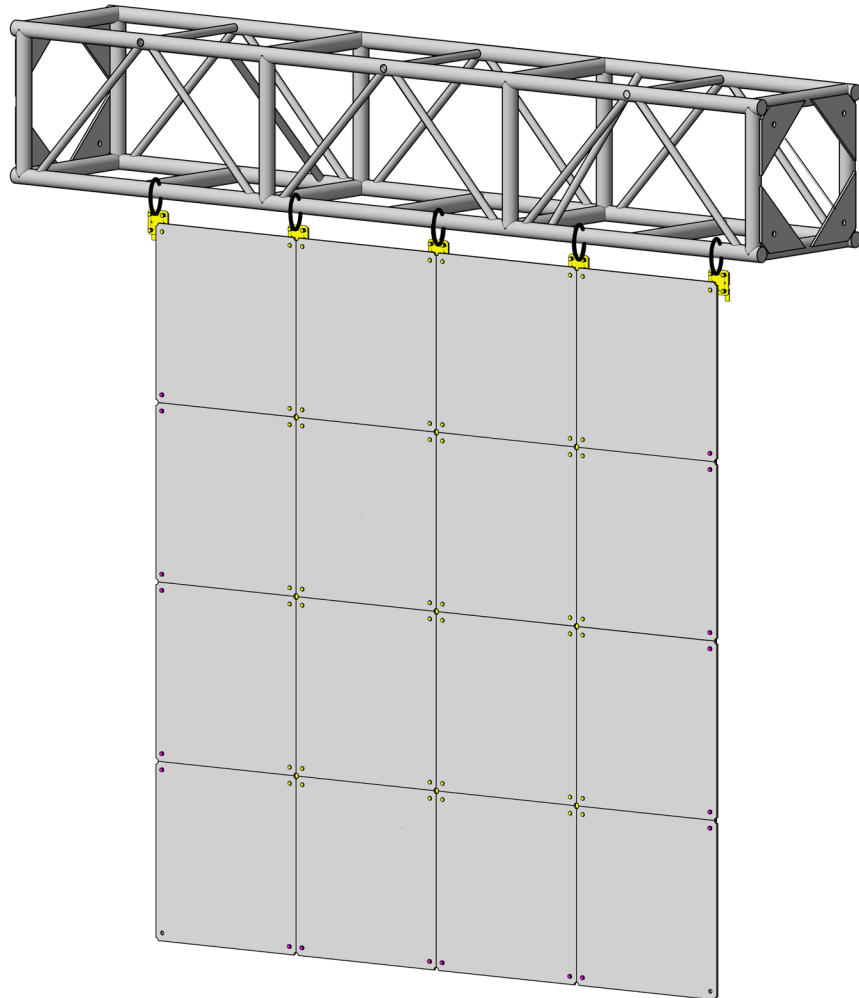

DISASSEMBLY INSTRUCTIONS:

Backdrop **MUST** be disassembled from bottom up, in reverse order as the assembly process. Removal of top panels first may result in a collapsing wall.

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact