


STEP ONE
Tie Batty to truss.

STEP TWO
Snap panels together to desired width.
NOTE:
For safety and greatest efficiency gradually raise the truss as you snap the panels together.

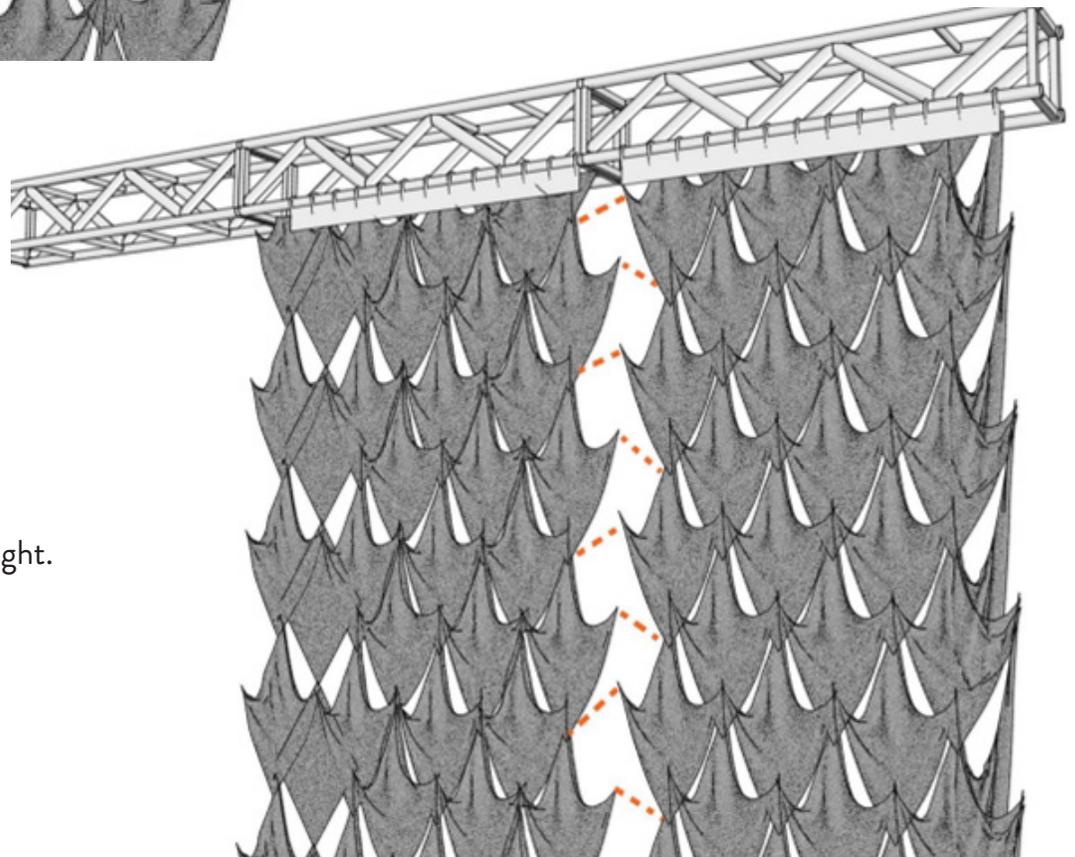

STEP THREE
Raise truss to desired height.

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact