


NOTE:

Actual product may vary. Superlever panels are interchangeable and instructions show a product representation. Reference the SuperLever Connectors sheet for instructions and images.

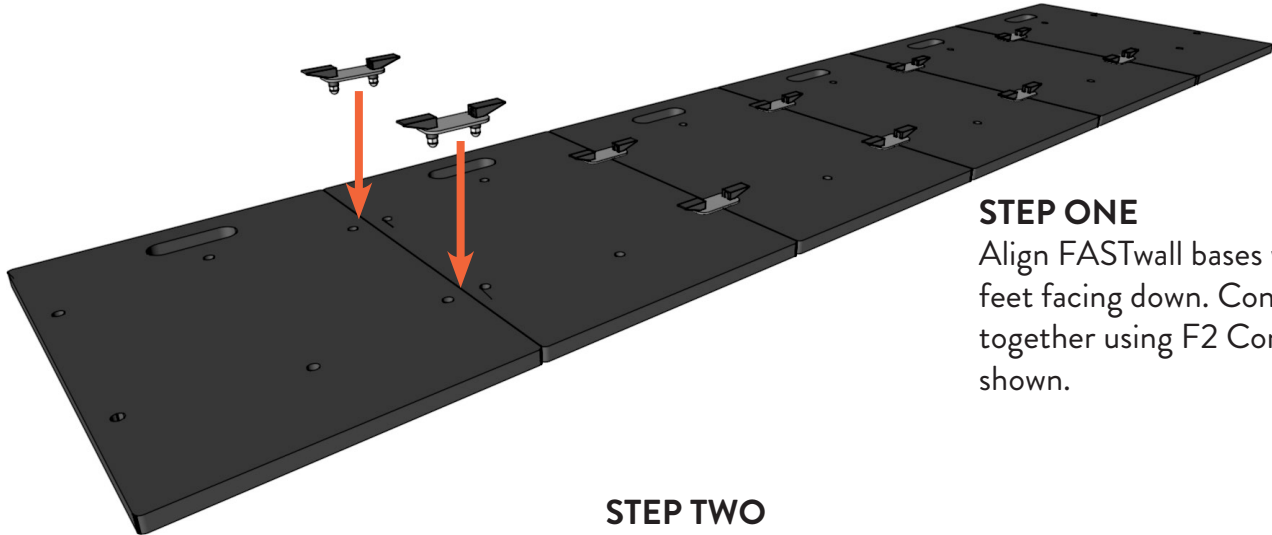


STEP ONE


Align FASTwall bases with white feet facing down. Connect bases together using F2 Connectors as shown.

STEP TWO

Attach C2 and C3 Connectors using the holes in the center of each base where shown.

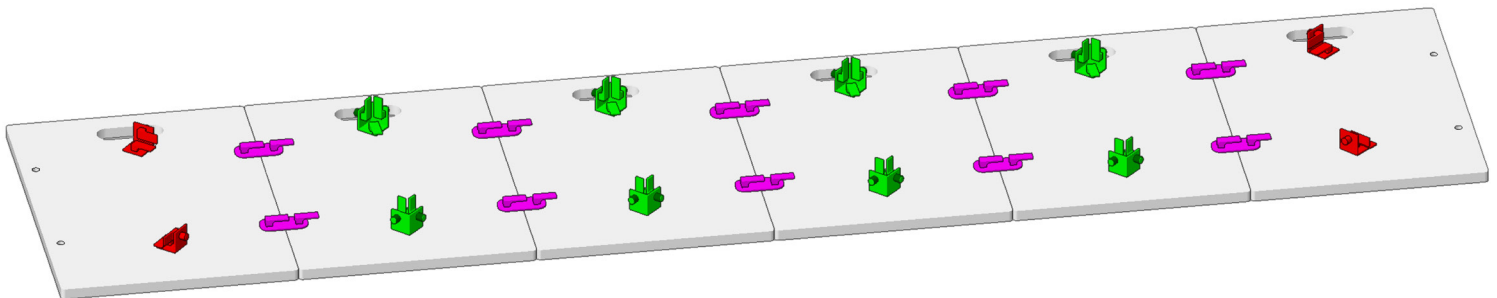


FIR PANEL REFERENCE

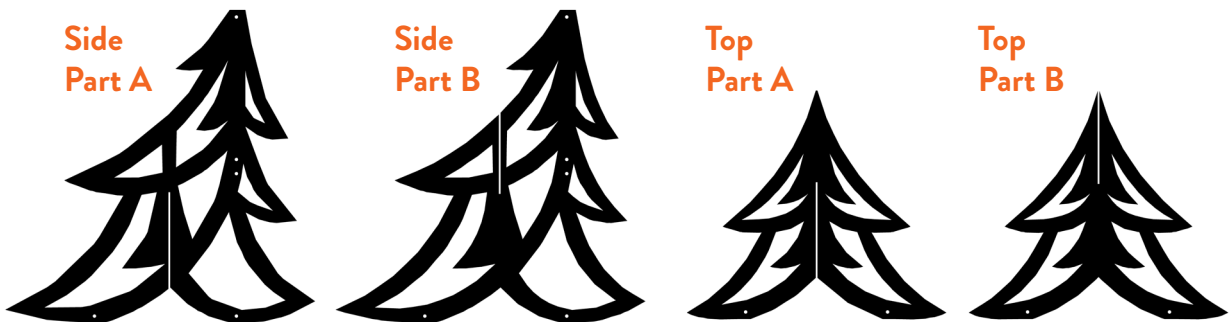

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact


STEP THREE

Connect two Knot panels together and attach Knot units to C3 Connectors as shown.

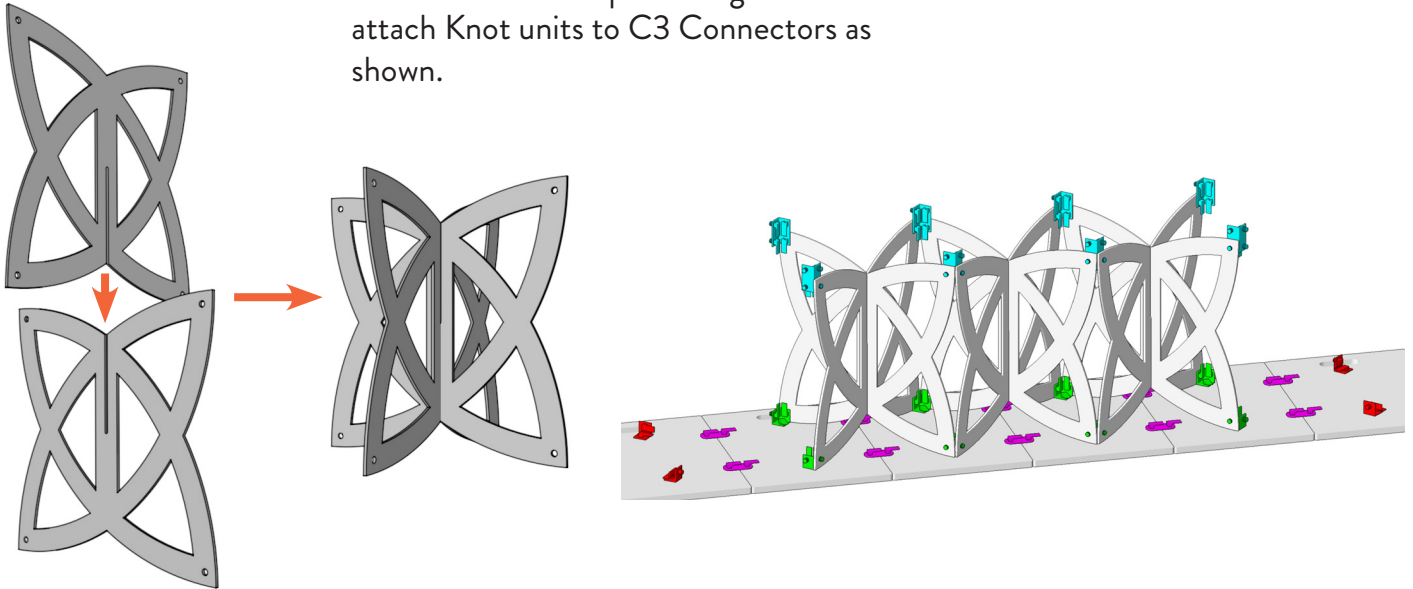

STEP FOUR


Connect parts A and B of side unit together and attach to C4 and C3 Connectors at each end as shown.

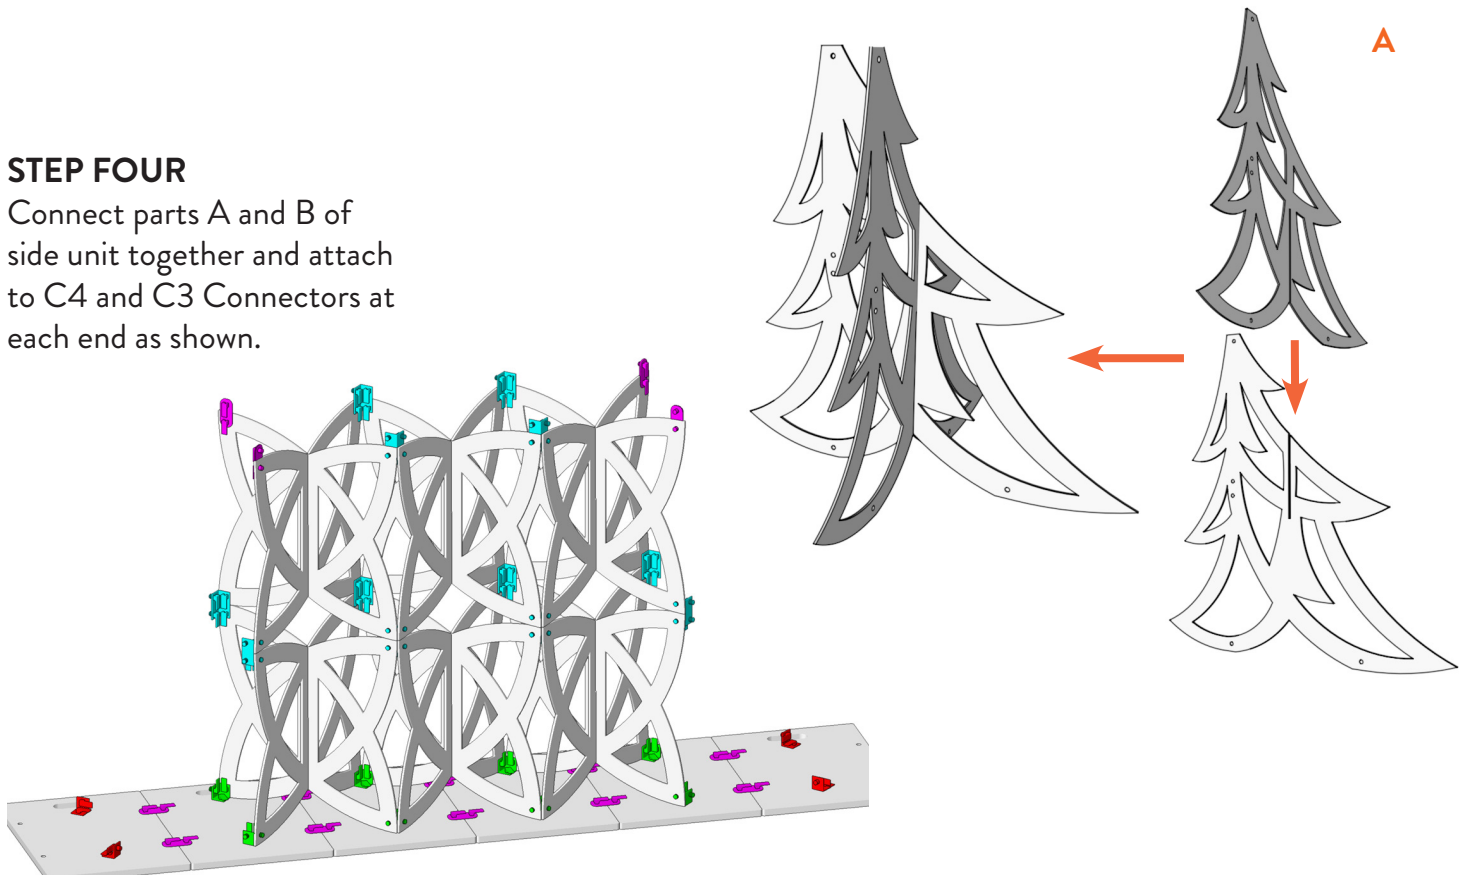

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact


STEP FIVE

Attach C4 Connectors to top of side units and Knot units. Attach next level of Knot units using C4 Connectors as shown.

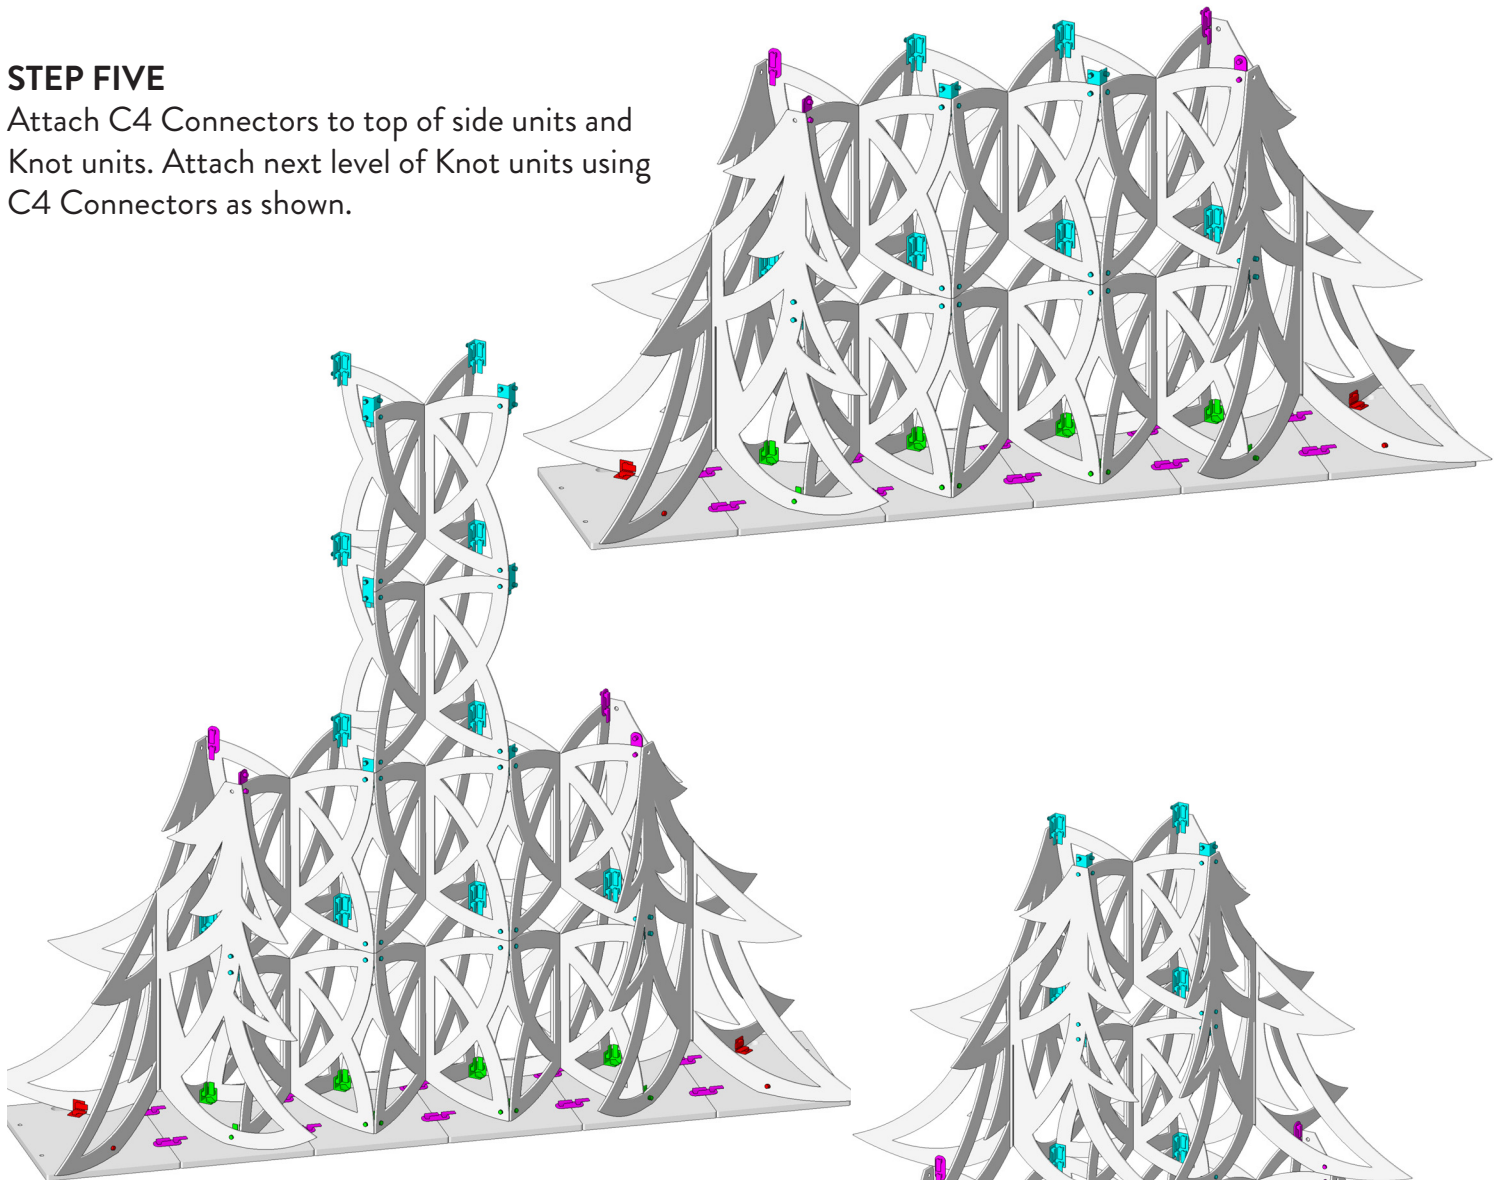

STEP SIX

Attach next level of side units to C4 Connectors. Repeat steps five and six as needed for desired FASTwall Fir size.

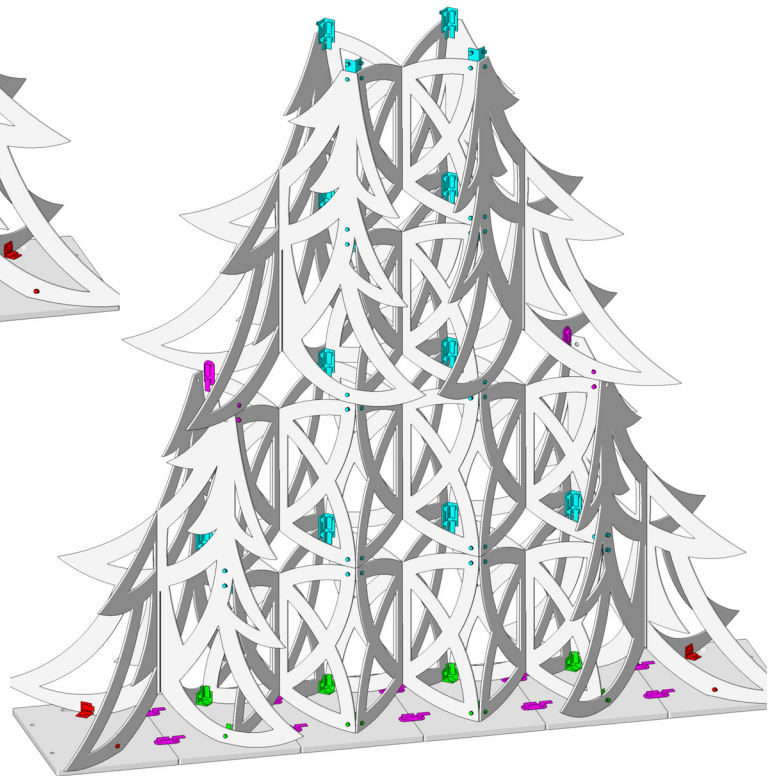

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

STEP SEVEN

Complete FASTwall Fir by connecting parts A and B of top unit together and attaching to C4 Connectors as shown.

