
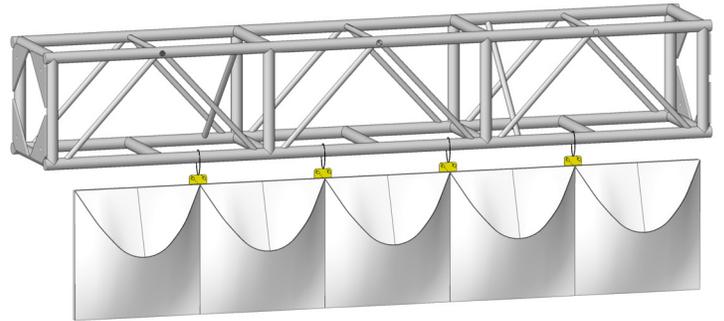


**NOTE:**

- “S-hooks” are not included; SuperLever panels and connectors are designed to work with tieline. Hanging SuperLever panels from covered truss or pipe (i.e., with drape or truss sock) requires “S-hooks” or similar hardware not provided by ATOMIC.

**NOTE:**

- Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.
- For safety and greatest efficiency while building Backdrop, begin with the truss at working height. Gradually raise the truss as you continue to build.


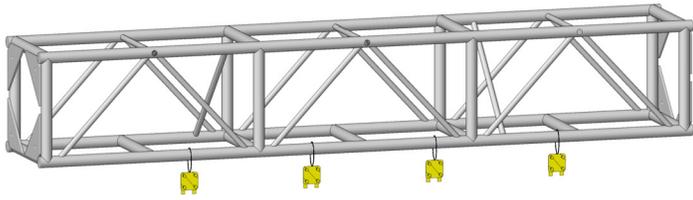


**STEP ONE**

Using tieline attach F4 and F2 connectors to truss.

**STEP TWO**

Attach panels to F4 and F2 connectors tied to truss.

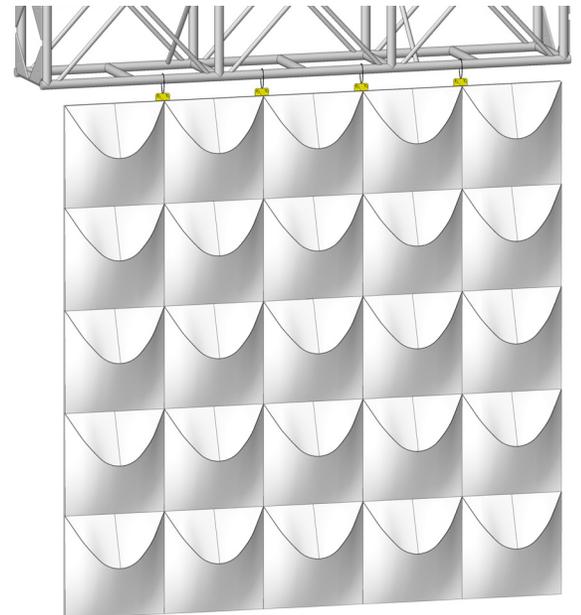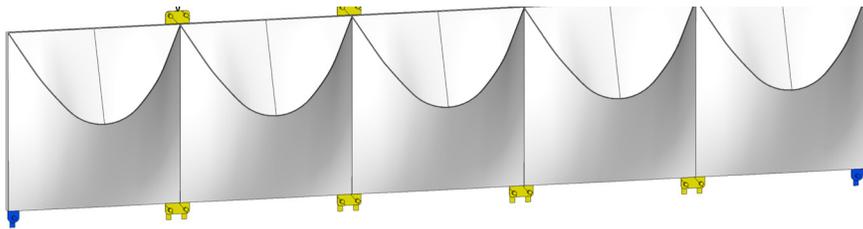

**STEP THREE**

Continue attaching panels and F4 and F2 connectors until desired height is reached. Finish with F2 connectors.

**DISASSEMBLY INSTRUCTIONS:**

Hanging wall **MUST** be disassembled from bottom up, in reverse order as the assembly process. Removal of top panels first may result in a collapsing wall.

Questions about ATOMIC products?  
 Contact your Modular Systems Account Manager!  
[www.atomicdesign.tv/contact](http://www.atomicdesign.tv/contact)