



CLIPS

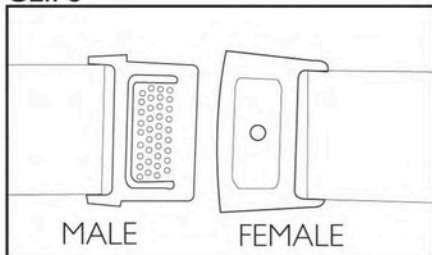


3/4" Binder Rings

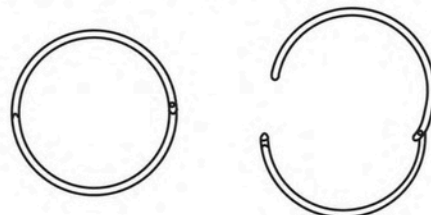


Questions about ATOMIC products? Give us a ring! 717-626-4408


www.atomicdesign.tv

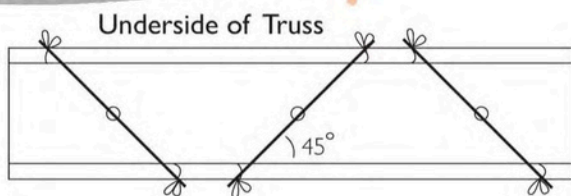


STEP ONE Tie the column start bars to the truss at approx. 45° angle. Alternate the direction across the length of the truss.

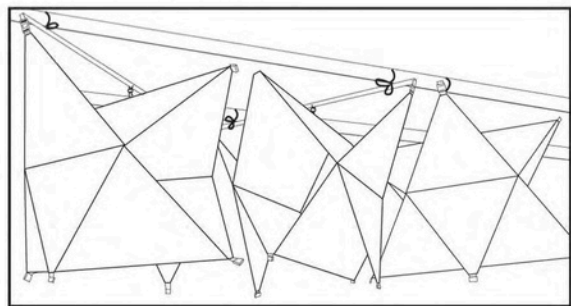

STEP TWO Hang the honeycomb from the column start bar by first attaching the 3/4" binder ring to the d-ring on the honeycomb.

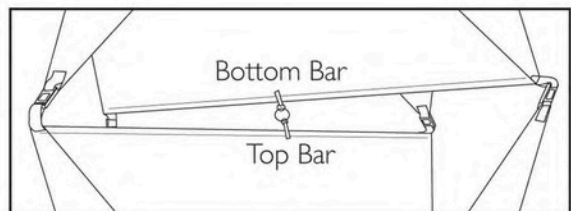

STEP THREE Hold the top bar perpendicular to the column start bar and clip the top triangle side flaps to the column start bar: work horizontally until the entire row of honeycombs is attached, then raise the truss to add the next row.

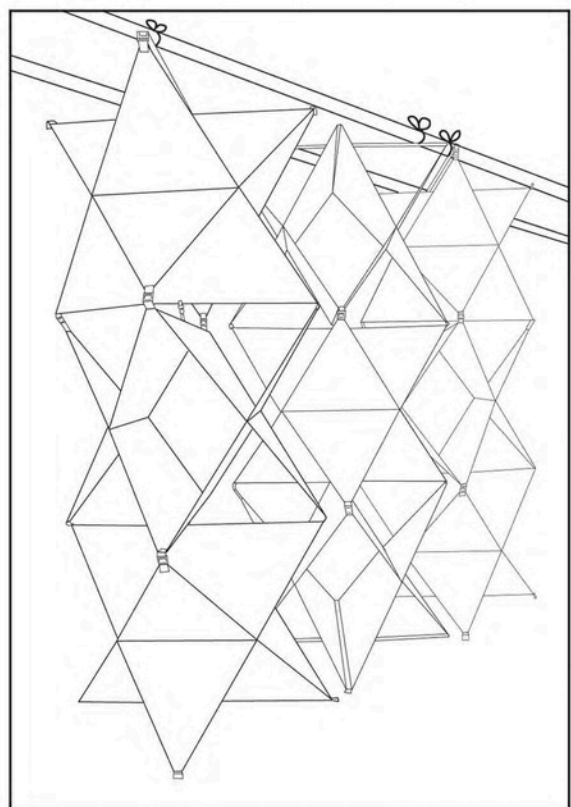

STEP FOUR Hang the next honeycomb in the column by attaching the 3/4" binder ring to the d-ring. Turn the top bar perpendicular to the bottom bar.

STEP FIVE Clip the bottom side flap triangles of the first honeycomb to the top bar of the second honeycomb. Then clip the top side flap Triangles of the second honeycomb to the bottom bar of the first honeycomb.

STEP SIX Continue to attach the honeycombs, alternating their direction by turning the top bar perpendicular to the bottom bar of the one above it.

STEP SEVEN When the desired height is reached attach a column end bar to the bottom two side flap triangles.