


NOTE:

For safety and greatest efficiency while building begin with the truss at working height. Gradually raise the truss as you continue to build.

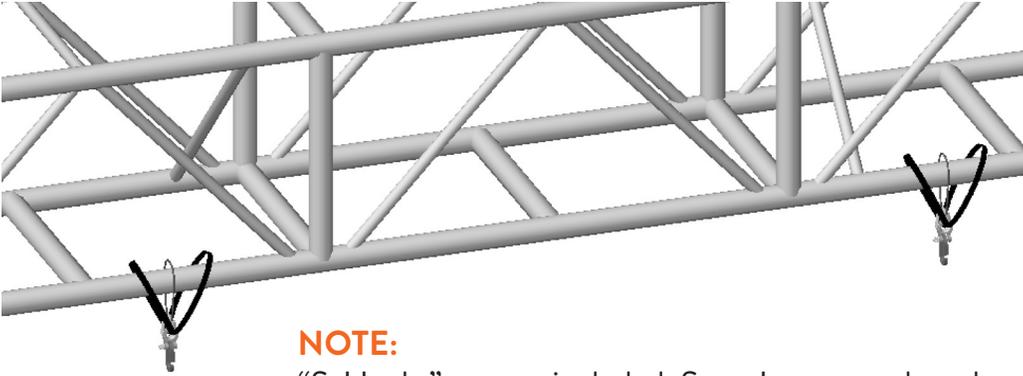

STEP ONE


Tie starting points to pipe or truss using tieline.

NOTE:

“S-Hooks” are not included, SuperLever panels and connectors are designed to work with tieline. Hanging panels from covered truss or pipe (i.e. with drape or truss sock) requires “S-Hooks” or similar and is not provided by ATOMIC.


STEP TWO

Attach O-ring and cable to preferred length.

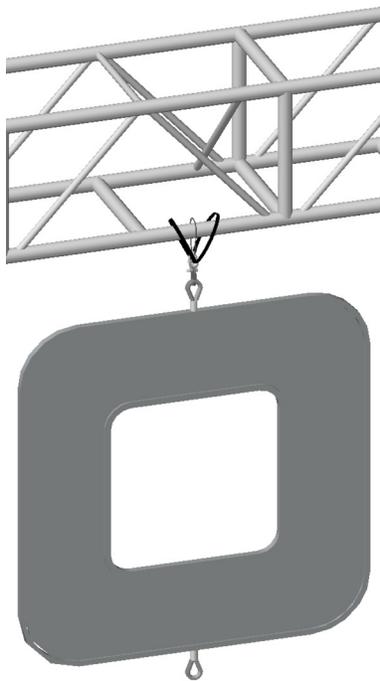

DISASSEMBLY INSTRUCTIONS:

Panels **MUST** be disassembled from bottom up, in reverse order as the assembly process. Removal of top panels first may result in a collapse.

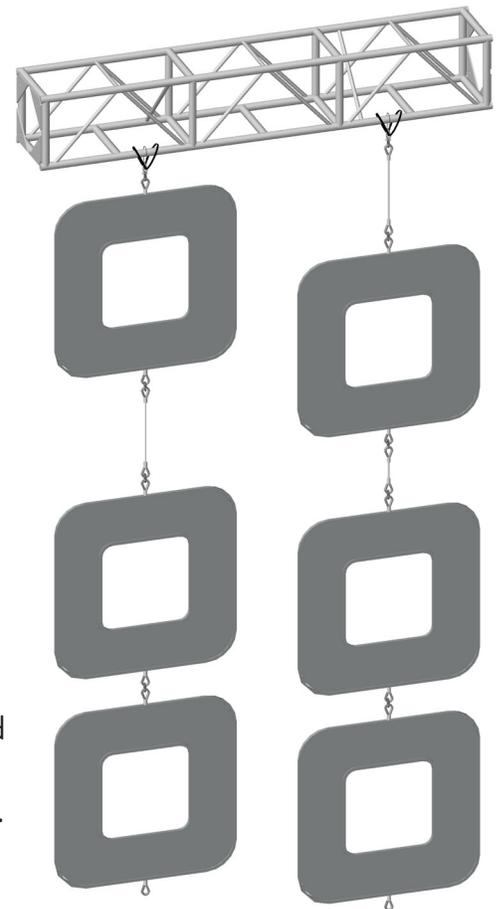

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact