





### STEP ONE

Insert light bulb (60W) into socket.  
Attach globe to hub.  
Rig chandelier stem to rated rigging point.

### STEP TWO


Attach arm using these steps:  
Insert upper tab into upper stem slot and pivot toward stem to align with lower slot.  
Drop lower tab into lower slot as shown.

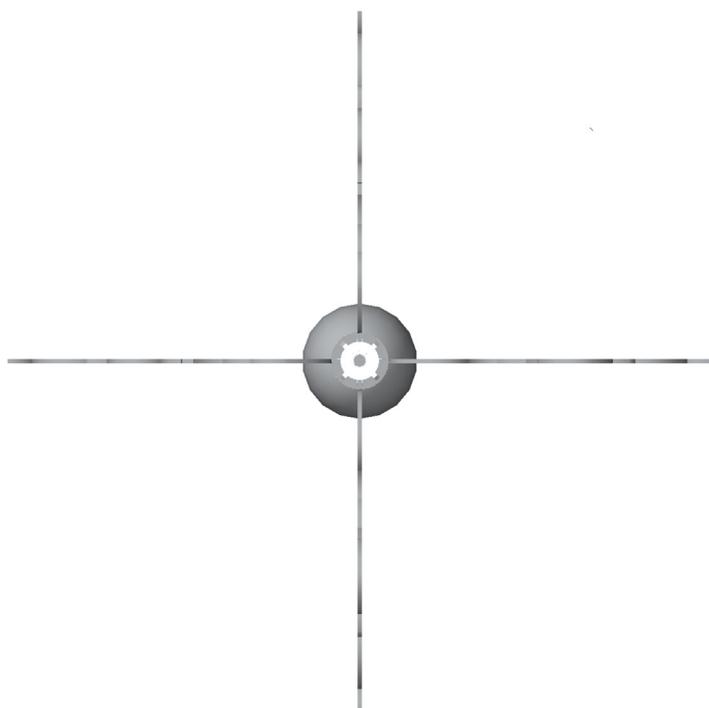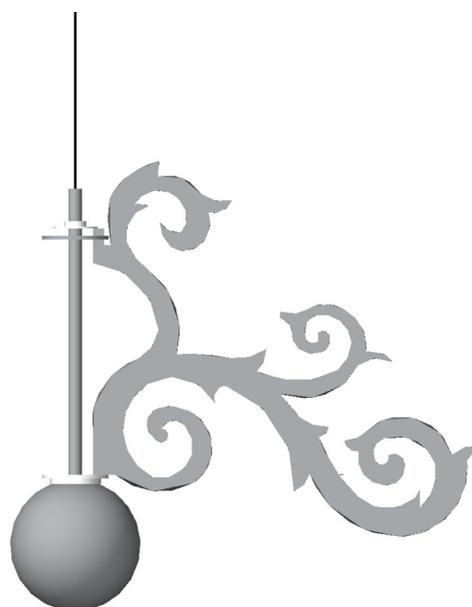

### STEP THREE

Repeat step 2 for each chandelier arm  
starting with the four arms shown here.

Questions about ATOMIC products?  
Contact your Modular Systems Account Manager!  
[www.atomicdesign.tv/contact](http://www.atomicdesign.tv/contact)

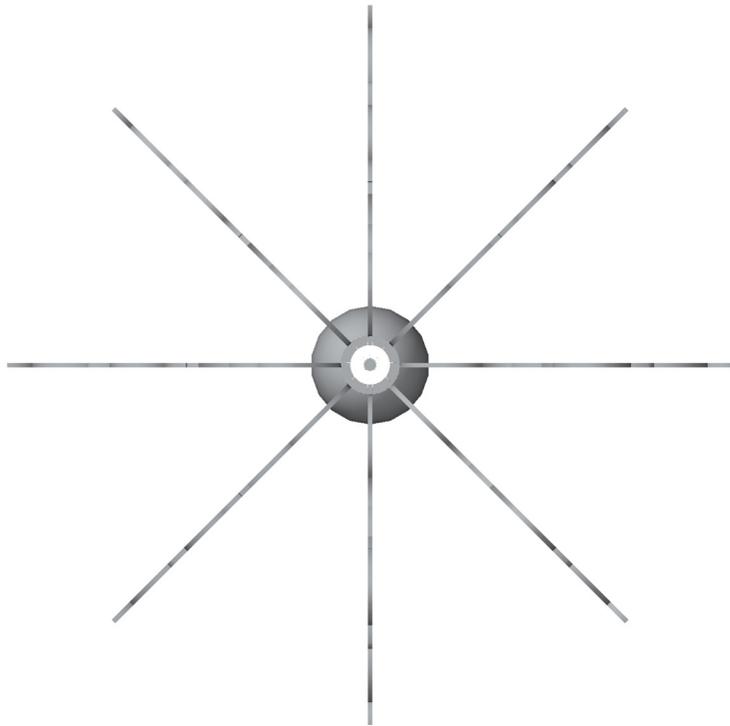

### STEP FOUR

Repeat step 2 with the remaining four legs as shown. Once attached lower keeper plate and lock to secure arms in place.

### STEP FIVE

Plug in electrical to desired outlet. Fly chandelier to desired trim height.



Questions about ATOMIC products?  
Contact your Modular Systems Account Manager!  
[www.atomicdesign.tv/contact](http://www.atomicdesign.tv/contact)