


MODULAR SYSTEMS POPPIES HANGING

F=FEMALE M=MALE

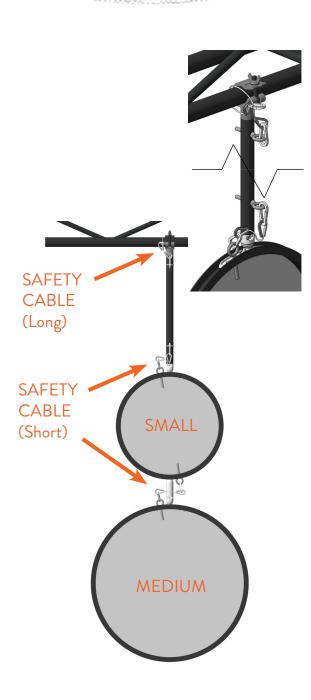


NOTE

The final Poppy will have no female connection point on bottom.


STEP ONE

Attach the hanging clamp to truss. Hand tighten the wing nut on the clamp. Insert the male end of the pole into the female connection point on the hanging clamp. Attach a safety cable (long) to the clamp and pole wrapping around the truss. Twist until you hear the click, indicating a secure connection.

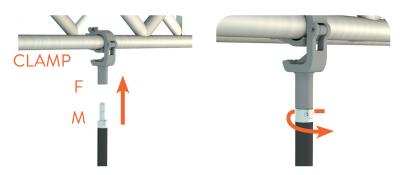

STEP TWO

Insert the male end of the Poppy (or another pole) into the end of pole attached to the base. Twist until you hear the click, indicating a secure connection. Repeat until you have your desired configuration. Attach a safety cable (short) to the eyebolts in each connecting piece.

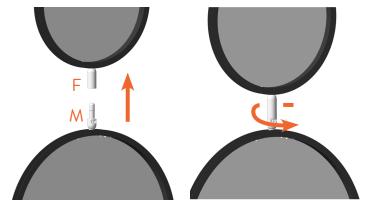

STEP THREE

Insert the male end of the final Poppy into the female connection point. Twist until you hear the click, indicating a secure connection. Attach a safety cable (short) to the eyebolts in each connecting piece.


Questions about ATOMIC products? Contact your Modular Systems Account Manager! www.atomicdesign.tv/contact

MODULAR SYSTEMS



BASE ADAPTER INSTALLATION INSTRUCTIONS

POPPIES

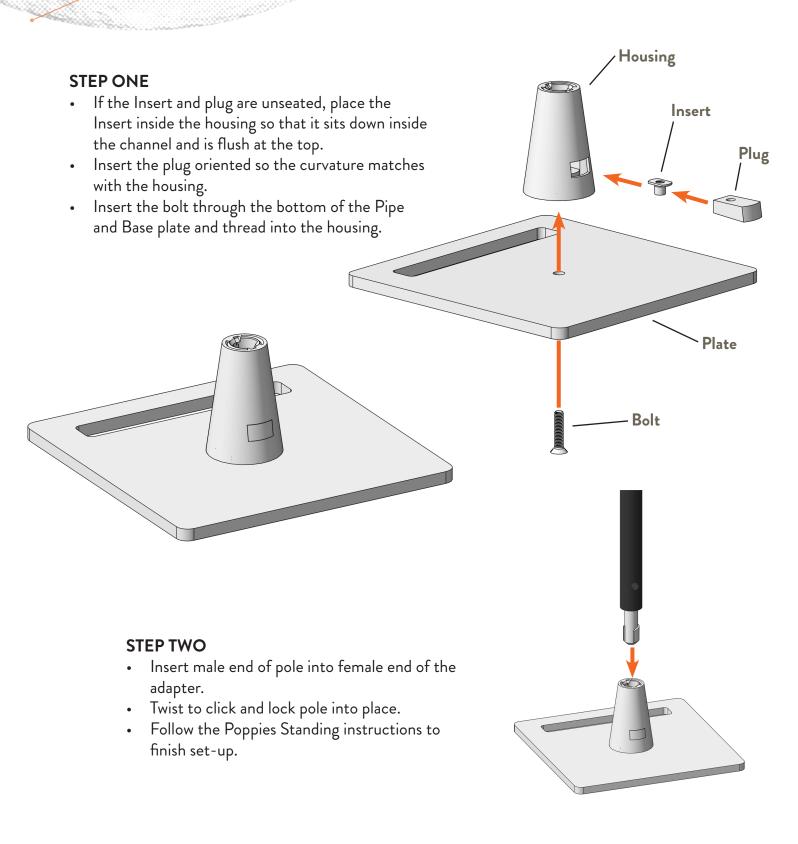

Questions about ATOMIC products? Contact your Modular Systems Account Manager! www.atomicdesign.tv/contact



MODULAR SYSTEMS POPPIES STANDING


F=FEMALE M=MALE


STEP ONE

Insert the male end of the pole into the connection point on the base.

OR

Bolt the pipe & base adapter to the pipe & base plate. Insert the male end of the pole into the adapter. Twist until you hear the click, indicating a secure connection. (See Adapter Instruction Sheet)

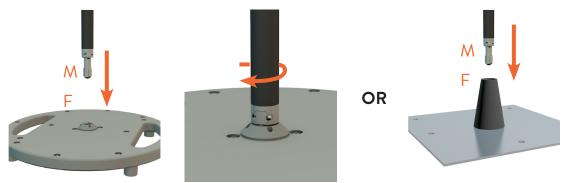

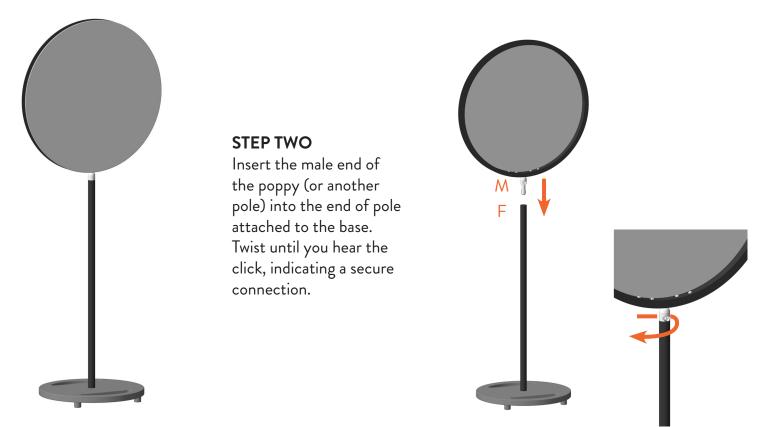

Questions about ATOMIC products? Contact your Modular Systems Account Manager! www.atomicdesign.tv/contact