
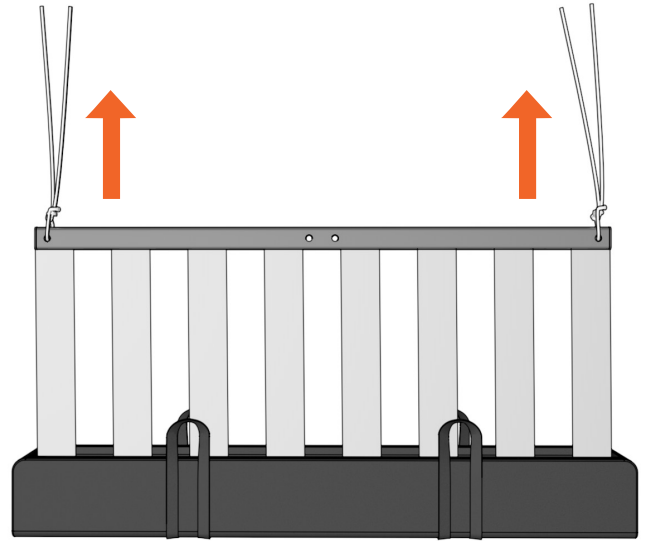



STEP ONE

Arrange StretchSet bags directly under rigging points. Unzip top panel.

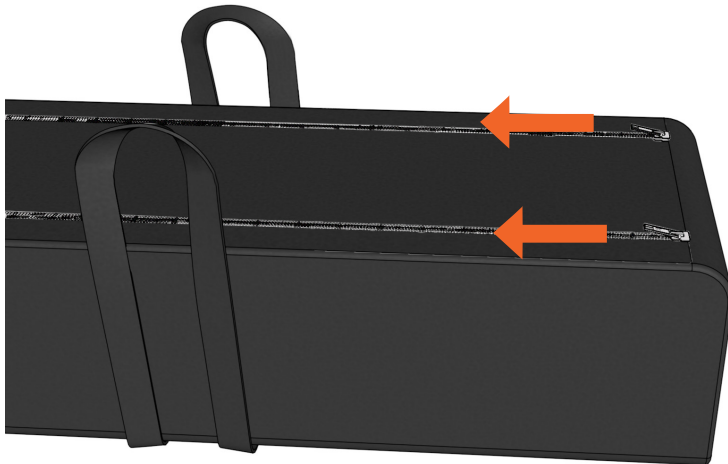

STEP TWO


Attach top bar of StretchSet panel to rigging using tieline or SuperLever connectors if using with SuperLever panels.

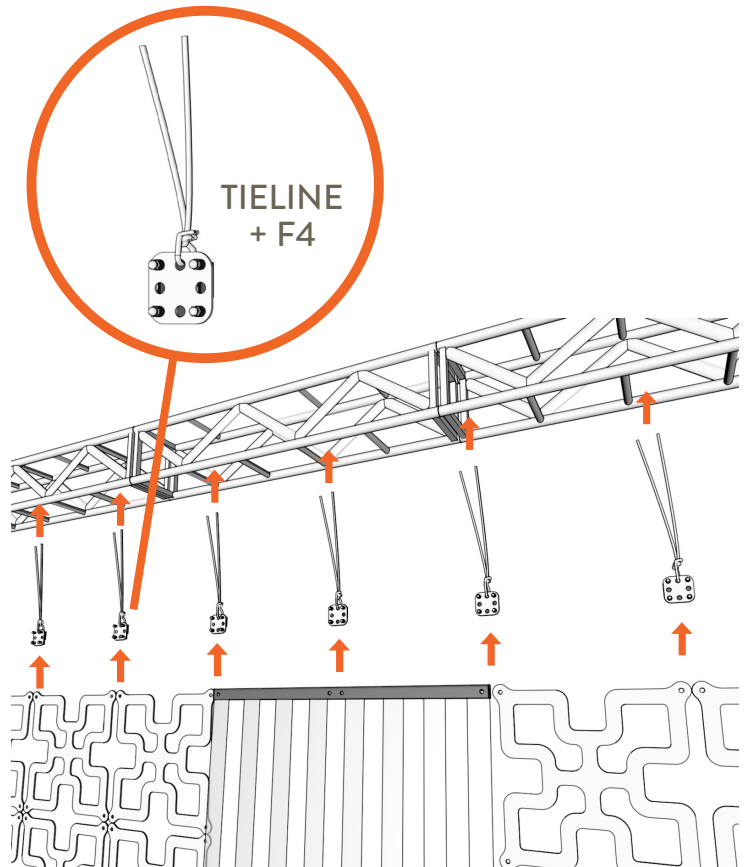

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

STEP THREE

Zip back (upstage) side of StretchSet bag and tuck cover inside.

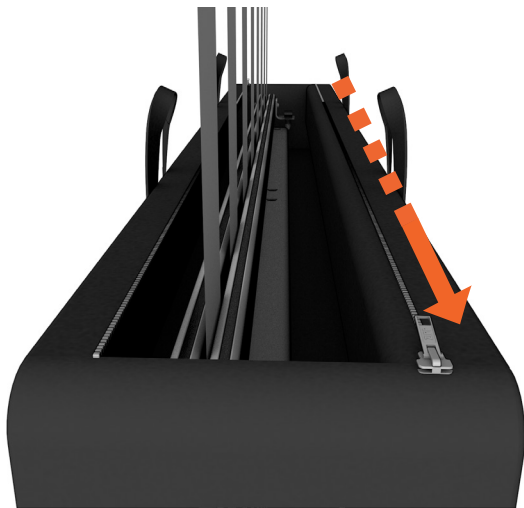


STEP FOUR

Raise tension bar 1'-2' from bag.

NOTE:


Do not over-stretch StretchSet panels. Only stretch fabric enough to remove slack.

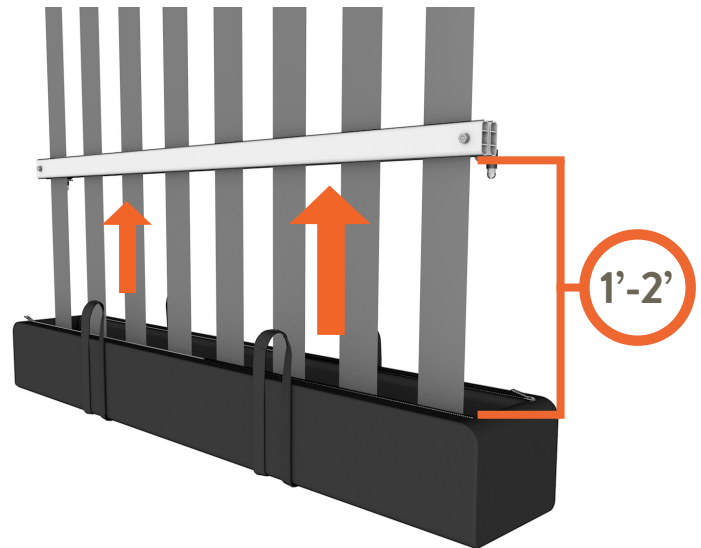

STEP FIVE

Roll tension bar 360° forward (such that connectors rotate over tension bar, then under).

Pull tension down and attach swell latches to base inside bag.

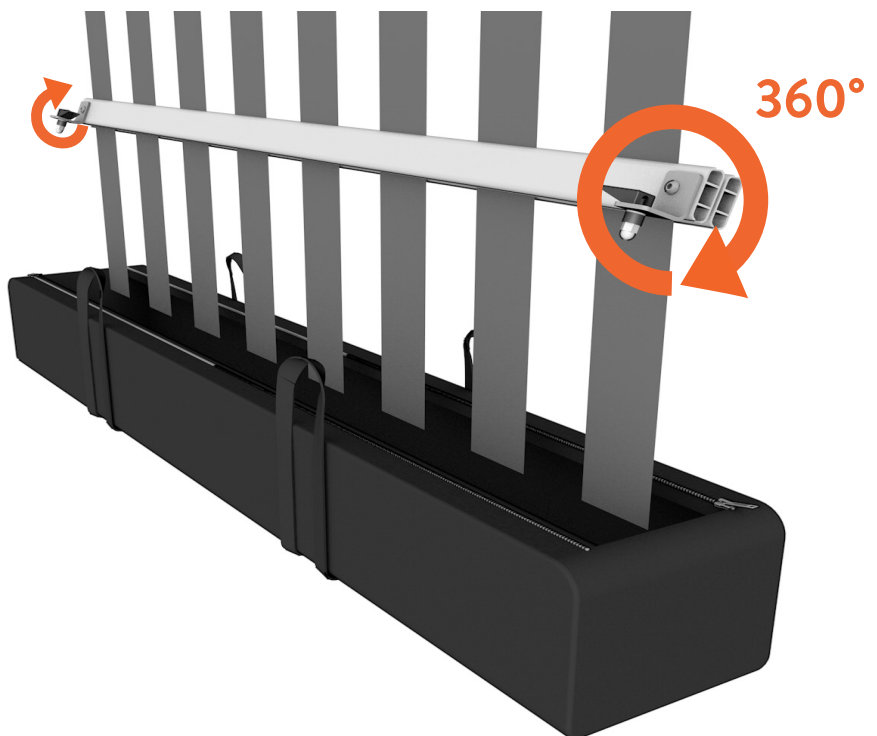



STEP SIX



Dress StretchSet bags by tucking excess fabric into bag and tucking handles into stuff straps as shown. Roll StretchSet bag onto its side for a cleaner front.

STEP SEVEN

Raise rigging to desired height and position StretchSet bases as desired.

NOTE:

Do not exceed maximum linear stretch noted in product spec sheets.

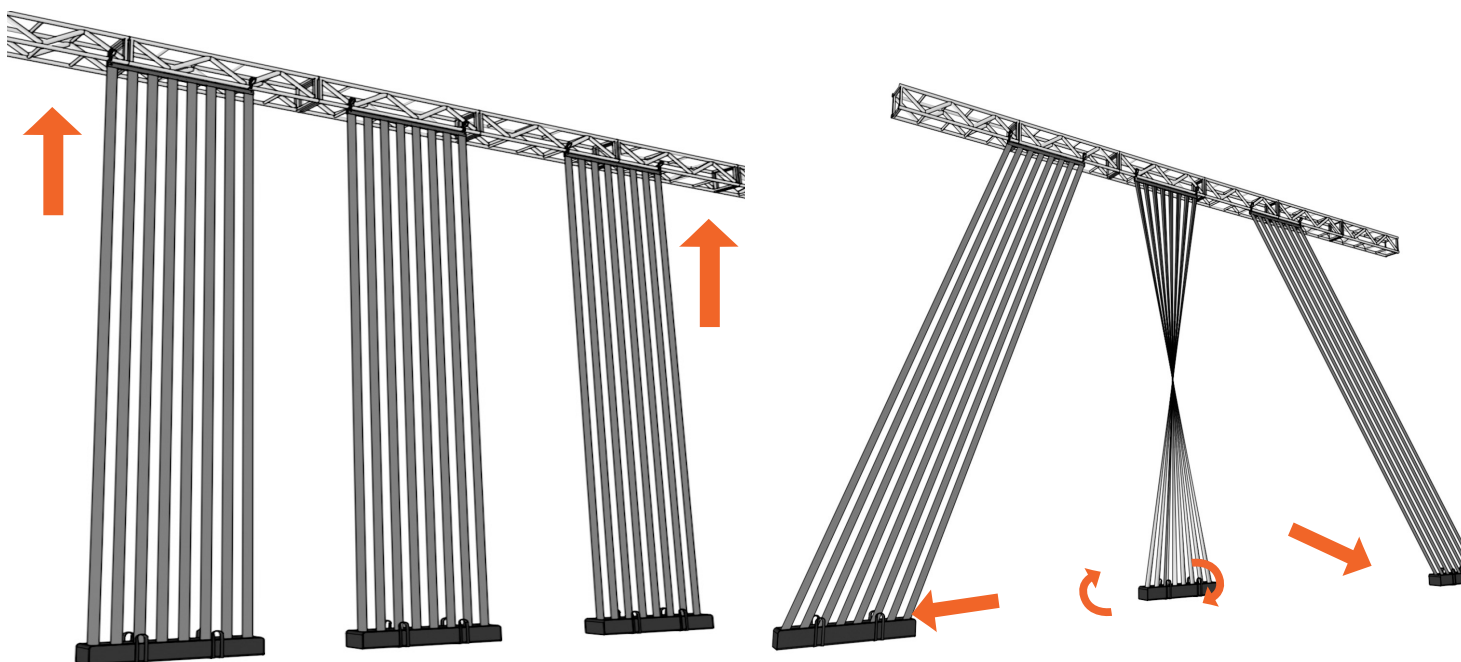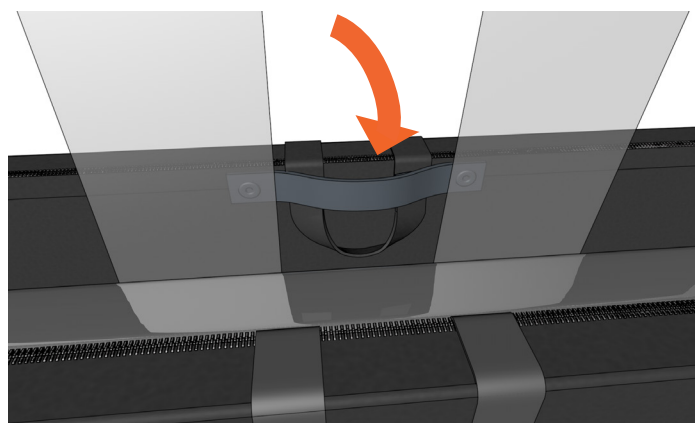

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact