


NOTE:

Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.


STEP ONE

- Align SuperShape bases with handles facing the back of the SuperShape, and white feet facing down.
- Connect bases together using C4 connectors as shown.
- Attach C2 connectors.

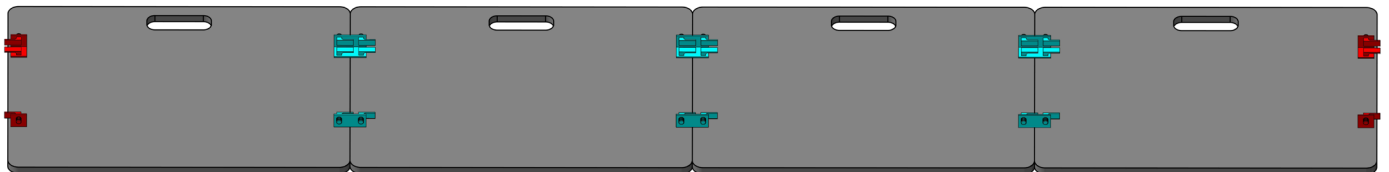


STEP TWO

- Attach SuperShape riser panels.
- Attach C2, C4 and dogbone connectors as shown.

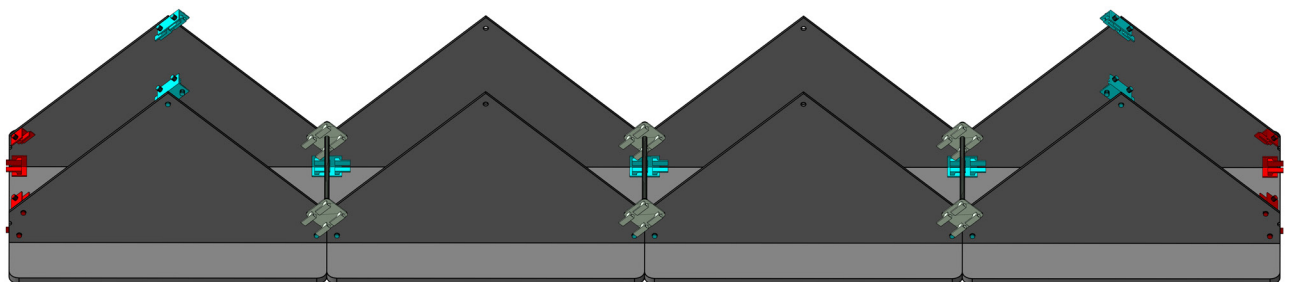


STEP THREE

- Attach half panels to C2 and C4 connectors from previous step.

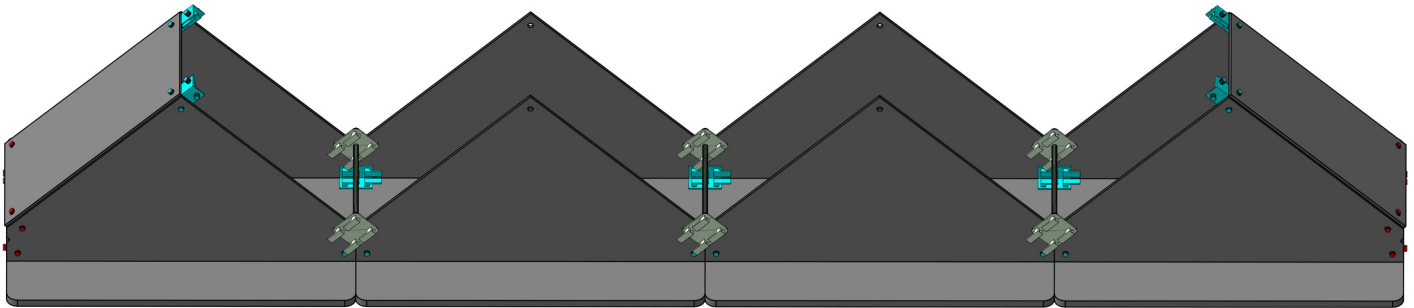


STEP FOUR

- Attach SuperLever Panels to front and back.
- Attach Dogbones and C4 Connectors as shown.

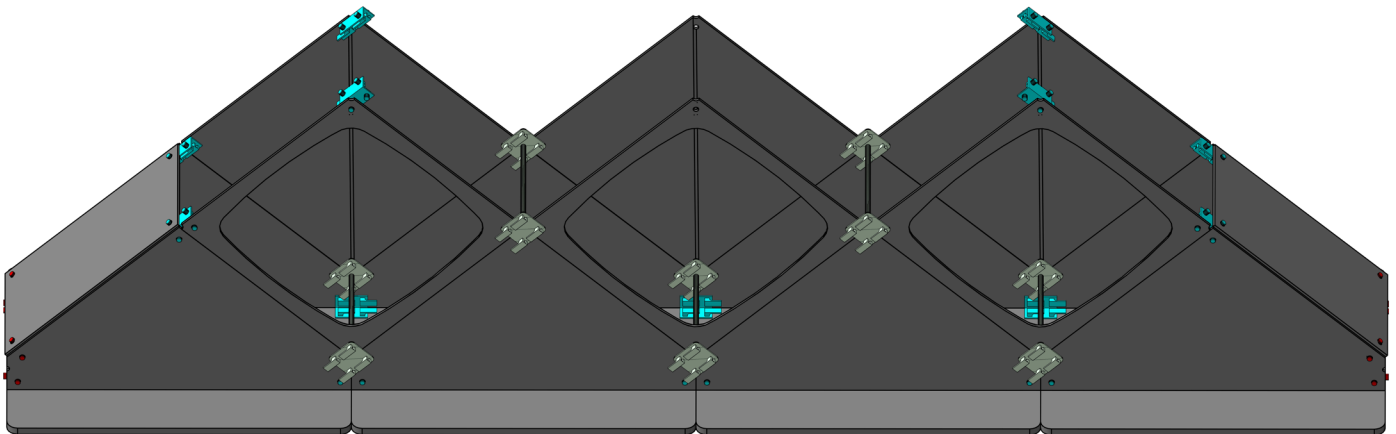


STEP FIVE

- Repeat Steps THREE and FOUR working your way to the center top of the SuperShape.

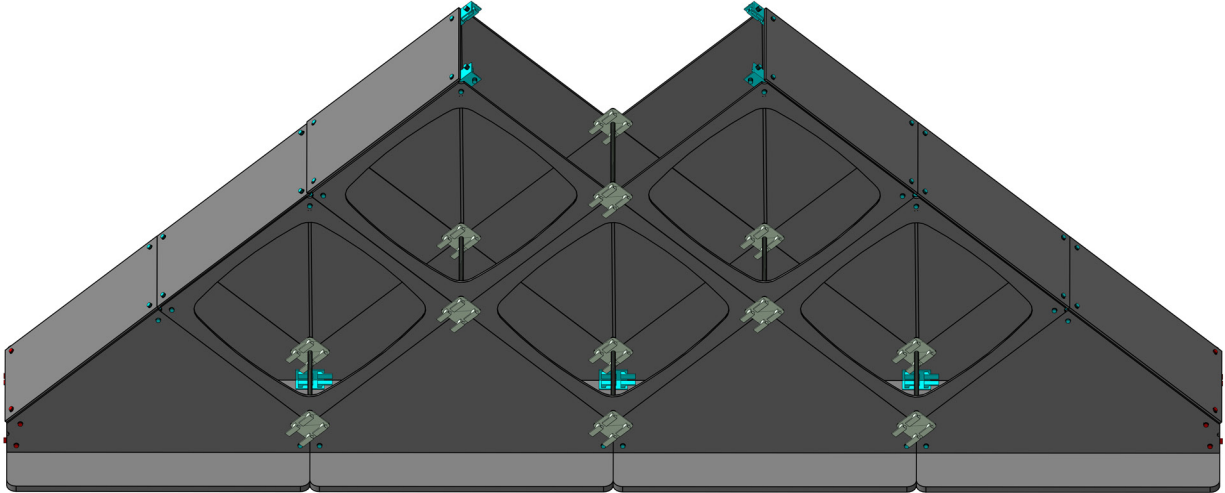

STEP SIX


- Attach the final SuperLever Panels to the front and back.
- Attach C3 connectors at the very top as shown.

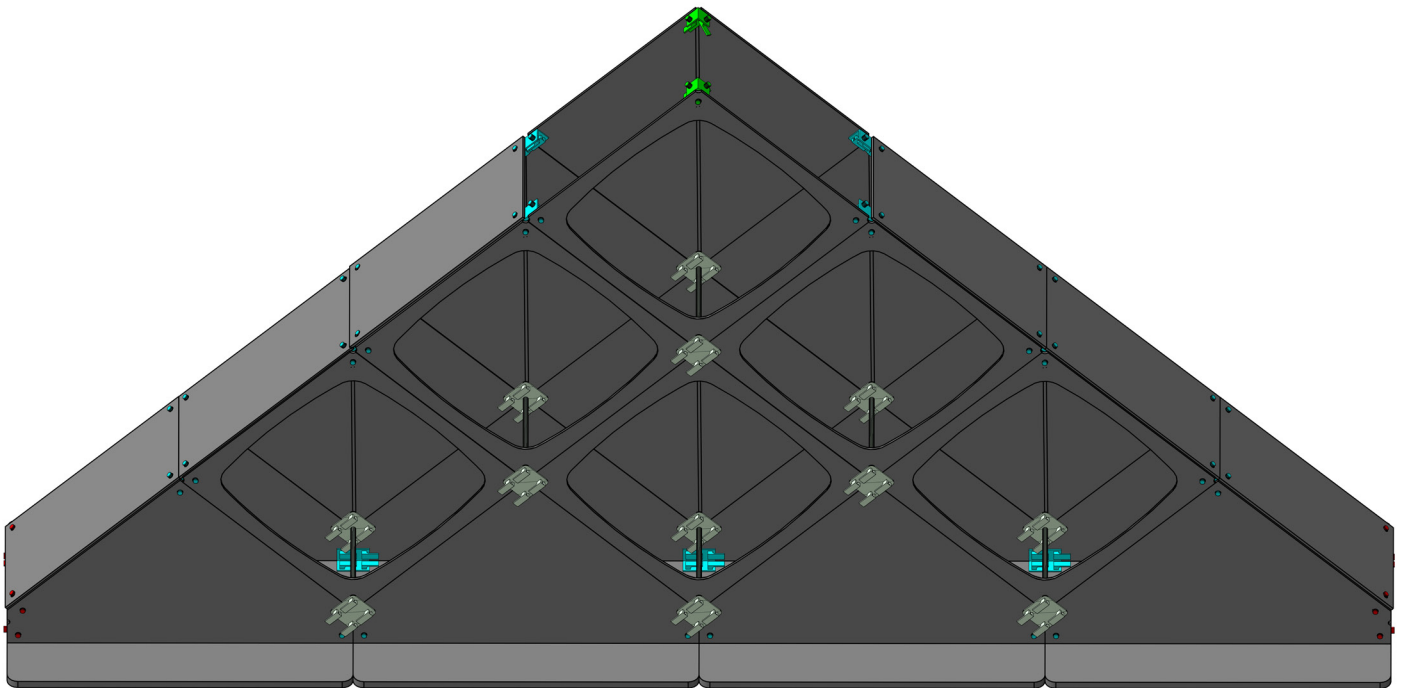

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

STEP SEVEN

- Attach the final half panels onto the top sides of the SuperShape.
- Ensure structure is stable before repositioning.

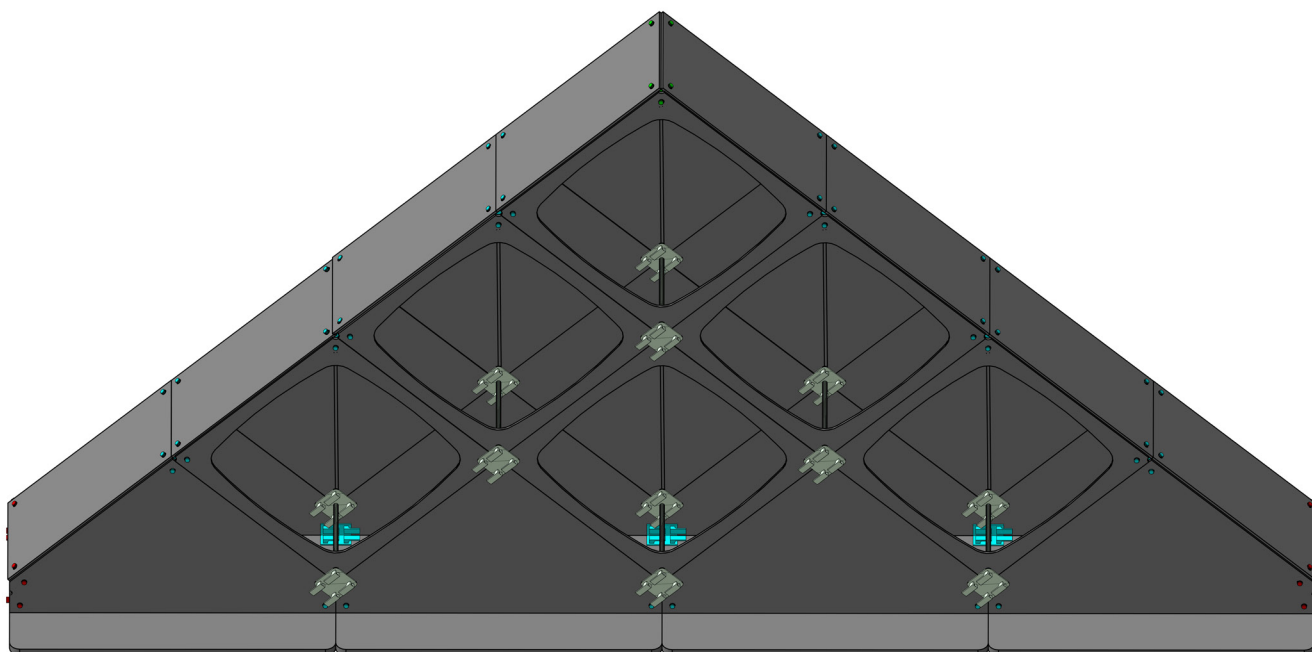

DISASSEMBLY INSTRUCTIONS:


SuperShape *MUST* be disassembled from top down, in reverse order as the instructions listed. Removal of bottom panels first may result in toppling of the SuperShape.

NOTE:

Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.

STEP ONE

- Align SuperShape bases with handles facing the back of the SuperShape, and white feet facing down.
- Connect bases together using C4 connectors as shown.
- Attach C2 connectors.

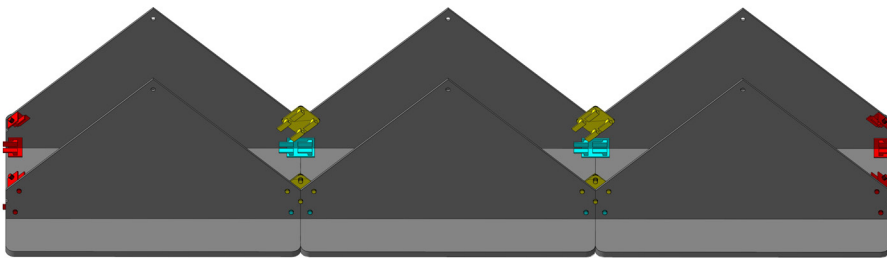



STEP TWO

- Attach SuperShape riser panels.
- Attach C2 and F4 connectors as shown.

STEP THREE

- Attach Half panels to C2 Connectors.
- Attach C5 Connectors to side where arrow will be pointing, and C4 connectors on the other side.
- Attach a dogbone connector in the center.
- Attach SuperLever Panels to front and back.

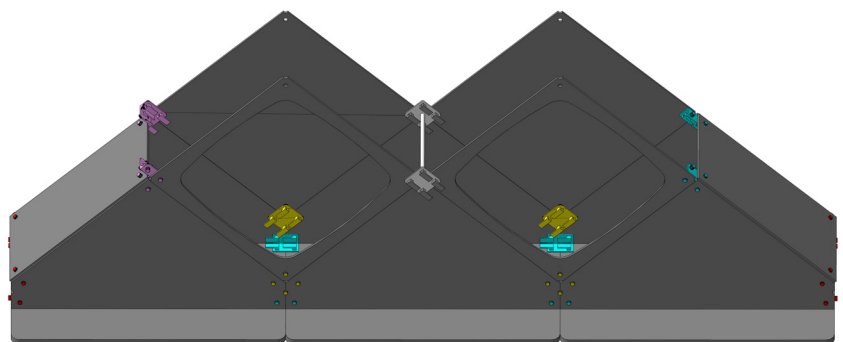


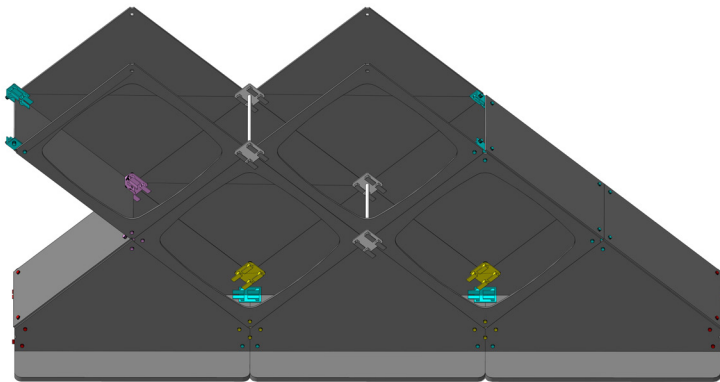


STEP FOUR

- Attach Half Panels to the C5 and C4 connectors placed in STEP THREE.
- Attach SuperLever Panels to front and back.
- Attach C4 Connectors as shown.
- Attach Dogbone Connector in the center.


STEP FIVE

- Attach Half panels to the C4 connectors placed in STEP FOUR.
- Attach C3 connectors to create the point of the Arrow.
- Attach Dogbone Connector in the center. Attach C5 Connectors to create the return of the Arrow.
- Attach SuperLever Panels to front and back.

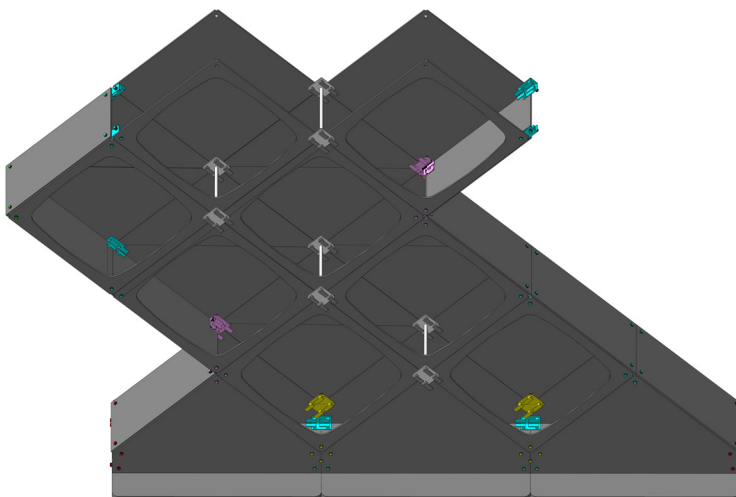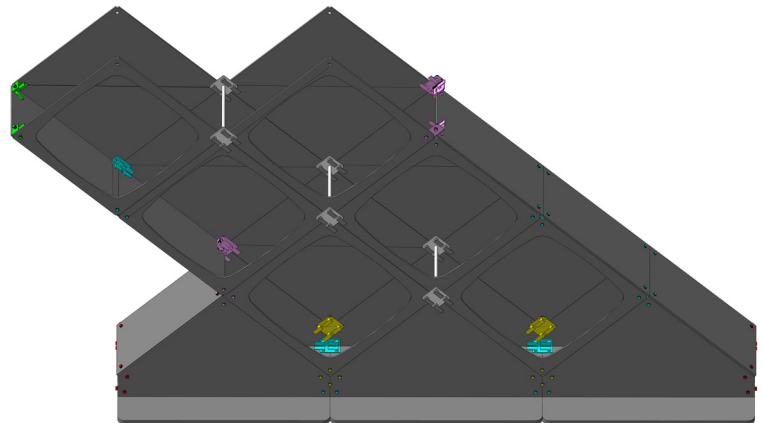

STEP SIX

- Attach Half Panel's to the C5 and C3 connectors placed in STEP FIVE.
- Attach C4 Connectors to the Half panels.
- Attach SuperLever Panels as done previously.
- Attach Dogbone Connector in the center.

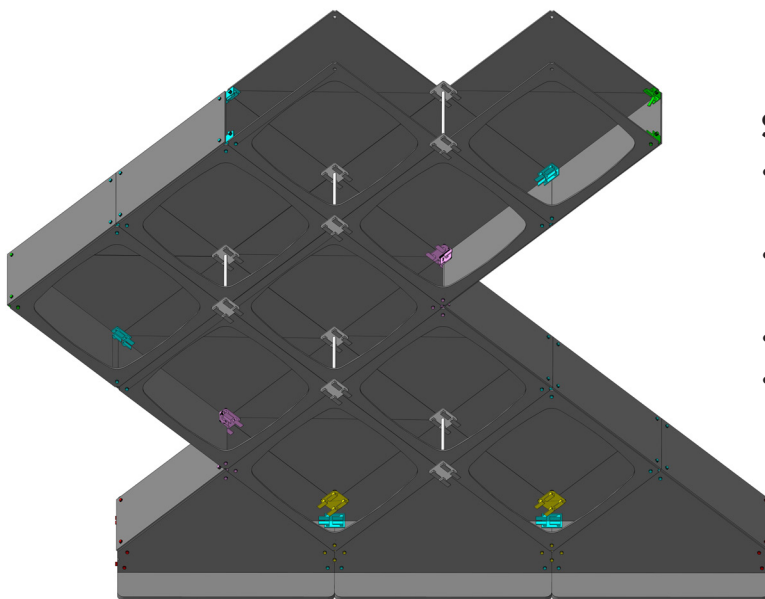


STEP SEVEN

- Attach Half panels to the C4 connectors placed in STEP SIX.
- Attach C4 & C3 Connectors to the Half panels.
- Attach SuperLever Panels as done previously.
- Attach Dogbone Connector in the center.


STEP EIGHT

- Attach Half Panel's to the C4 and C3 connectors placed in STEP SEVEN.
- Attach C4 Connectors to the Half panels.
- Attach SuperLever Panels as done previously.
- Attach C3 Connectors to the top of the Arrow.

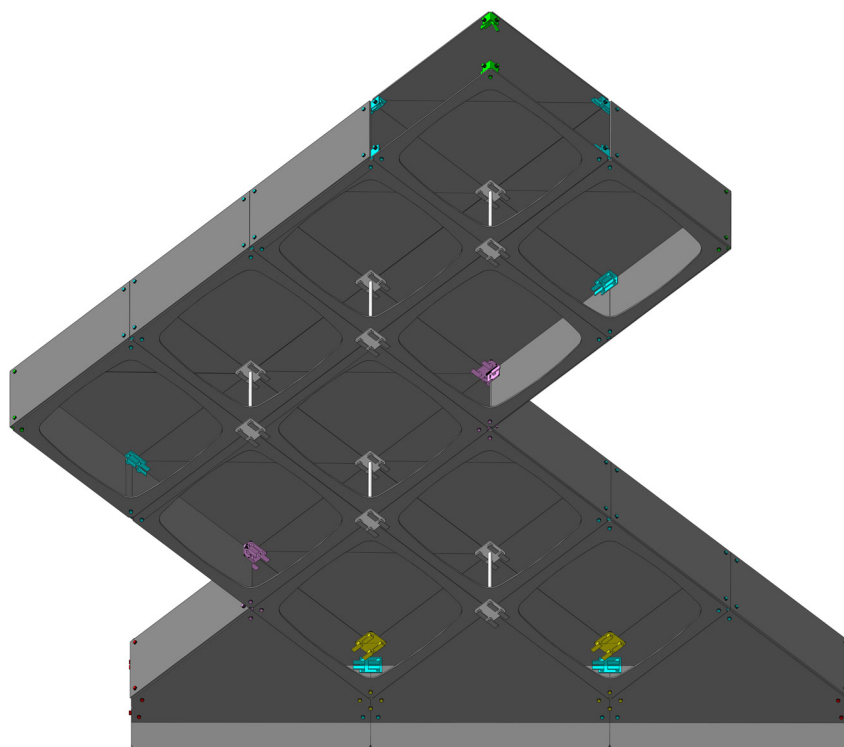

STEP NINE

- Attach the final Half panels onto the top sides of the SuperShape Arrow.
- Ensure structure is stable before repositioning.

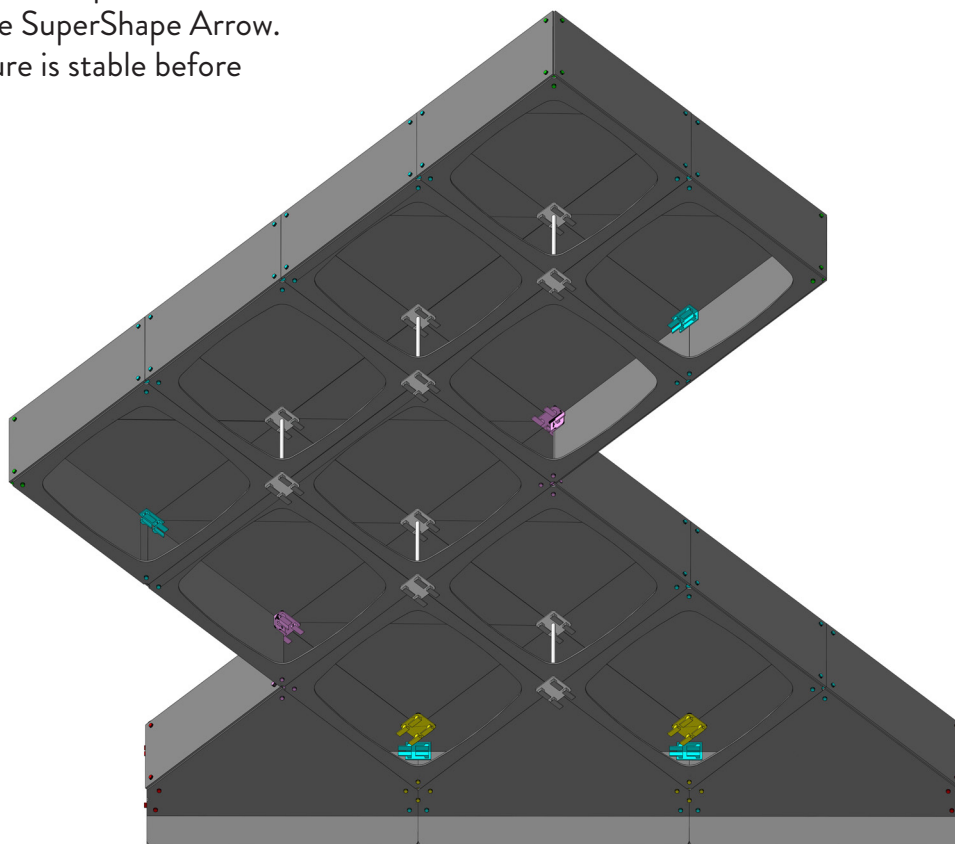

DISASSEMBLY INSTRUCTIONS:



SuperShape *MUST* be disassembled from top down, in reverse order as the instructions listed. Removal of bottom panels first may result in toppling of the SuperShape.

NOTE:

Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.

STEP ONE

- Align SuperShape bases with handles facing the back of the SuperShape, and white feet facing down.
- Connect bases together using C4 connectors as shown.
- Attach C2 connectors.

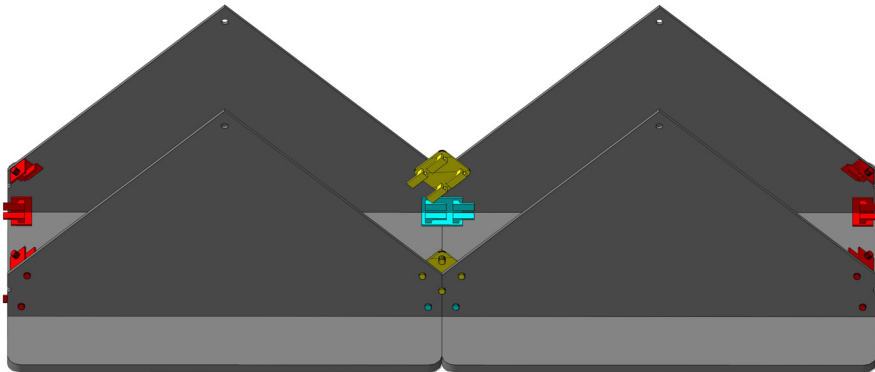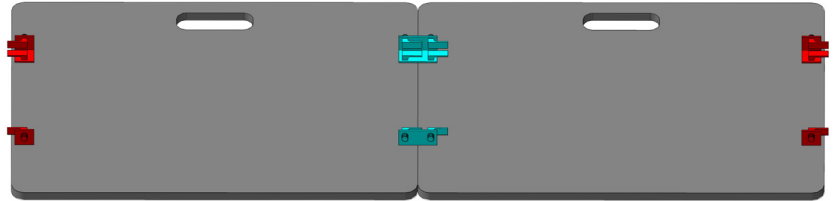



STEP TWO

- Attach SuperShape riser panels.
- Attach C2 and F4 connectors as shown.

STEP THREE

- Attach half panels to C2 Connectors.
- Attach C5 Connectors to side where arrow will be pointing, and C4 connectors on the other side.
- Attach SuperLever Panels to front and back.

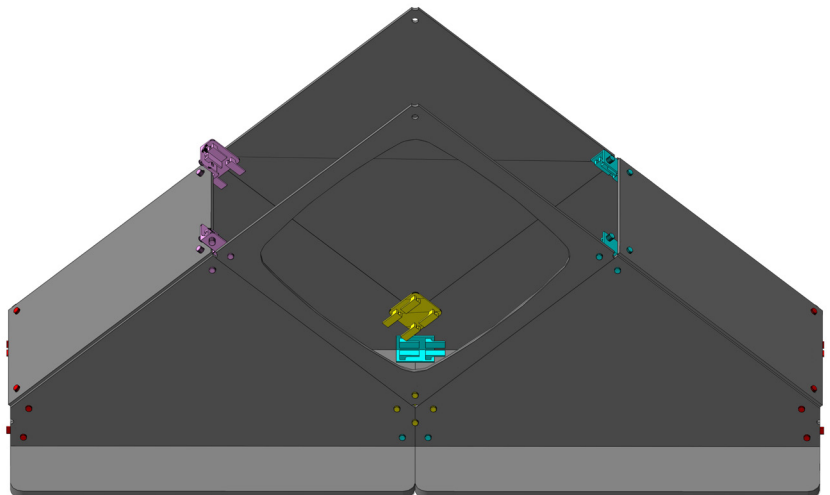

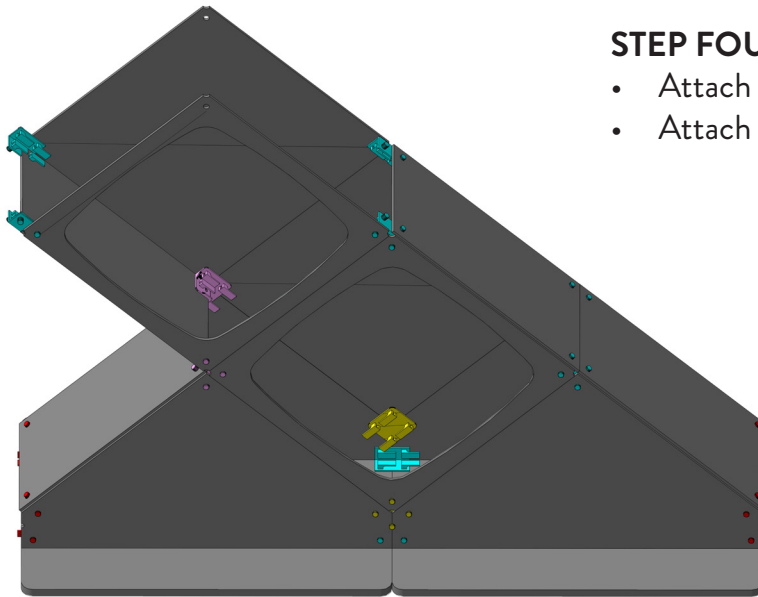


STEP FOUR

- Attach SuperLever Panels to front and back.
- Attach C4 Connectors as shown.



STEP FIVE

- Attach half panel on top of panels placed in STEP FOUR.
- Attach C5 Connectors to create the return of the Arrow.
- Attach SuperLever Panels to front and back.
- Attach C3 connectors to create the point of the Arrow.

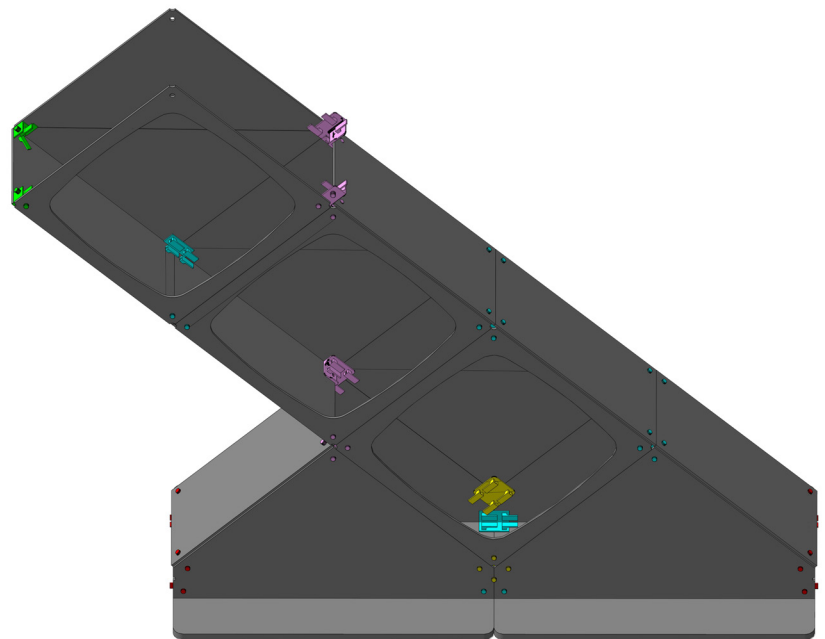


STEP SIX

- Attach a Half Panel on the underside of the Arrow top, and a Half Panel to the top of the C3's.
- Attach C4 Connectors to the half panels.
- Attach SuperLever Panels as done previously.

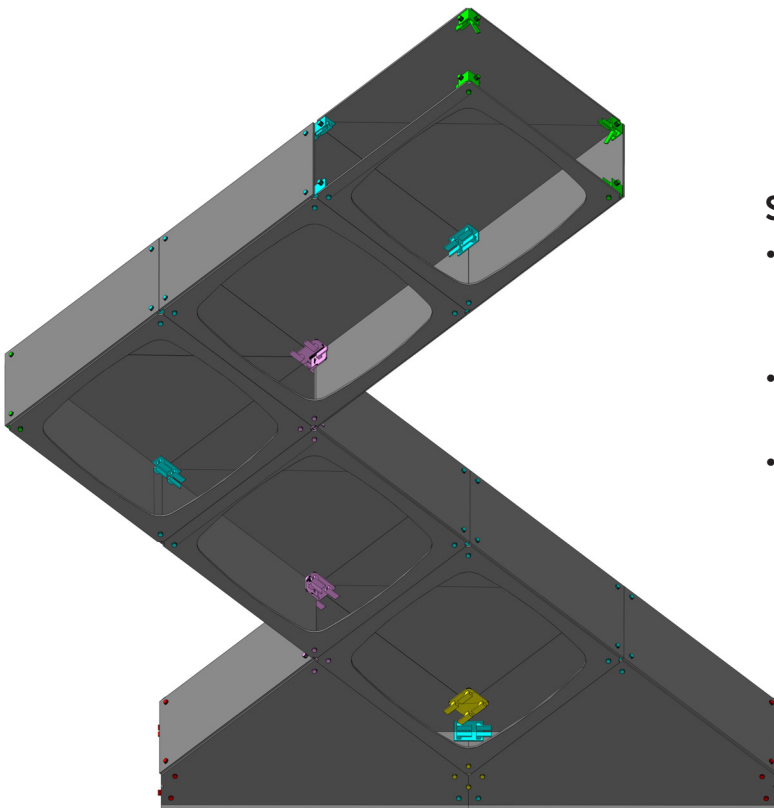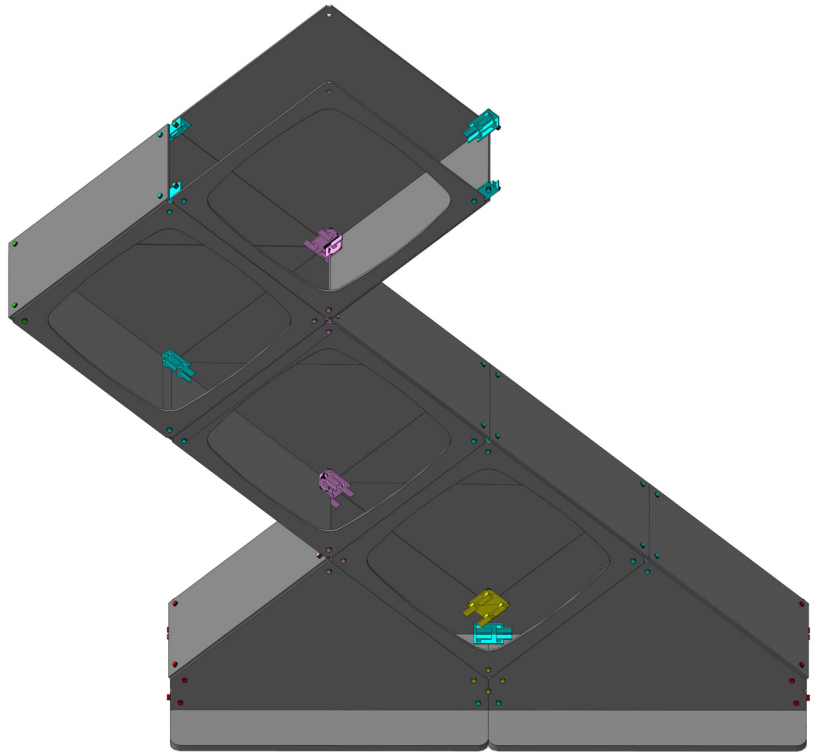

STEP SEVEN

- Attach a Half Panel on the underside of the Arrow top, and a Half Panel to the top of the C4's.
- Attach C4 & C3 Connectors to the half panels.
- Attach SuperLever Panels as done previously.

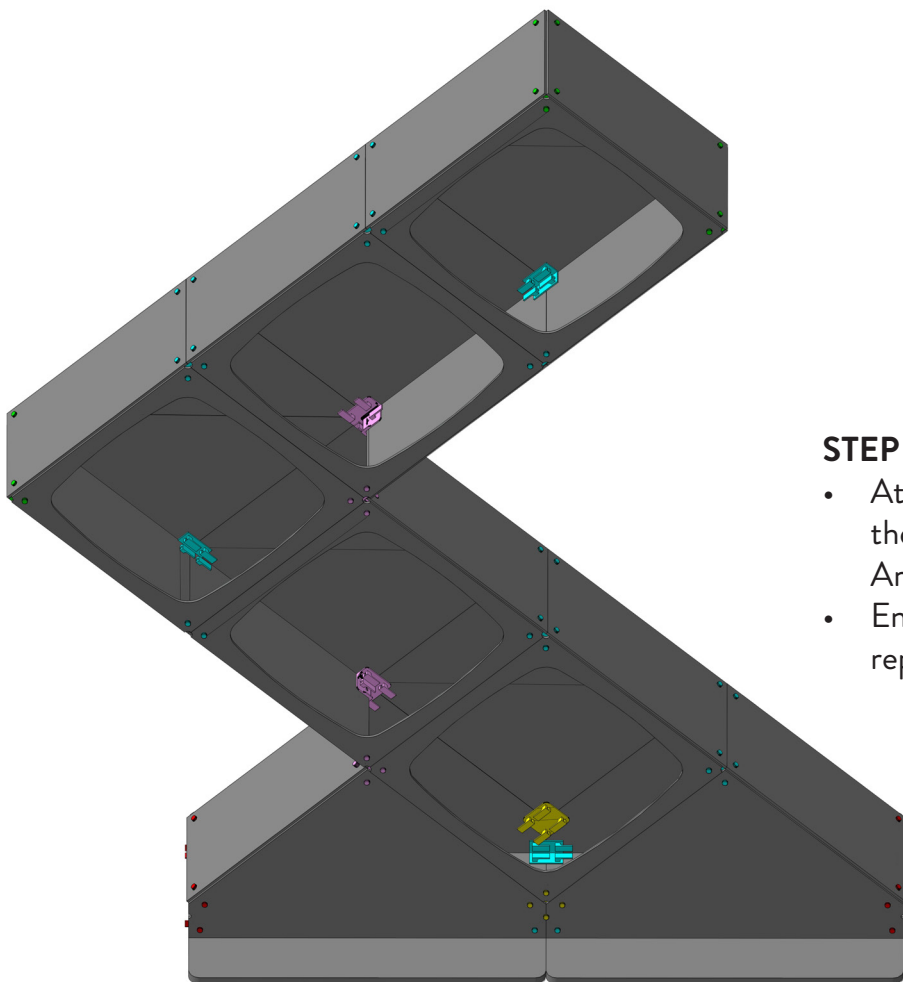

STEP EIGHT

- Attach the final half panels onto the top sides of the SuperShape Arrow.
- Ensure structure is stable before repositioning.

DISASSEMBLY INSTRUCTIONS:

SuperShape *MUST* be disassembled from top down, in reverse order as the instructions listed. Removal of bottom panels first may result in toppling of the SuperShape.