


NOTE:

Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.


STEP ONE

Align bases with handles facing the back of the Superwall, and white feet on the bottom.

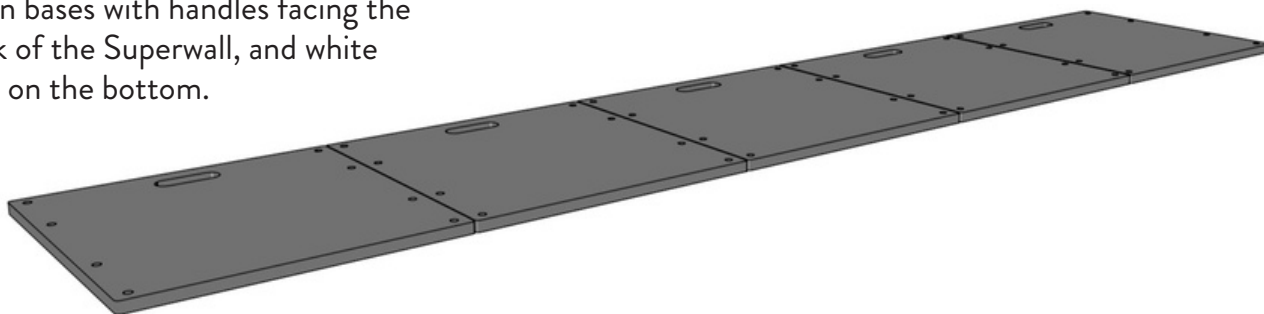

STEP TWO

Connect bases together using C4 connectors as shown. Attach C3 connectors to both ends.

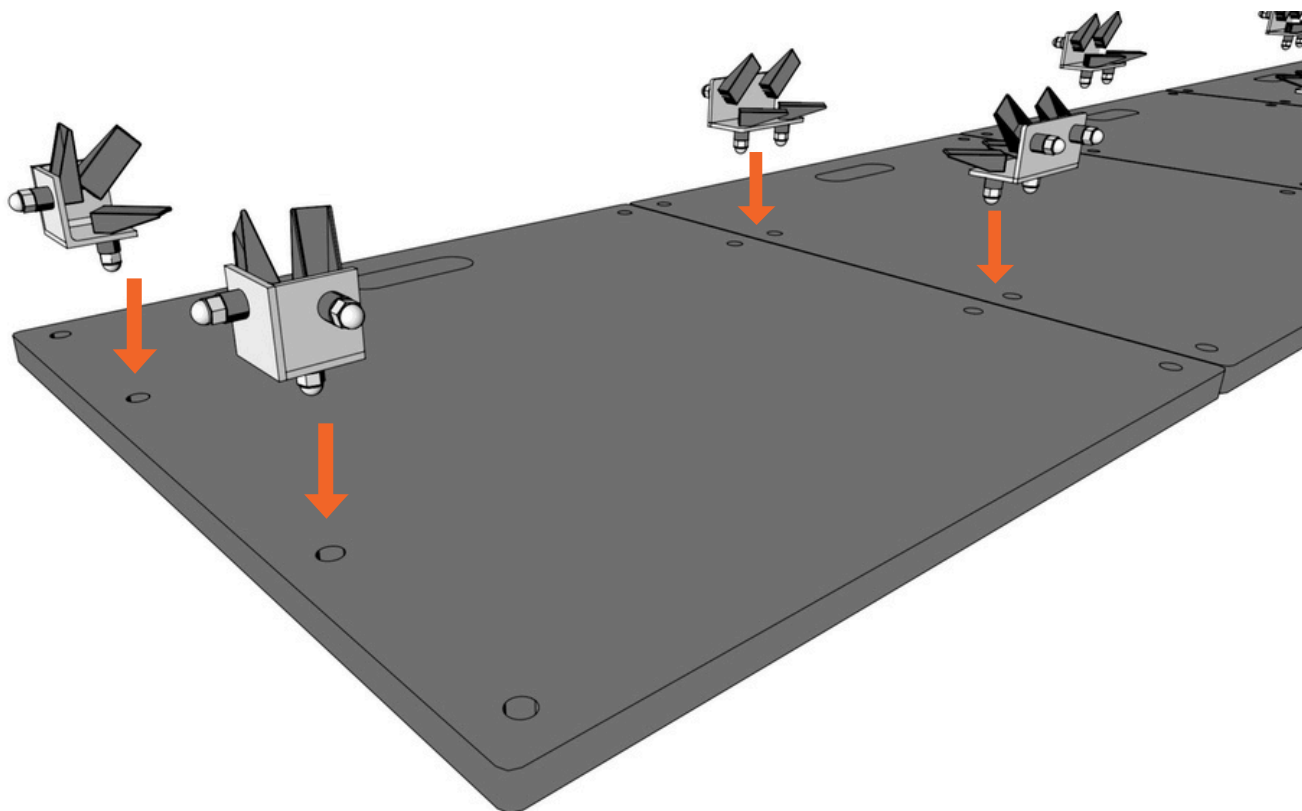


Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

STEP THREE

Attach Superlever panels to C4 and C3 connectors as shown. Attach Half panels to C3 connectors at each end of Superwall.


NOTE:

To add lights inside Superwall use Mousehole panels to allow lighting cables to pass through.

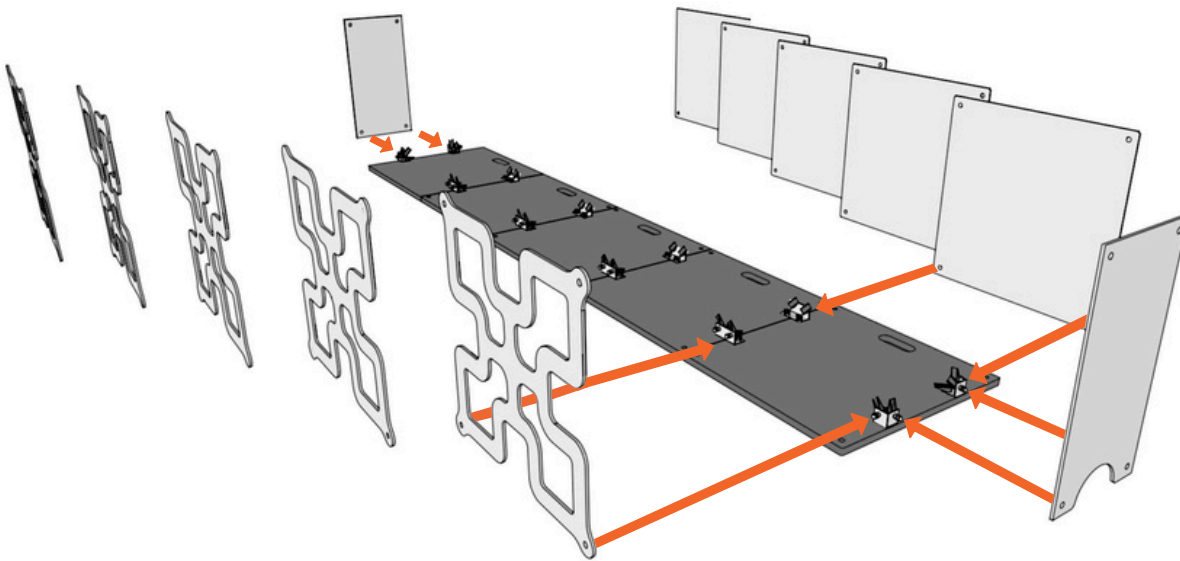


STEP FOUR

Connect Superlever panels and Half panels using C4 connectors at each end. Connect the front and back of the Superwall using Dogbone connectors. Continue attaching Superlever panels, Half panels, C4 and Dogbone connectors for each row of the Superwall. Note orientation of panels to build according to designed pattern.

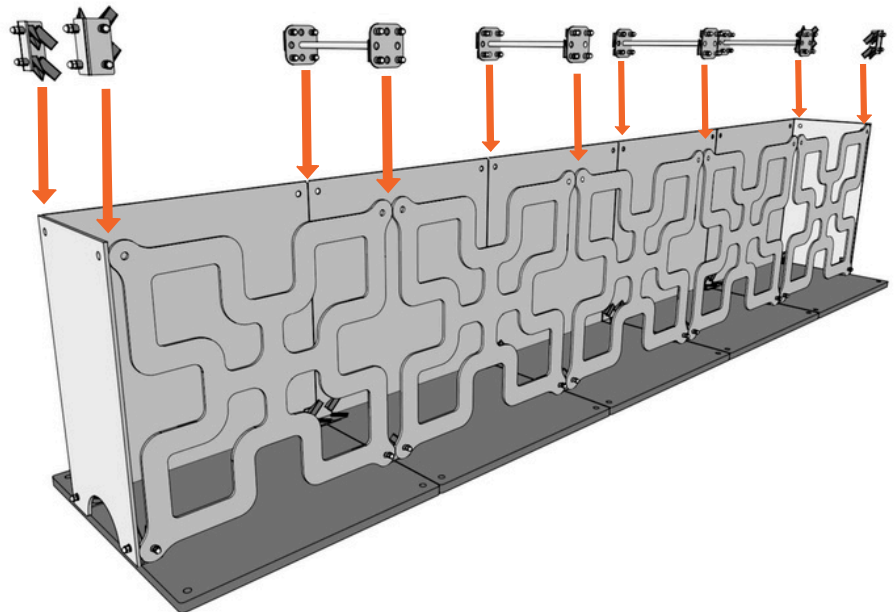



STEP FIVE

For top of Superwall, attach C3 and C4 connectors as shown.

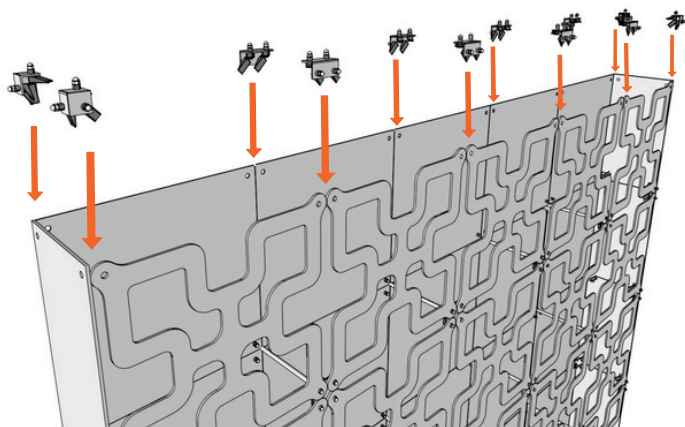

STEP SIX

Complete Superwall by attaching Half panels to the top of the Superwall. Ensure structure is stable before repositioning.

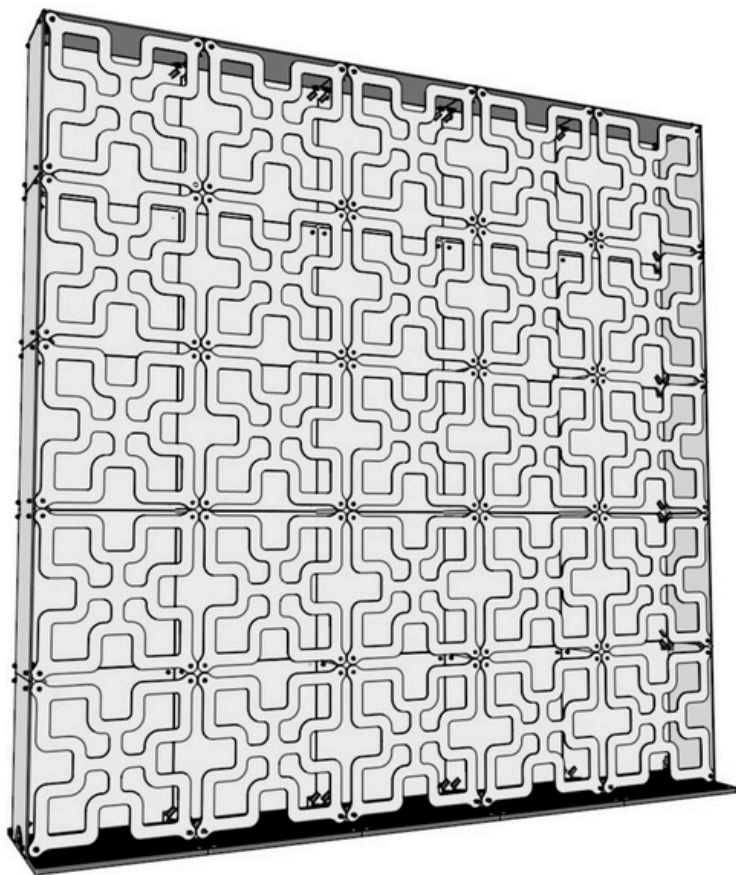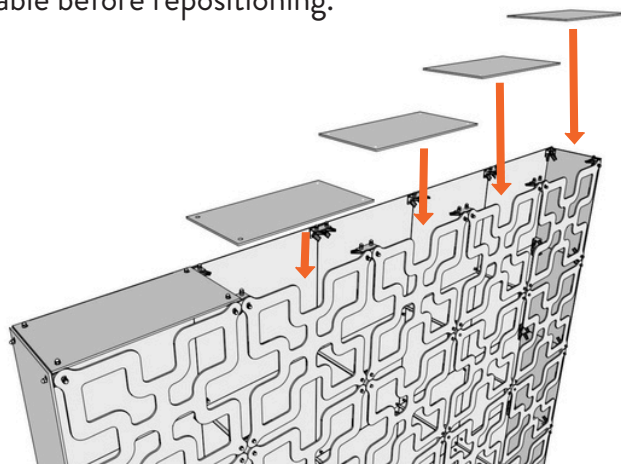

DISASSEMBLY INSTRUCTIONS:

Superwall MUST be disassembled from top down, in reverse order as the assembly process. Removal of bottom panels first may result in a collapsing wall.


NOTE:

INSTALLATION INSTRUCTIONS

Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.


STEP ONE


- Align Superbases with handles facing the back of the Superwall, and white feet facing down.
- Connect bases together using C4 connectors as shown.
- Attach C3 and C2 connectors as shown.

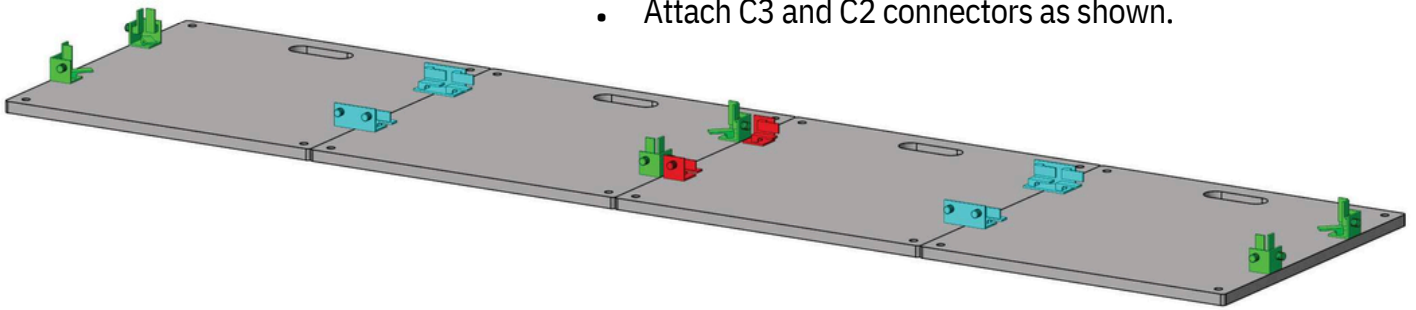

STEP TWO

- Attach SuperLever panels on front and back of SuperWall.
- Attach Half Panels to ends and center of wall as shown
- Attach C4 connectors to the corners, T6 connectors at the support wall, and Dogbone connectors in between.

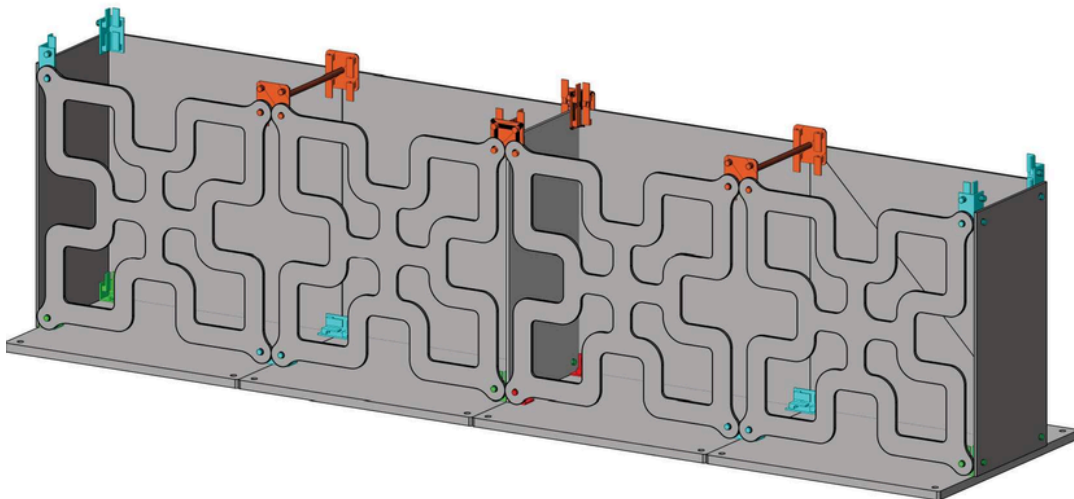

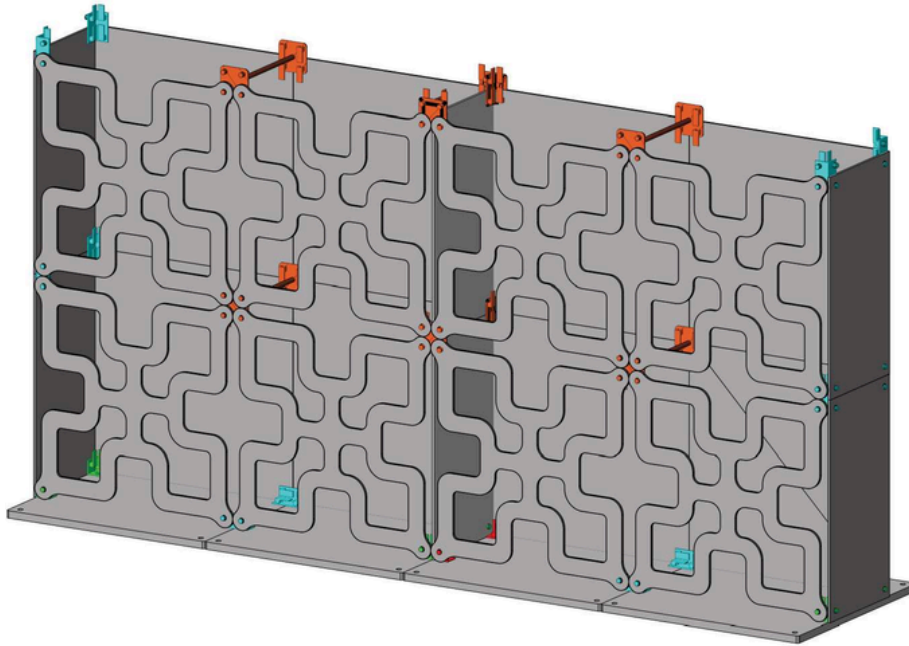


STEP THREE


- Repeat STEP TWO for the second row.

STEP FOUR

- Repeat STEP TWO for the third row.

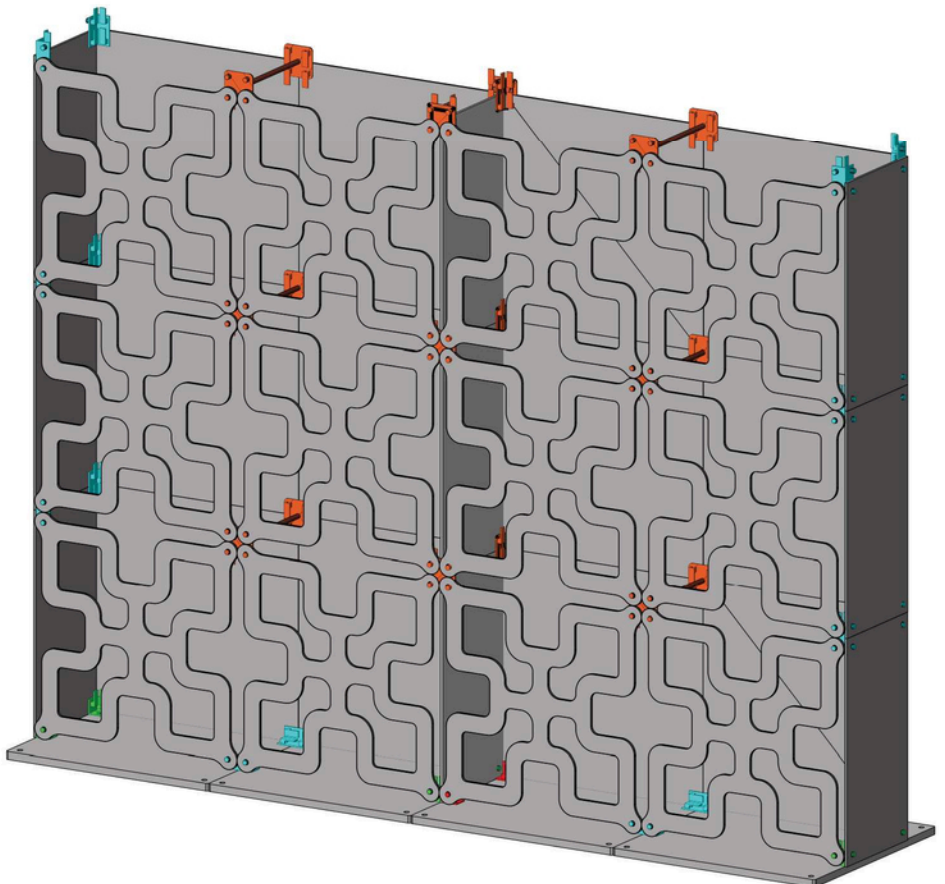

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

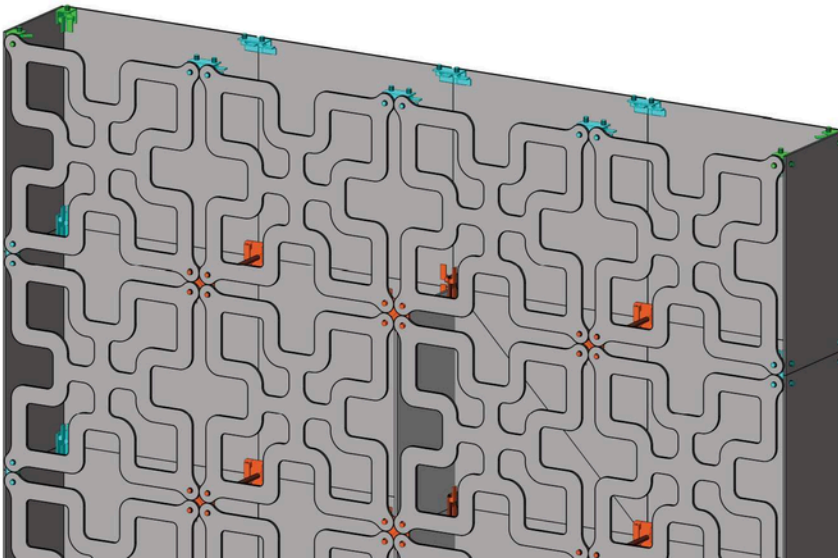



STEP FIVE

- Add the SuperLever Panels to the Front and Back of the SuperWall.
- Add Half Panels to each end.
- Add C3 Connectors at each corner and C4 connectors along the front and back.

STEP SIX

- Attach Half Panels to the top of the wall to finish it off.

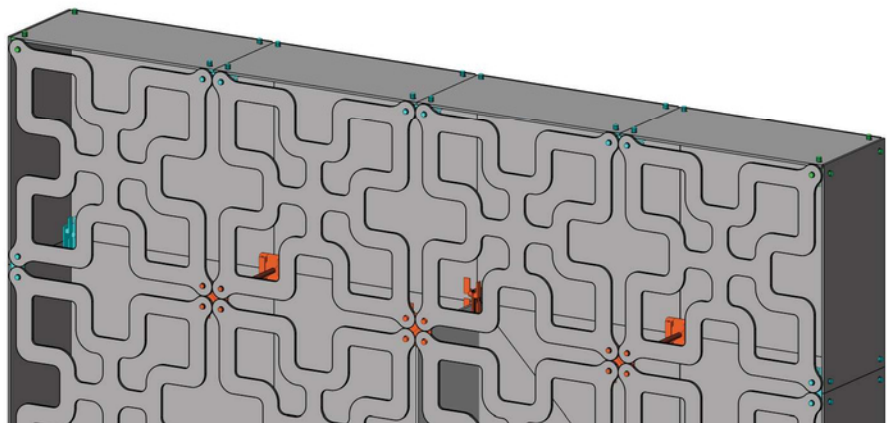

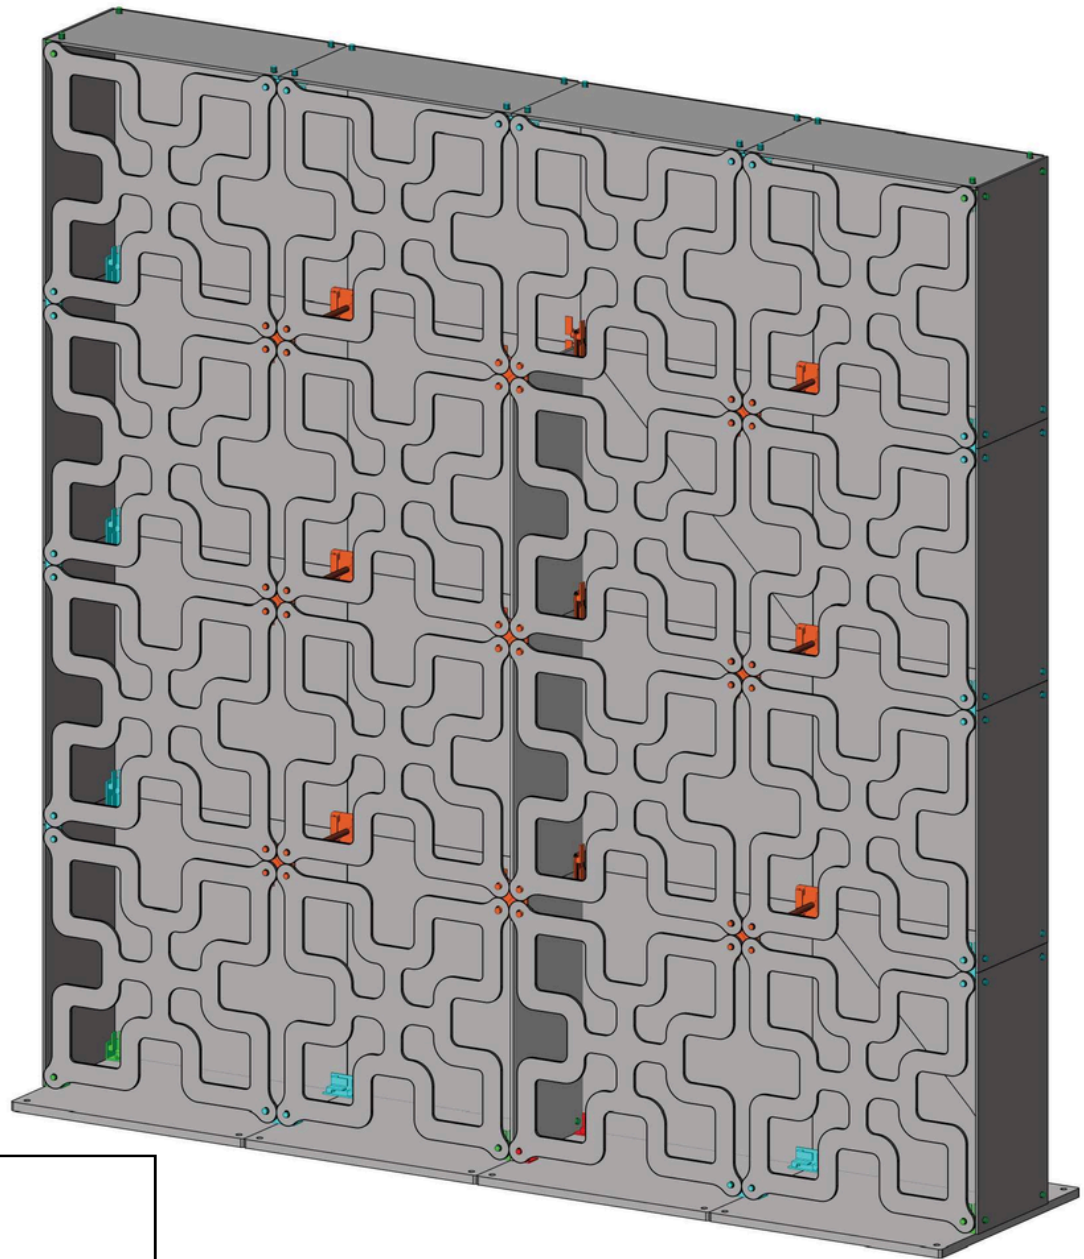

DISASSEMBLY INSTRUCTIONS:


Superwall MUST be disassembled from top down, in reverse order as the assembly process. Removal of bottom panels first may result in a collapsing wall.

NOTE:

- Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.
- SuperLever Black Connectors only.


STEP ONE


- Align Superbases with handles facing the back of the Superwall, and white feet facing down.
- Connect bases together using C4 connectors and T5 connectors as shown.
- Attach C3 connectors to ends as shown.

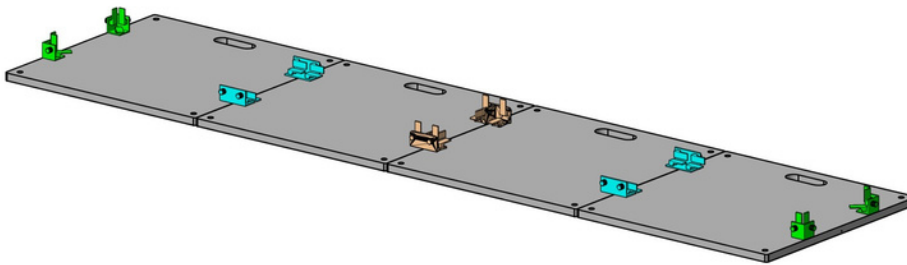

STEP TWO

- Attach SuperLever panels on front and back of SuperWall.
- Attach Half Panels to ends and center of wall as shown
- Attach C4 connectors to the corners, T6 connectors at the support wall, and F4 connectors in between.

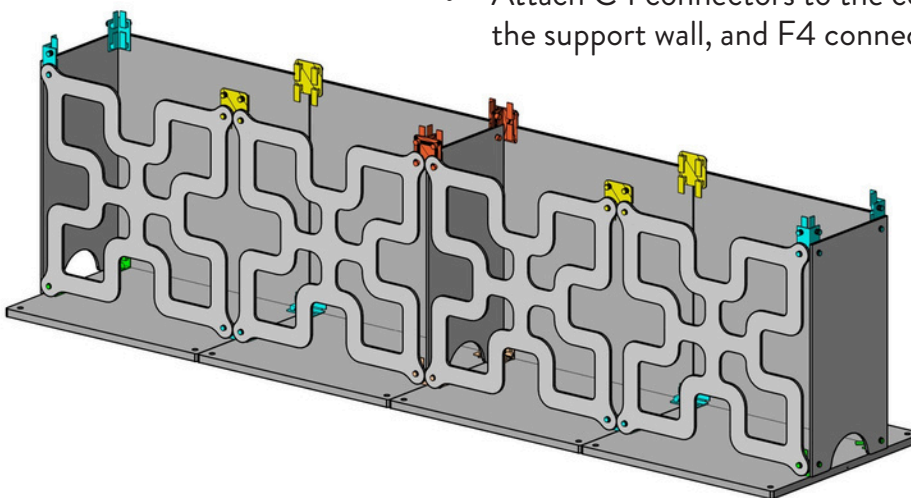

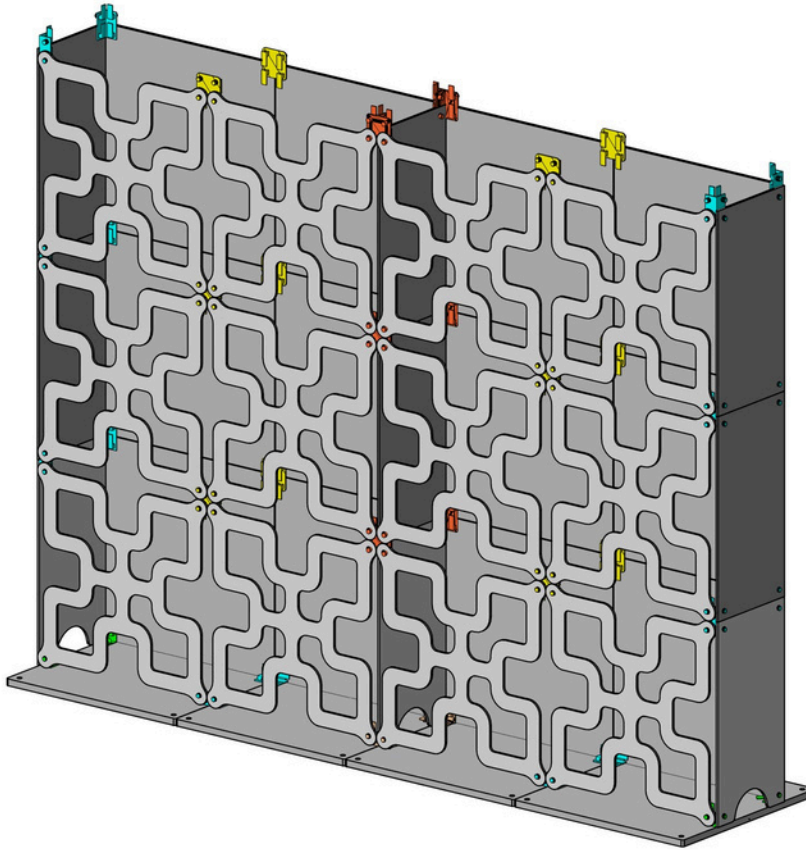


STEP THREE

- Repeat STEP TWO for the middle rows of your wall.


STEP FOUR

- Add the SuperLever Panels to the Front and Back of the SuperWall.
- Add Half Panels to each end.
- Add C3 Connectors at each corner and C4 connectors along the front and back.

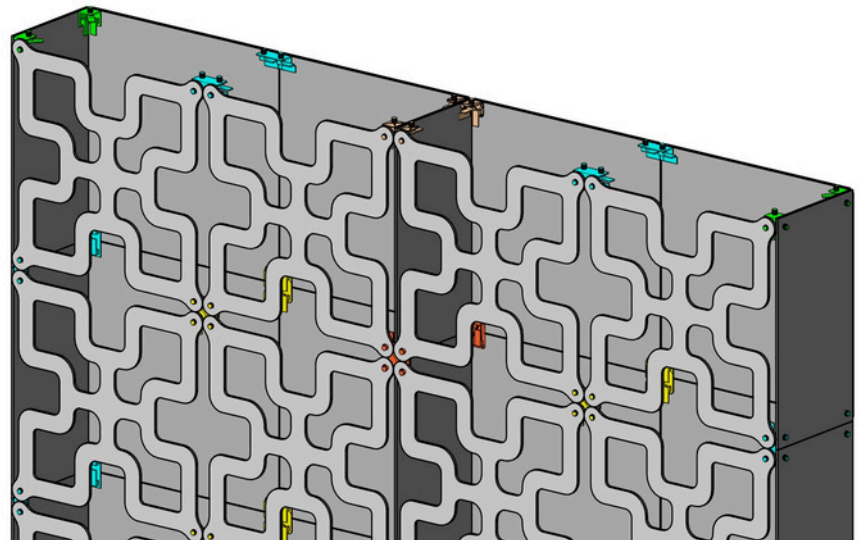

STEP SIX


- Attach Half Panels to the top of the wall to finish it off.

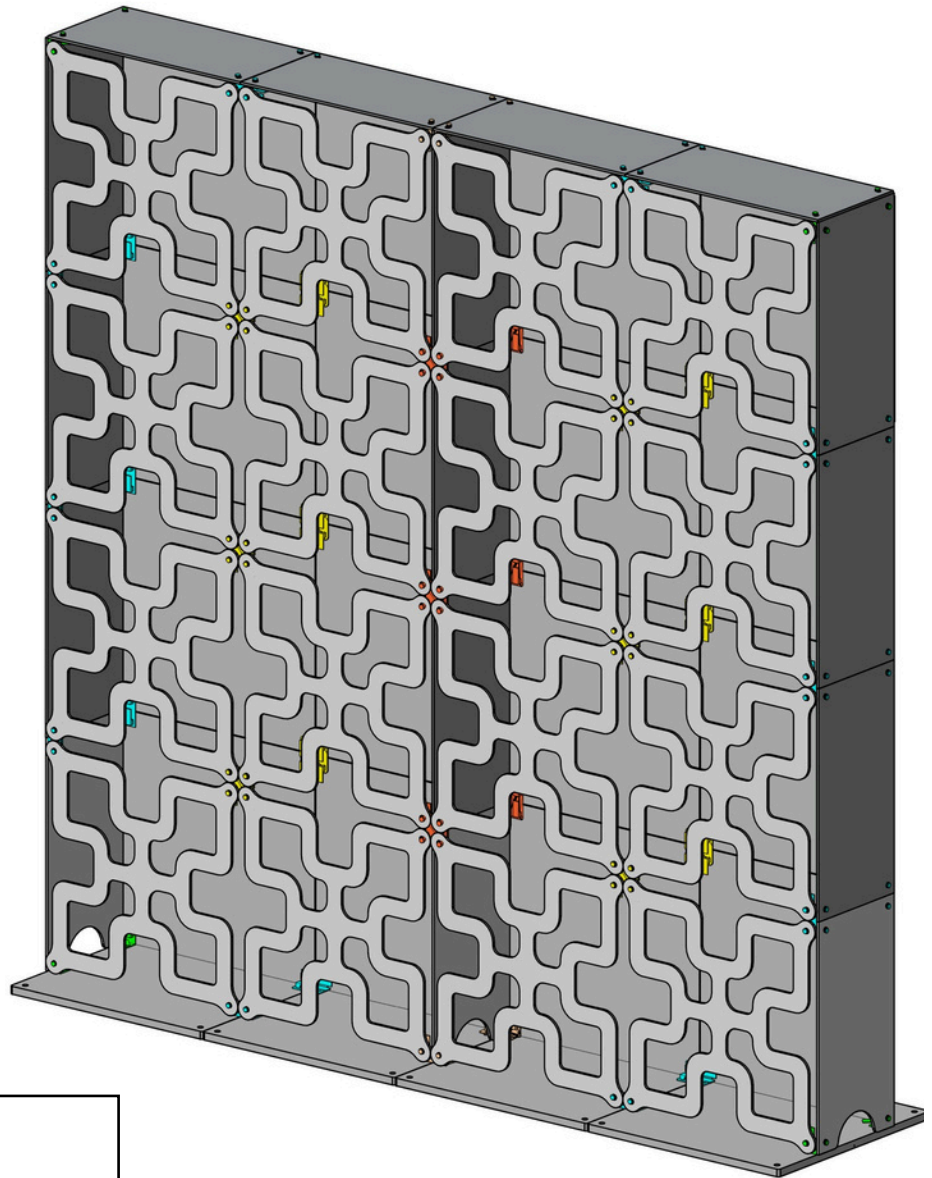

DISASSEMBLY INSTRUCTIONS:

Superwall **MUST** be disassembled from top down, in reverse order as the assembly process. Removal of bottom panels first may result in a collapsing wall.

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

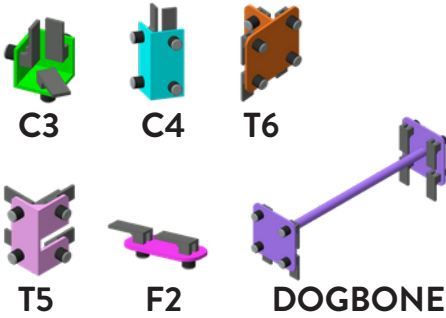


NOTE:

- Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.


STEP ONE



- Align Superbases with handles facing the back of the Superwall, and white feet facing down, and connect with F2.
- Attach C4, C3, and T5 connectors as shown.

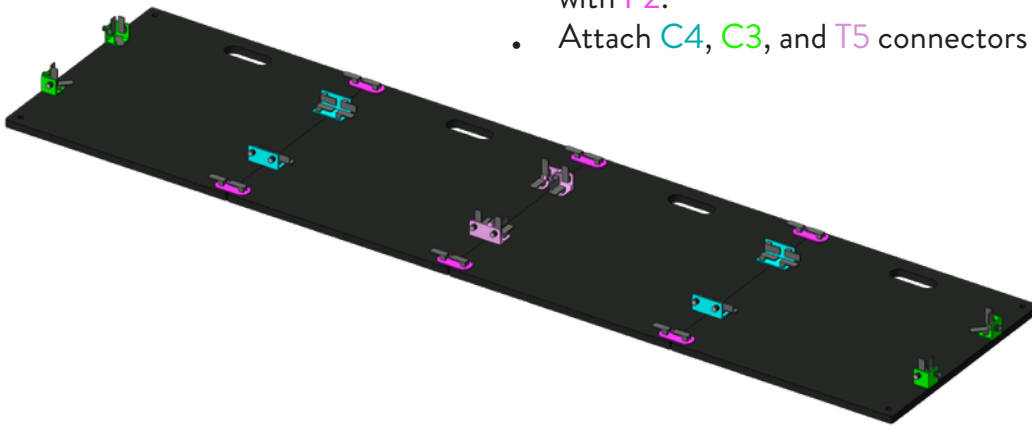

STEP TWO

- Attach SuperLever panels on front and back of SuperWall.
- Attach Half Panels to ends and center of wall as shown.
- Attach C4 connectors to the corners, T6 connectors at the center Half Panel support wall, and Dogbone connectors in between.

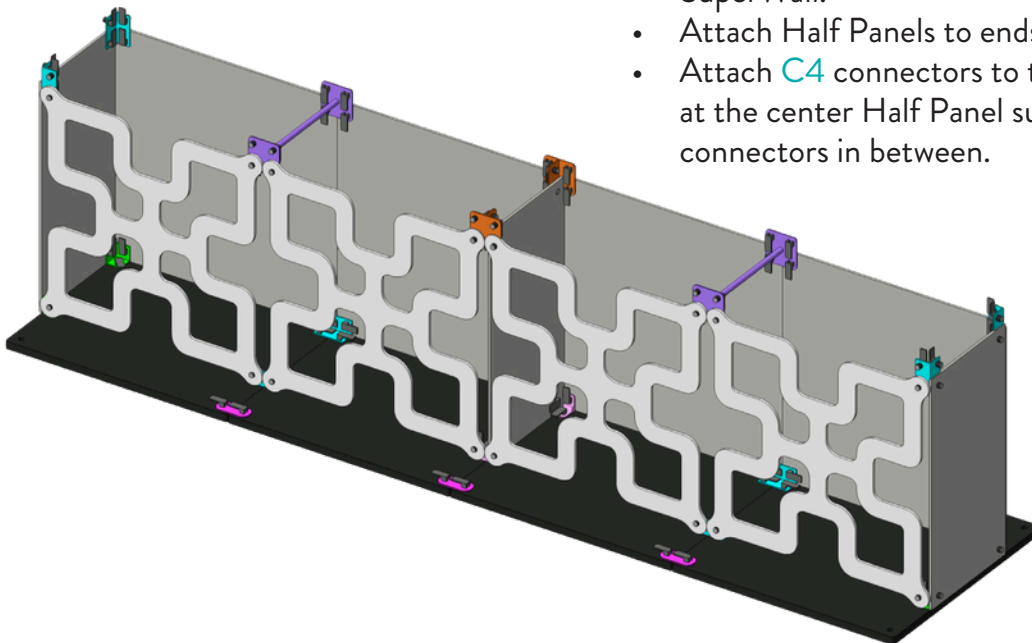

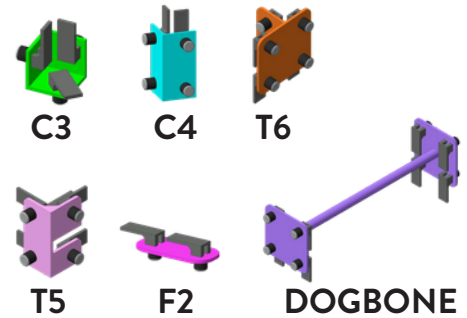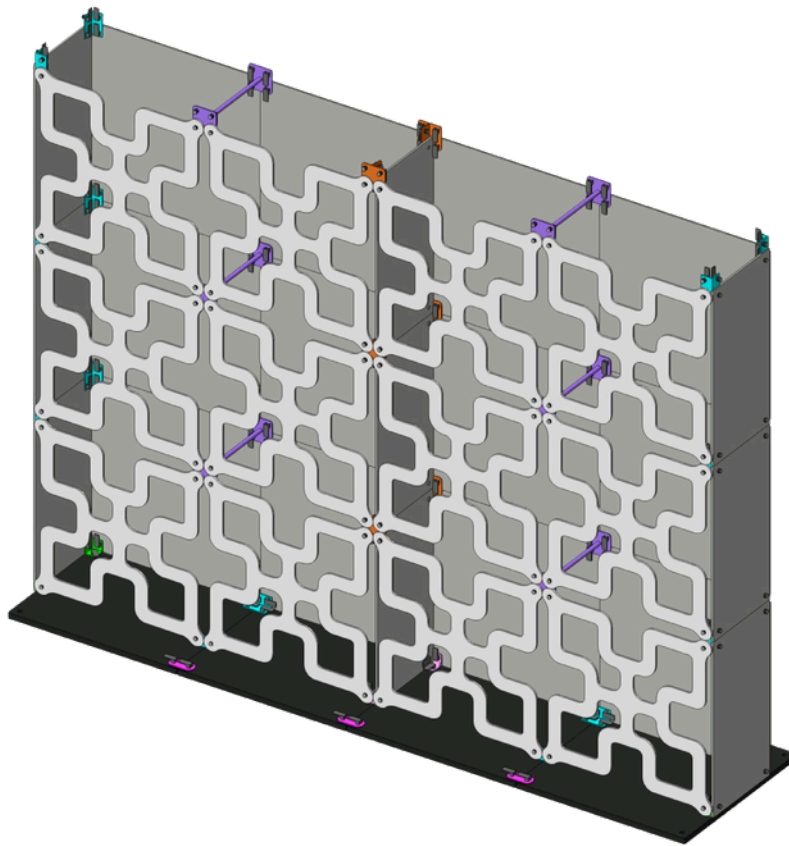


STEP THREE

- Repeat STEP TWO for the middle rows of the wall.


STEP FOUR

- Add the SuperLever Panels to the front and back of the SuperWall.
- Add Half Panels to each end and center.
- Attach **C3** connectors to the corners, **T5** connectors at the center Half Panel support wall, and **C4** connectors in between.

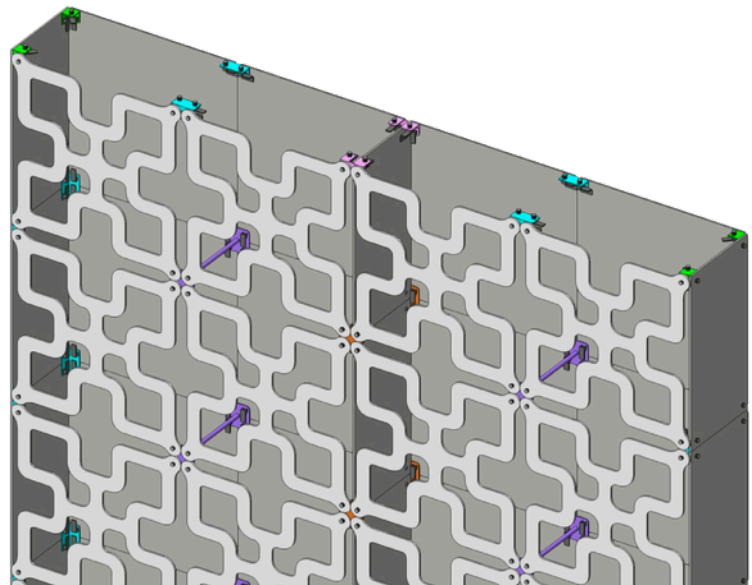

STEP SIX

- Attach Half Panels to the top of the wall to finish it off.

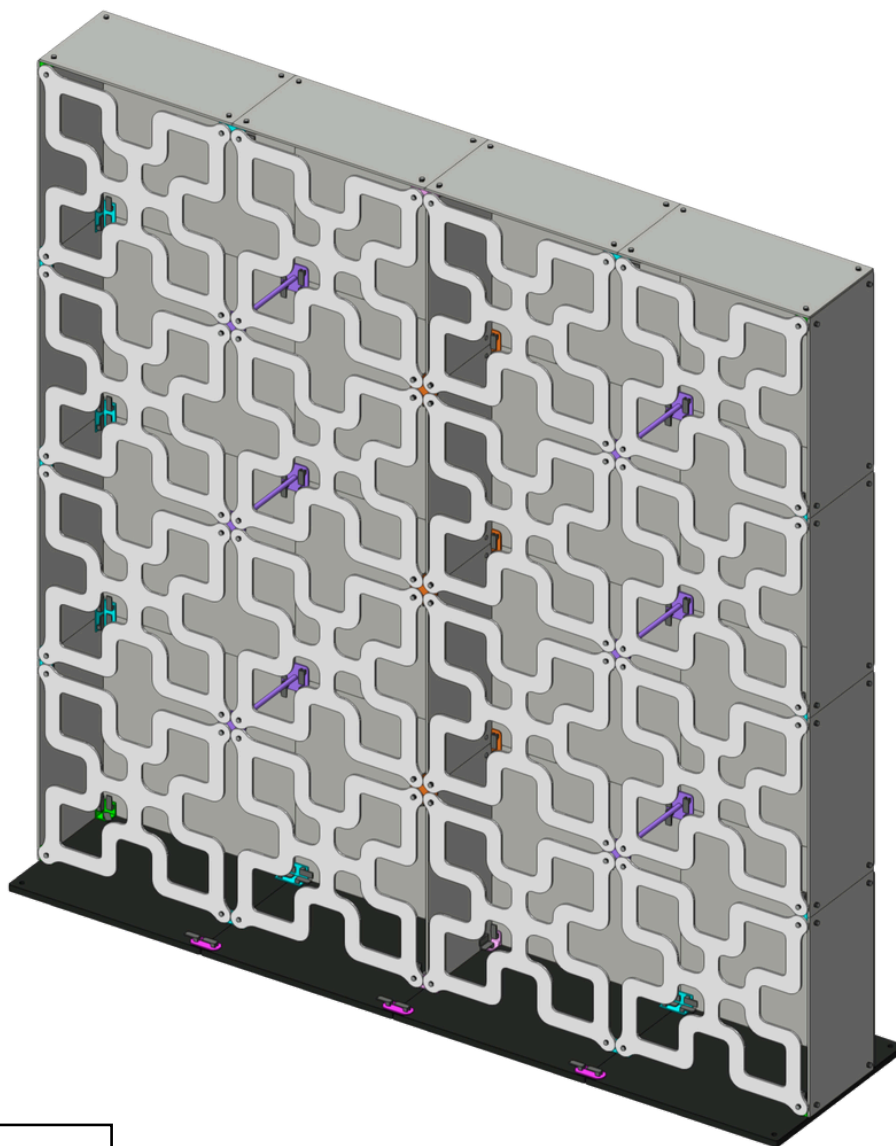

DISASSEMBLY INSTRUCTIONS:

Superwall **MUST** be disassembled from top down, in reverse order as the assembly process. Removal of bottom panels first may result in a collapsing wall and injury.

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact