


STEP ONE

Extend support legs.



STEP TWO

Release (3) Lock Pins.

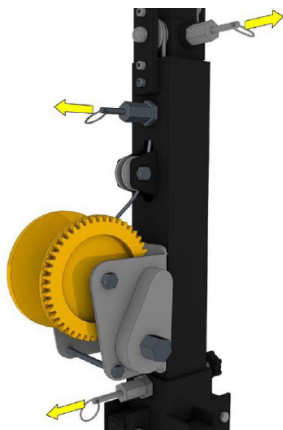

STEP THREE

Insert top unit and optional extensions.




STEP FOUR

Attach Extension to base.



STEP FIVE


Lock connectors as you go.

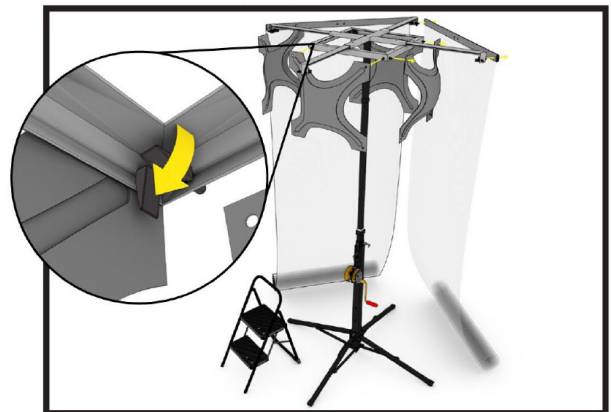

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

STEP SIX

Crank to raise.

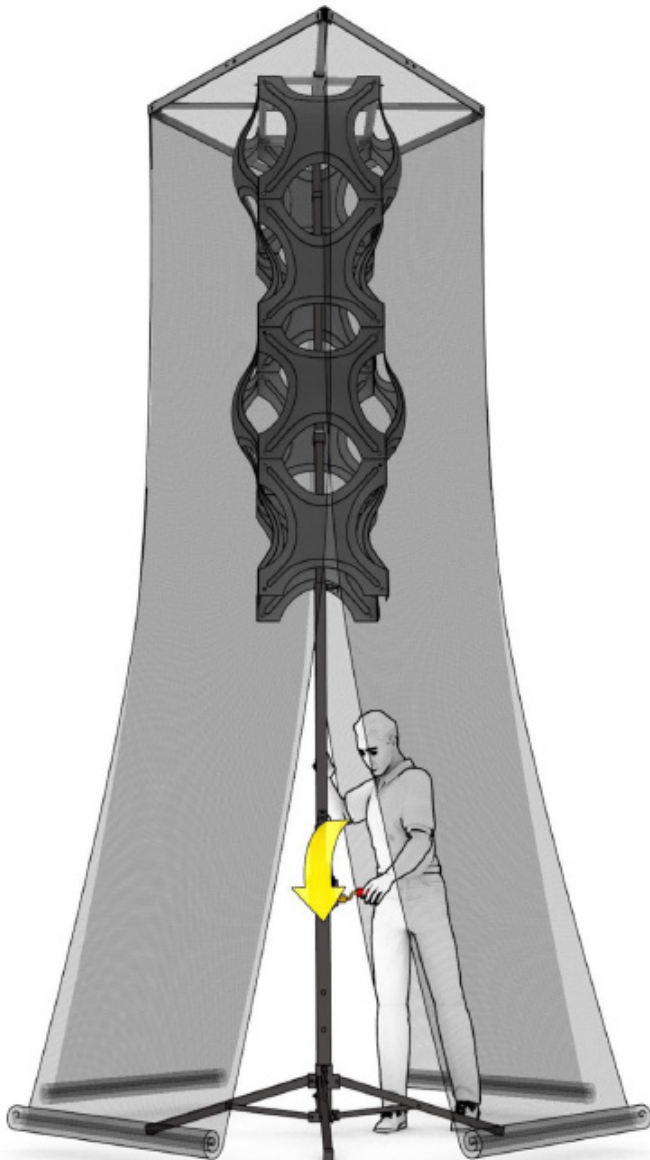

STEP SEVEN

Lock connectors as you go....Par-tay



Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact