
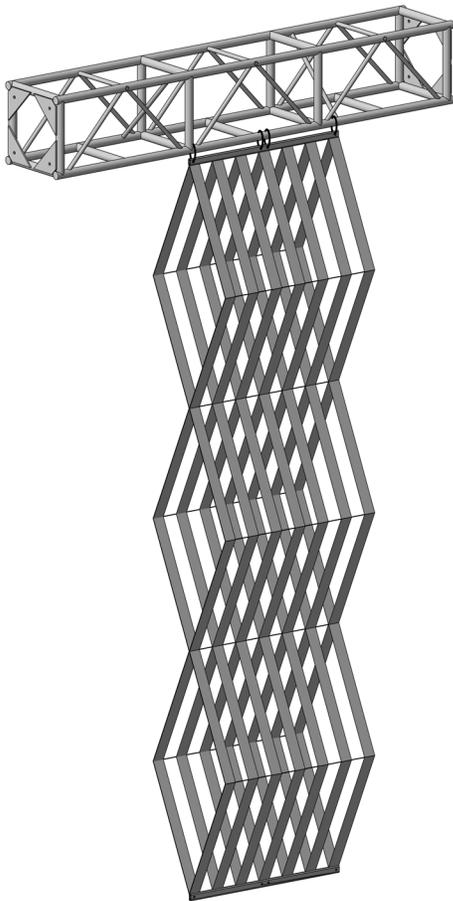


STEP ONE

Secure to truss using tiedowns through the Superlever holes on the rail.

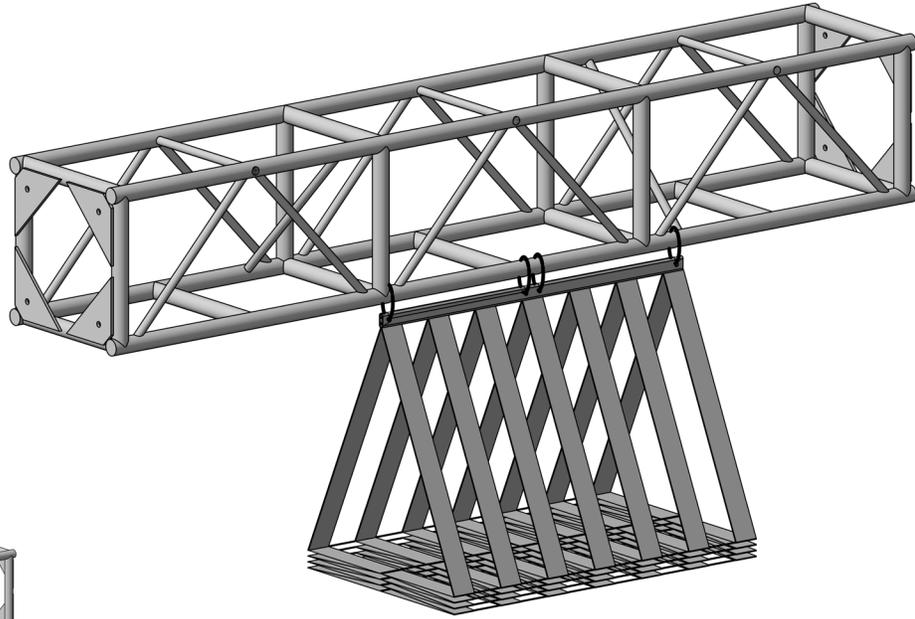

STEP TWO

Raise truss or pipe.

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact