


### STEP ONE

Use two SuperBases per Udon. Attach C2 and C4 connectors to bases where indicated. Base handles face upstage.


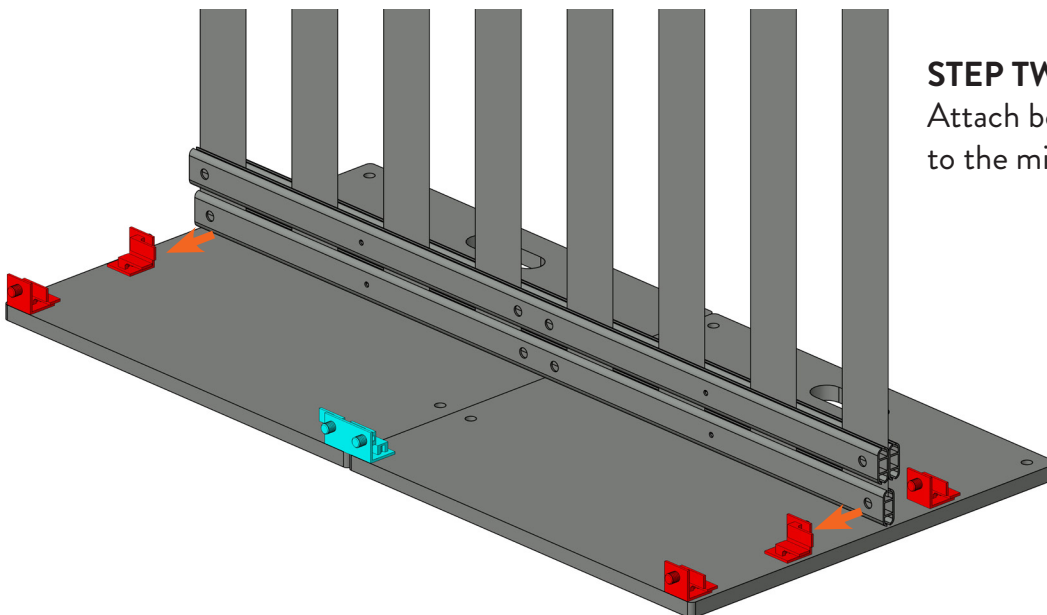


### STEP TWO

Attach bottom kedar rail of the Udon to the middle row of C2 connectors.


### STEP THREE


Hang top kedar rail of Udon to pipe and base or truss. Use tieline to tie Udon.

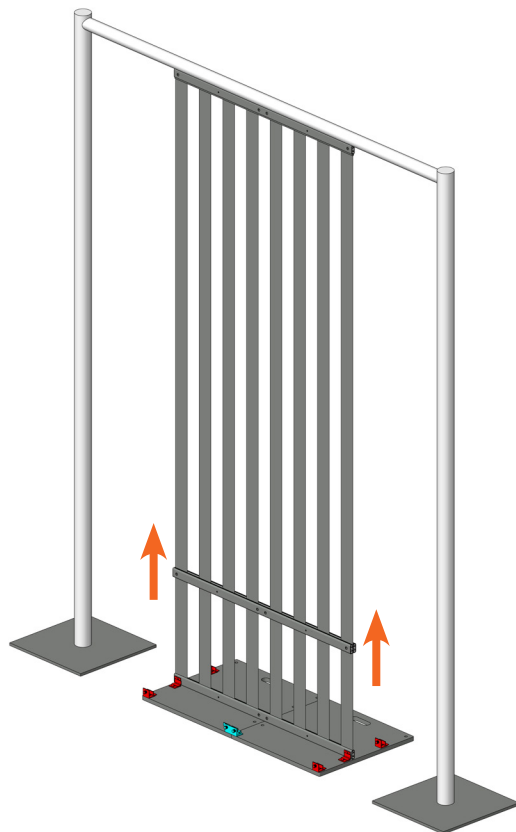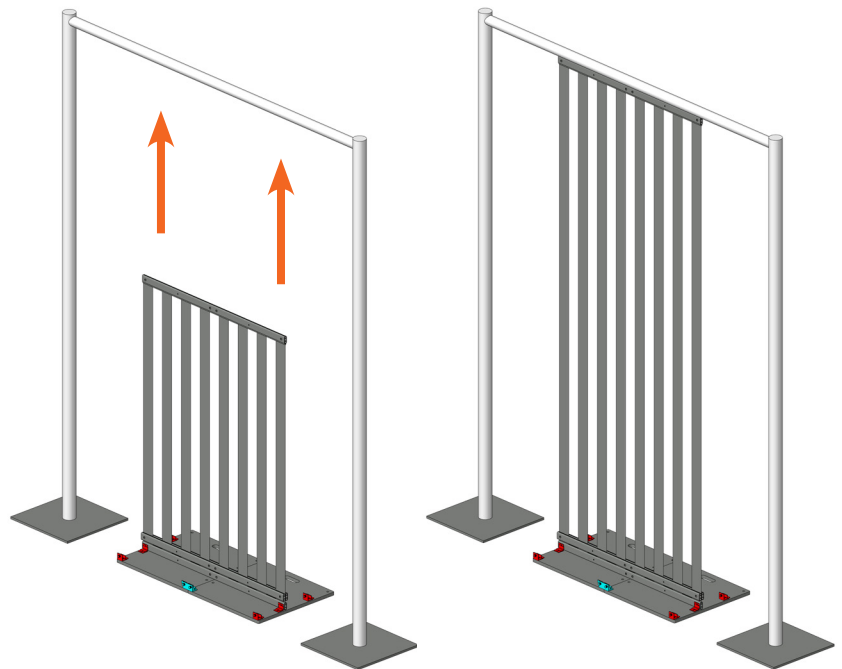

### STEP FOUR

To adjust the length, use the tension bar to tighten Udon fabric. Slide tension bar up to preferred length, and rotate bar 360 degrees. Pull tension bar back down, and attach it to the third row of C2 connectors.

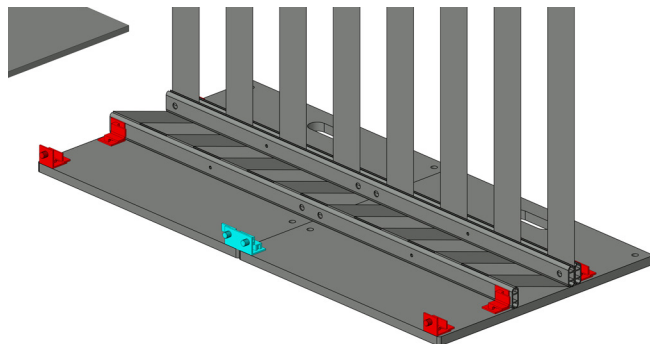

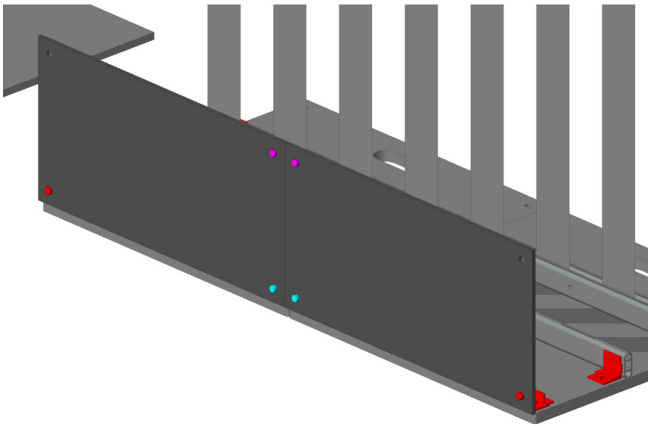

### STEP FIVE

Attach black half panels to the front of the SuperBases using C2 and C4 connectors. Use F2 connector to connect half panels together.

