


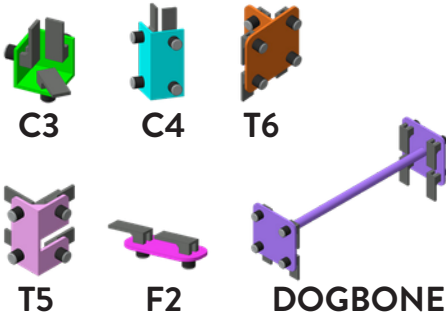


NOTE:

- Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.


STEP ONE



- Align Superbases with handles facing the back of the Superwall, and white feet facing down, and connect with F2.
- Attach C4, C3, and T5 connectors as shown.

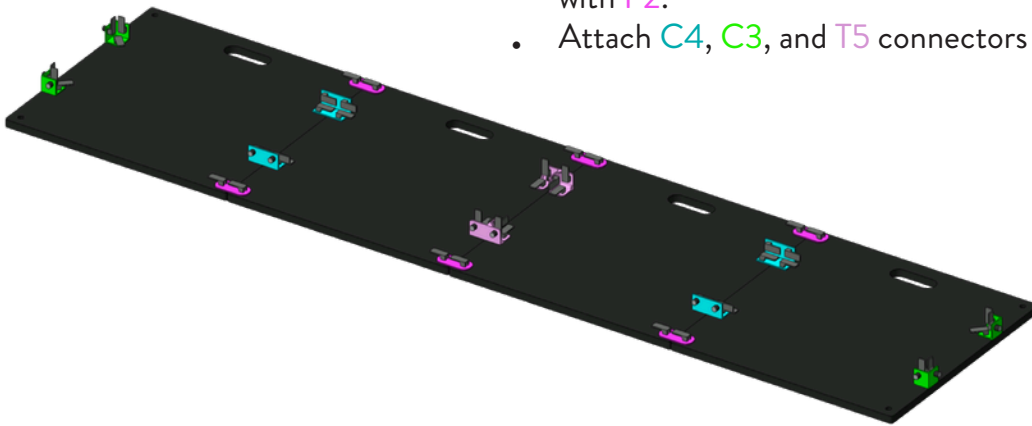

STEP TWO

- Attach SuperLever panels on front and back of SuperWall.
- Attach Half Panels to ends and center of wall as shown.
- Attach C4 connectors to the corners, T6 connectors at the center Half Panel support wall, and Dogbone connectors in between.

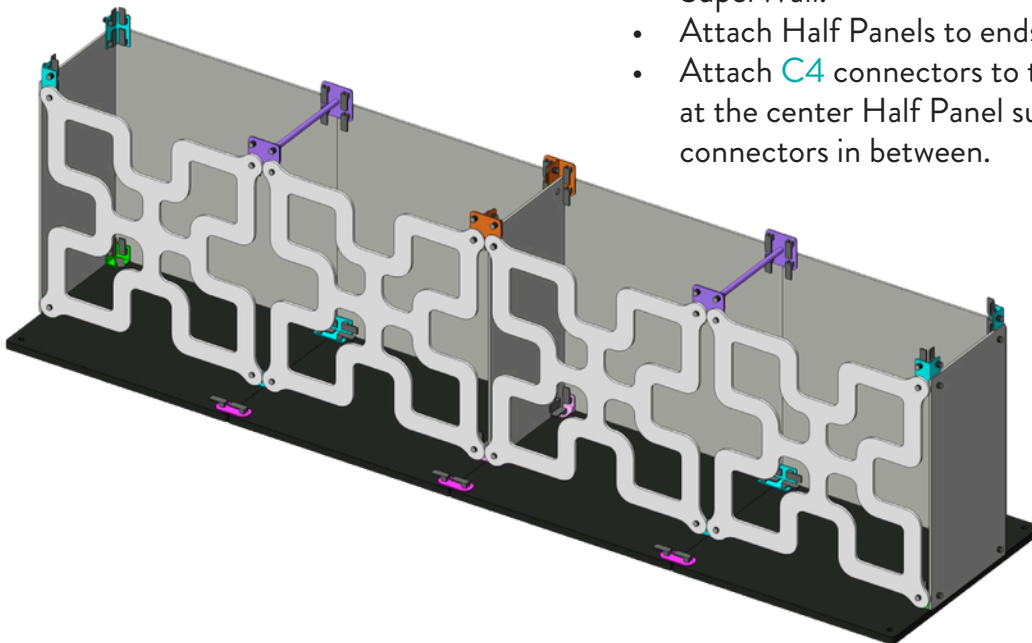

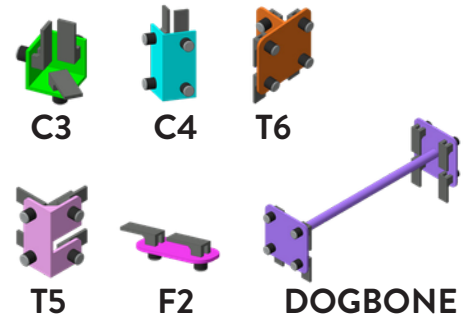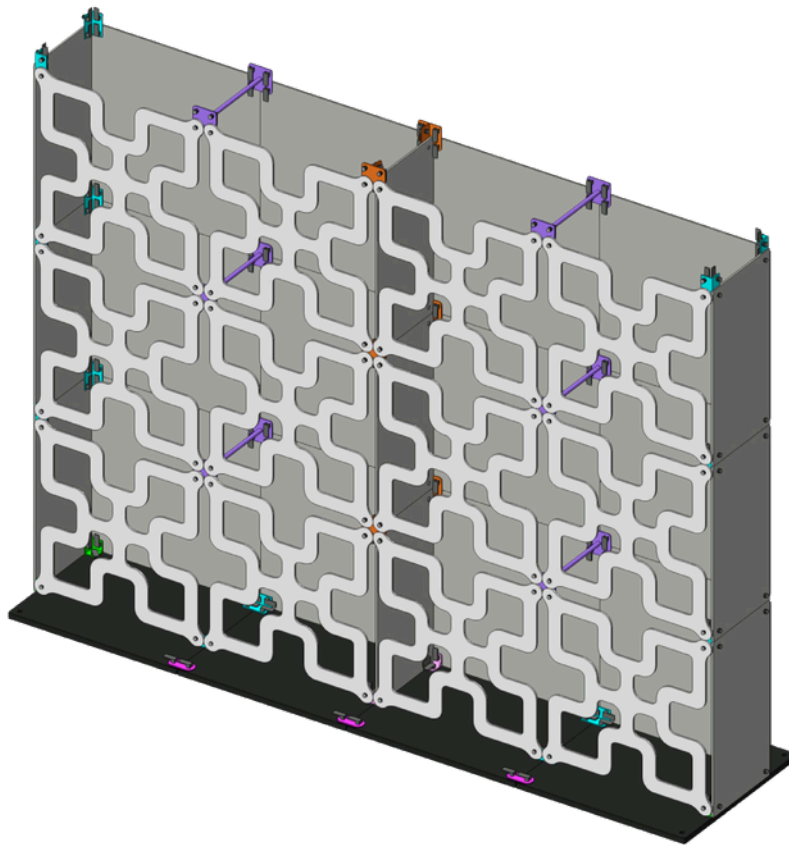


STEP THREE

- Repeat STEP TWO for the middle rows of the wall.


STEP FOUR

- Add the SuperLever Panels to the front and back of the SuperWall.
- Add Half Panels to each end and center.
- Attach **C3** connectors to the corners, **T5** connectors at the center Half Panel support wall, and **C4** connectors in between.

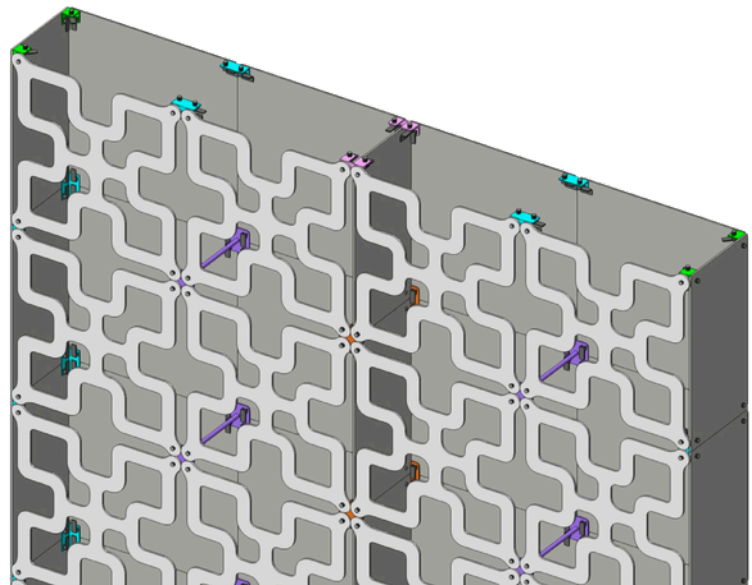

STEP SIX

- Attach Half Panels to the top of the wall to finish it off.

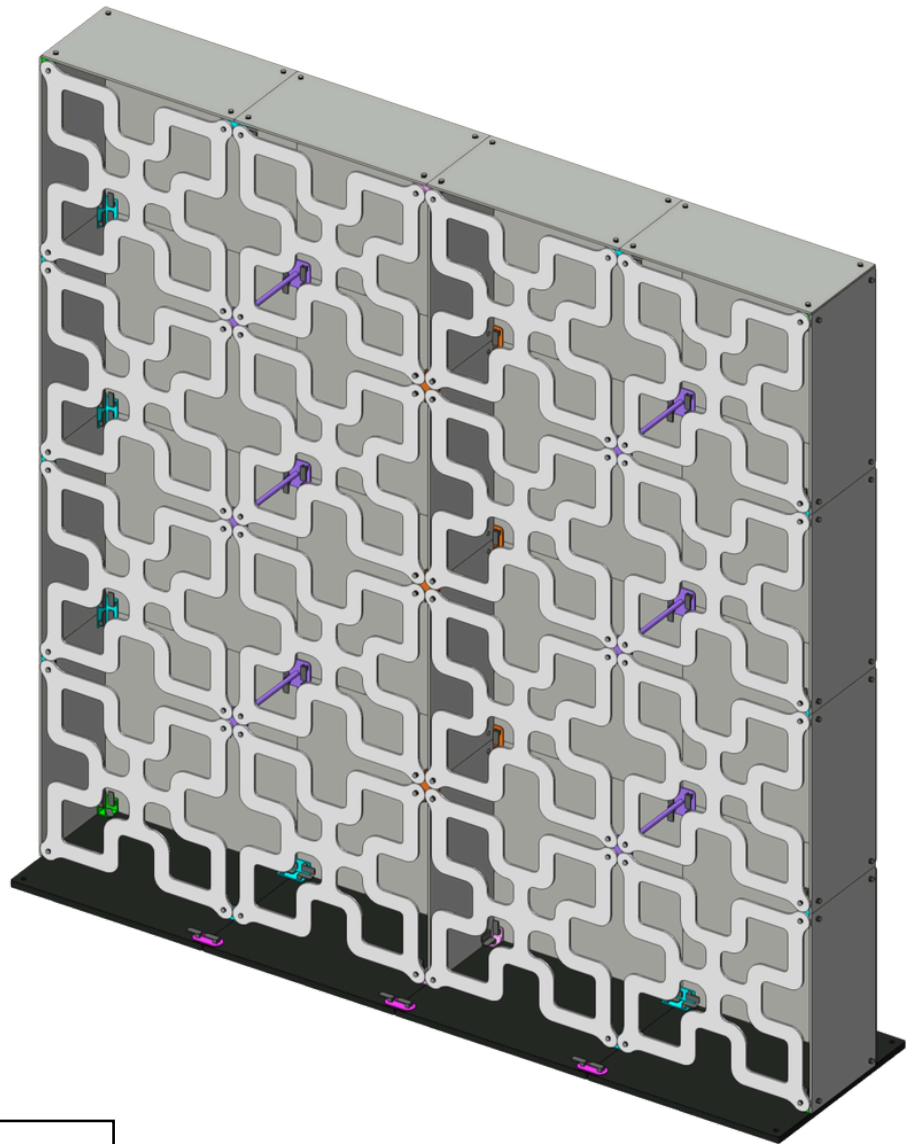

DISASSEMBLY INSTRUCTIONS:

Superwall **MUST** be disassembled from top down, in reverse order as the assembly process. Removal of bottom panels first may result in a collapsing wall and injury.

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact