


#### NOTE:

Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.


#### STEP ONE


- Align Superbases with handles facing the back of the Superwall, and white feet facing down.
- Connect bases together using C4 connectors as shown.
- Attach C3 and C2 connectors as shown.

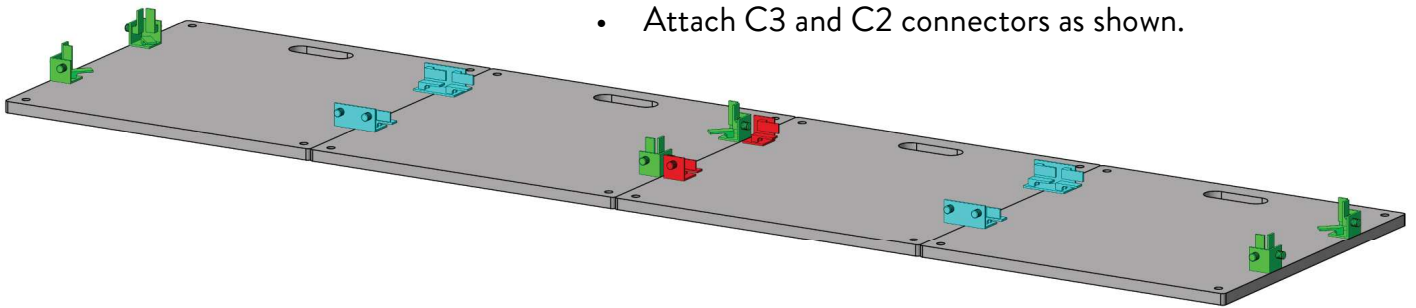

#### STEP TWO


- Attach SuperLever panels on front and back of SuperWall.
- Attach Half Panels to ends and center of wall as shown
- Attach C4 connectors to the corners, T6 connectors at the support wall, and Dogbone connectors in between.

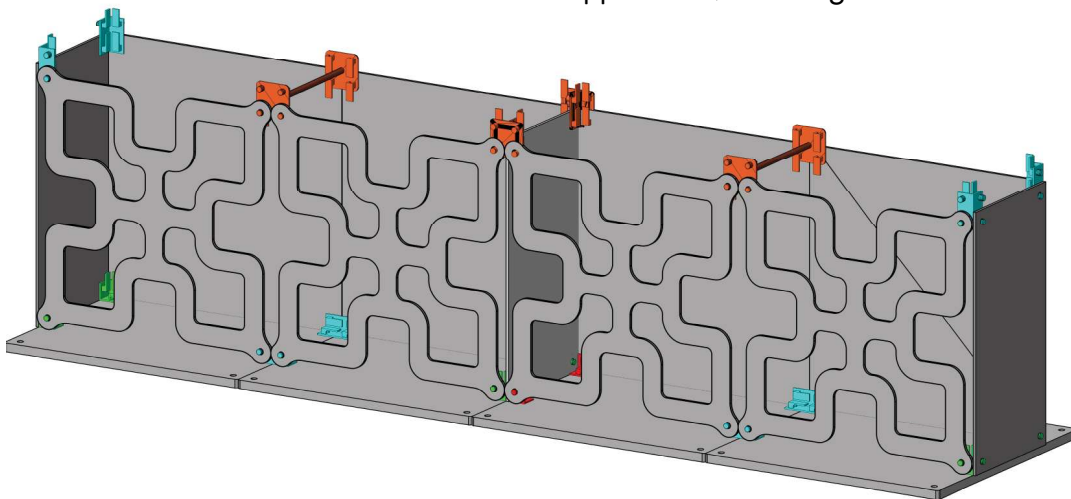

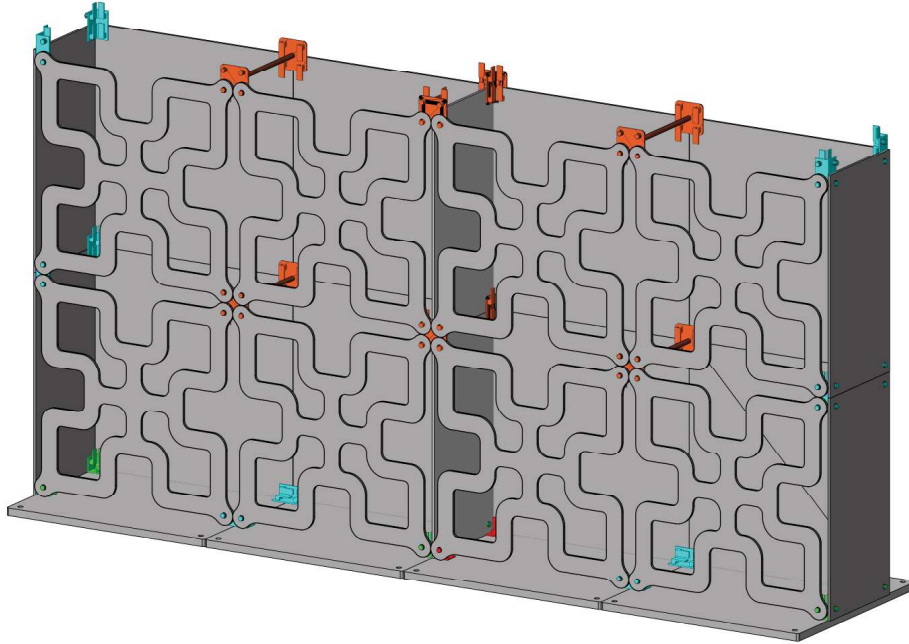


### STEP THREE

- Repeat STEP TWO for the second row.

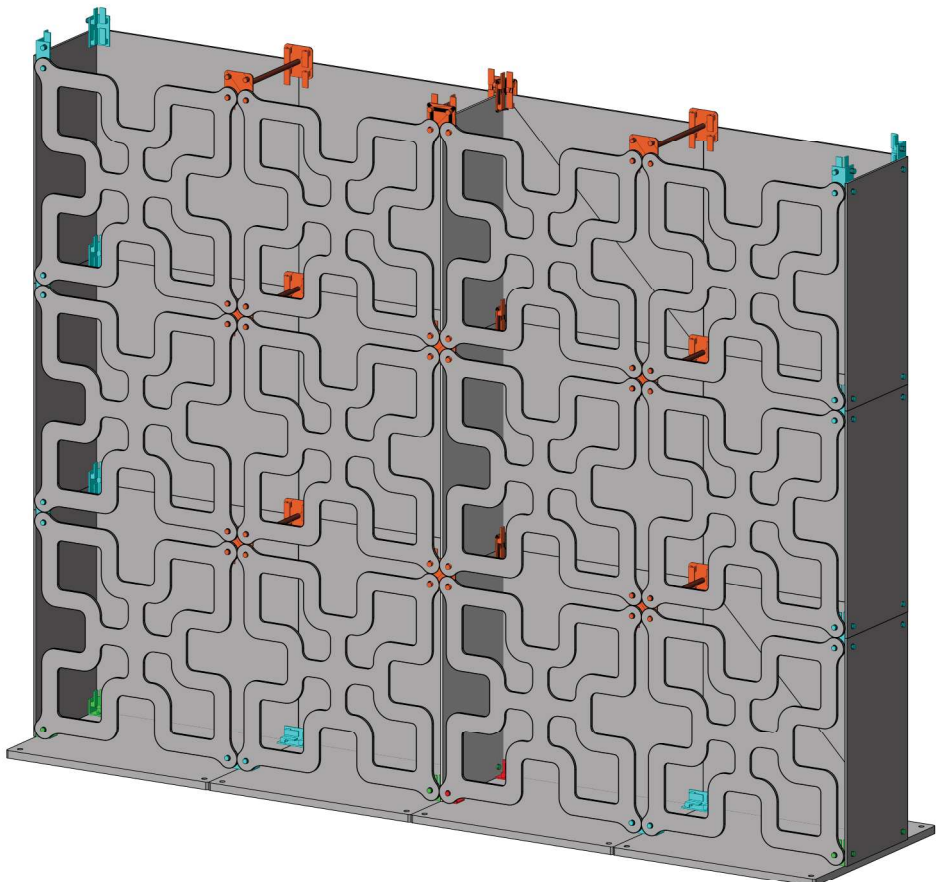

### STEP FOUR

- Repeat STEP TWO for the third row.

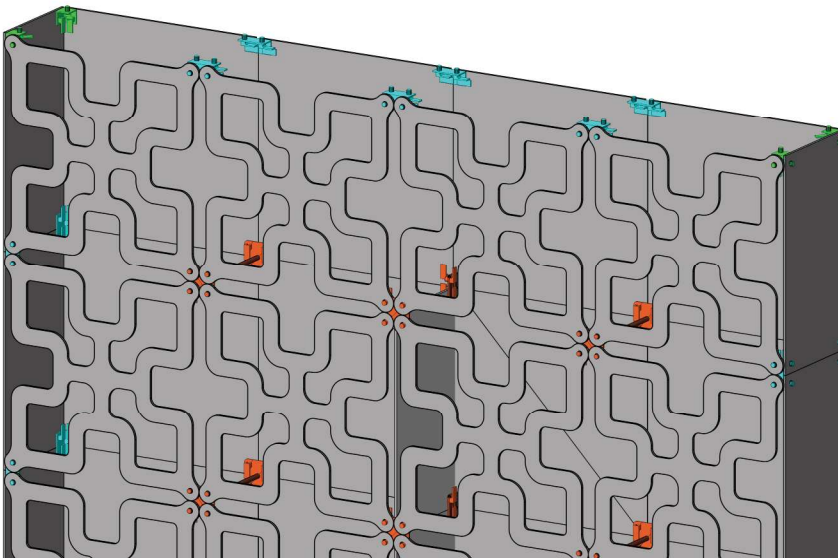


#### STEP FIVE


- Add the SuperLever Panels to the Front and Back of the SuperWall.
- Add Half Panels to each end.
- Add C3 Connectors at each corner and C4 connectors along the front and back.

#### STEP SIX

- Attach Half Panels to the top of the wall to finish it off.

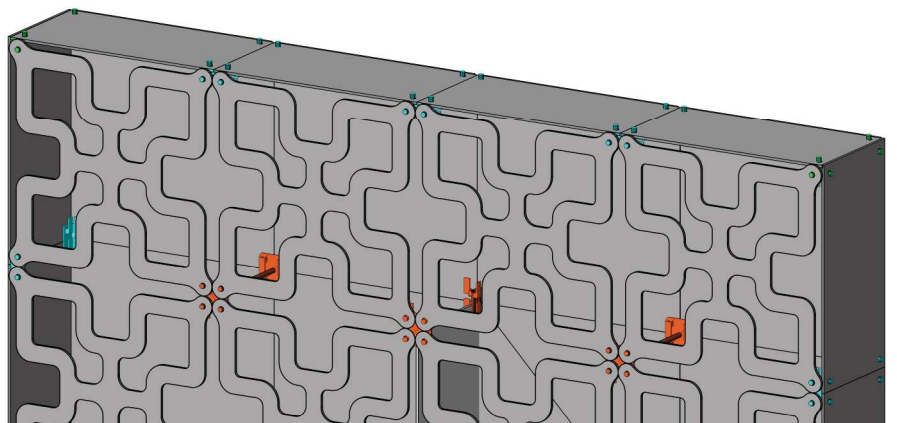



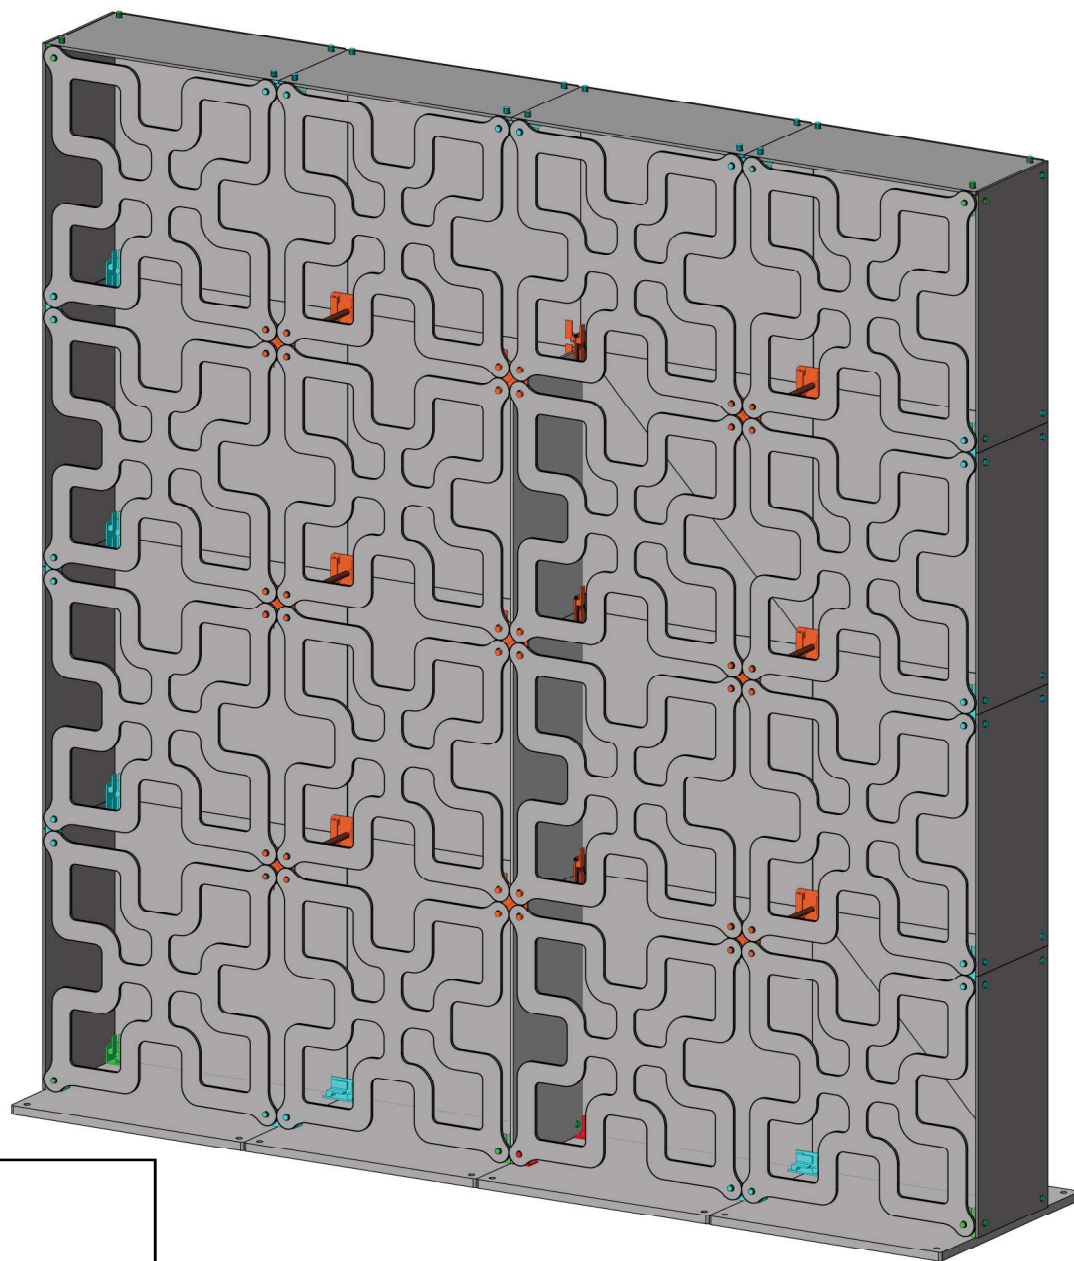

### DISASSEMBLY INSTRUCTIONS:

Superwall **MUST** be disassembled from top down, in reverse order as the assembly process. Removal of bottom panels first may result in a collapsing wall.

Questions about ATOMIC products?  
Contact your Modular Systems Account Manager!  
[www.atomicdesign.tv/contact](http://www.atomicdesign.tv/contact)




### NOTE:

- Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.
- SuperLever Black Connectors only.


### STEP ONE


- Align Superbases with handles facing the back of the Superwall, and white feet facing down.
- Connect bases together using C4 connectors and T5 connectors as shown.
- Attach C3 connectors to ends as shown.

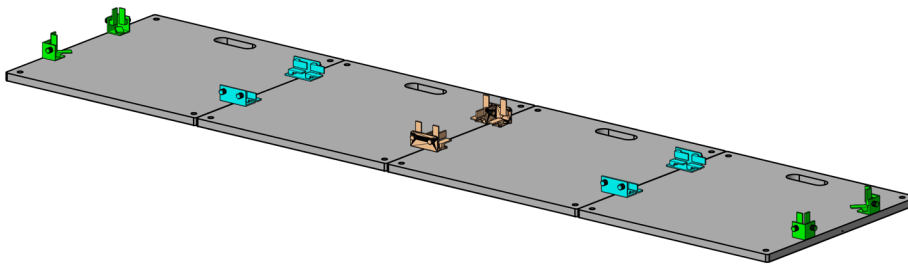

### STEP TWO

- Attach SuperLever panels on front and back of SuperWall.
- Attach Half Panels to ends and center of wall as shown
- Attach C4 connectors to the corners, T6 connectors at the support wall, and F4 connectors in between.

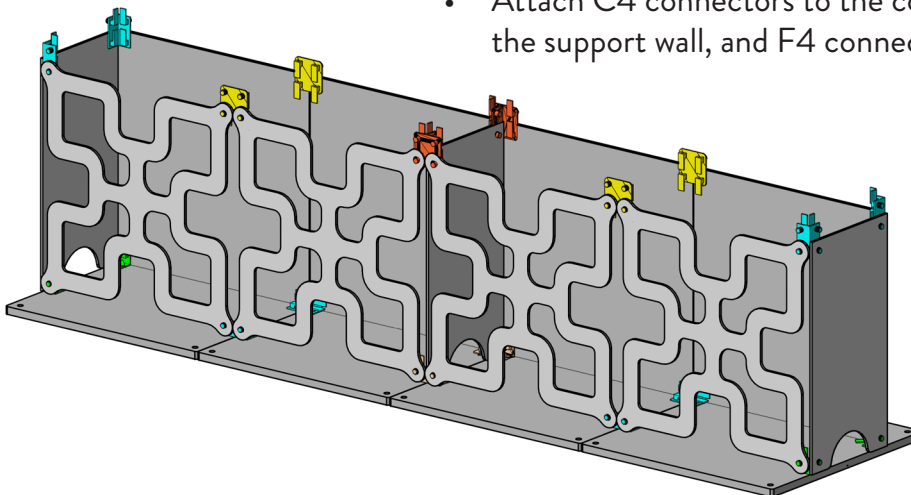

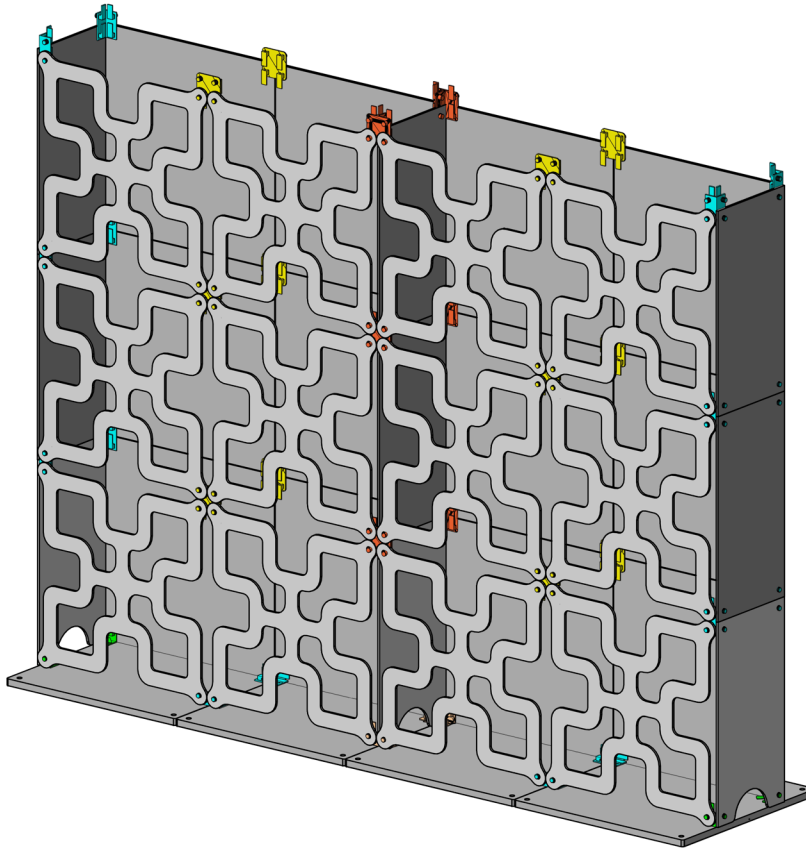


### STEP THREE

- Repeat STEP TWO for the middle rows of your wall.


### STEP FOUR

- Add the SuperLever Panels to the Front and Back of the SuperWall.
- Add Half Panels to each end.
- Add C3 Connectors at each corner and C4 connectors along the front and back.

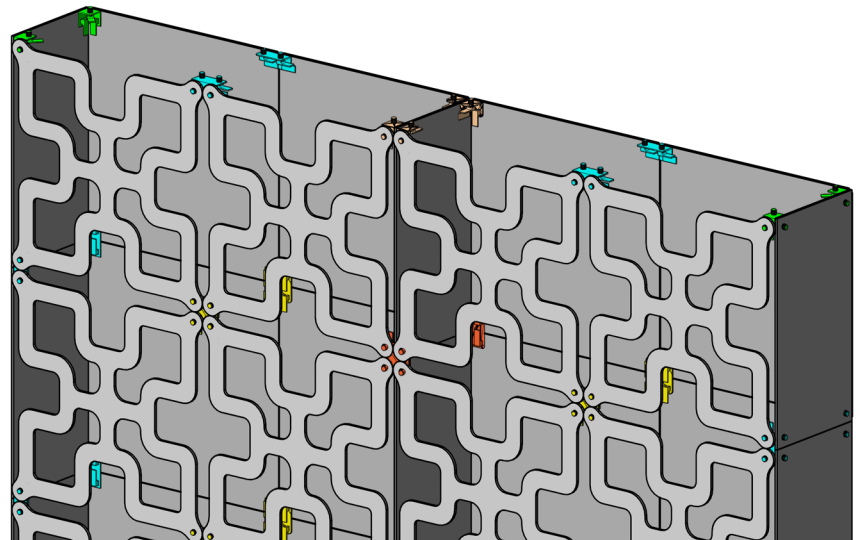

### STEP SIX

- Attach Half Panels to the top of the wall to finish it off.

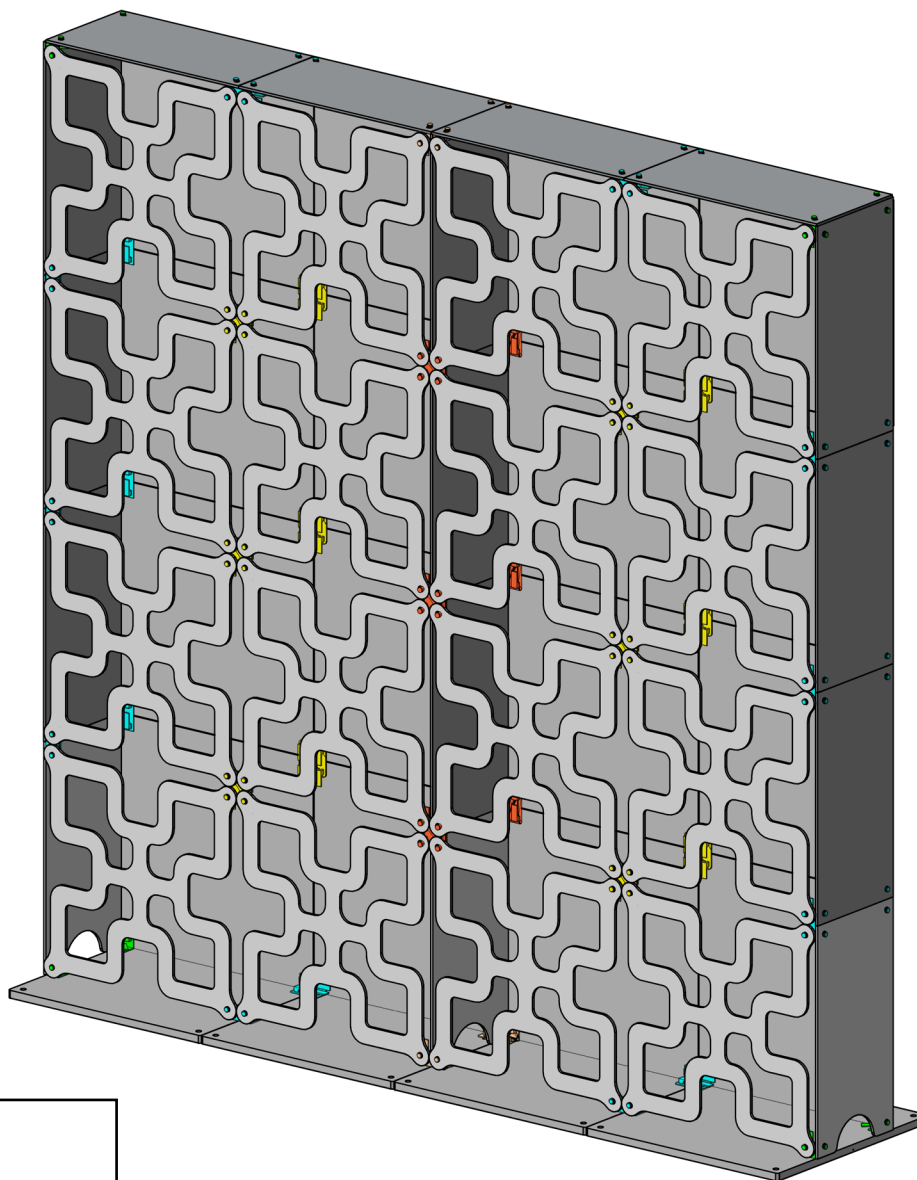

### DISASSEMBLY INSTRUCTIONS:

Superwall **MUST** be disassembled from top down, in reverse order as the assembly process. Removal of bottom panels first may result in a collapsing wall.