

NOTE:


Actual product may vary. SlotLok Inserts are interchangeable and instructions show a product representation. The Instructions reflect building SlotLok Shard Units for illustration purposes.

REVISION DATE: 11/12/25



NOTE:

- SlotLok Inserts are numbered on their top hook. A single SlotLok Unit consists of 7 SlotLok Inserts. Please see individual SlotLok Unit insert design instructions for details.

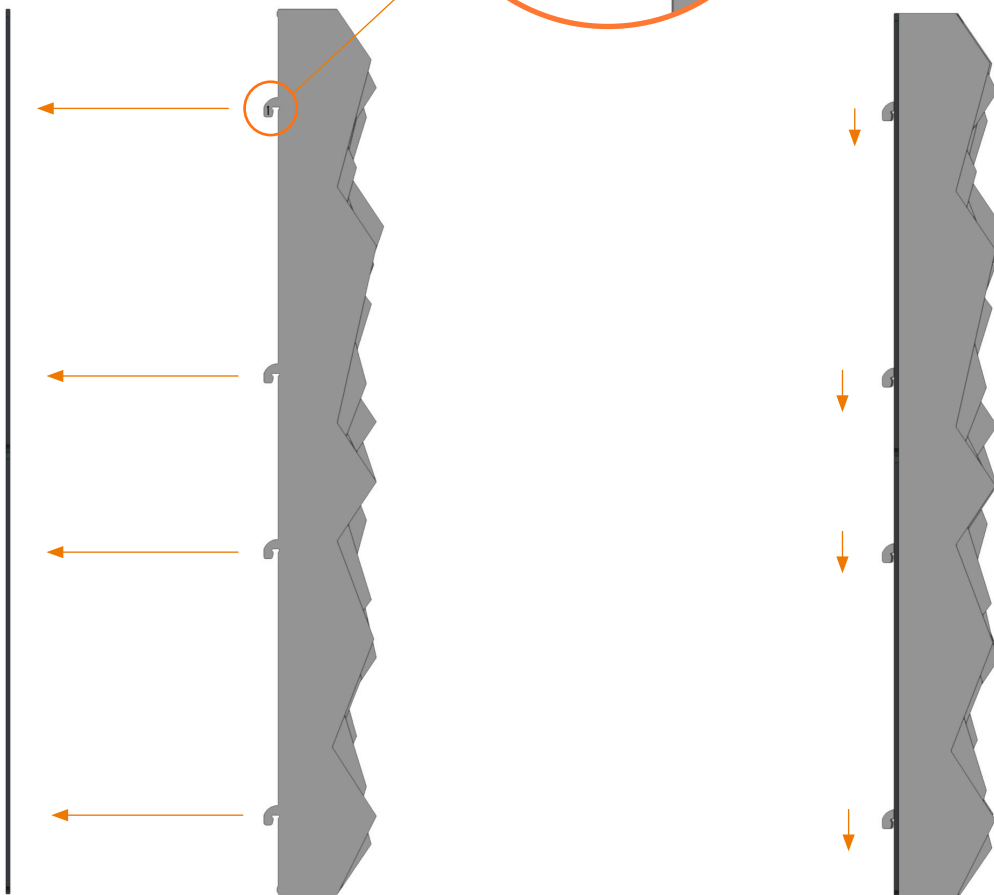

STEP ONE


- Align then insert the 4 SlotLok Insert hooks with the 4 vertical slots on the SlotLok Base Panels.

STEP TWO

- Press the SlotLok Insert down slightly to secure it.
- Repeat steps One and Two for all 7 Inserts, following the order in the insert design instructions.

STANDARD SUPERFLAT

- A Standard SuperFlat will have a slotted face panel that can accommodate 4 SlotLok Units.

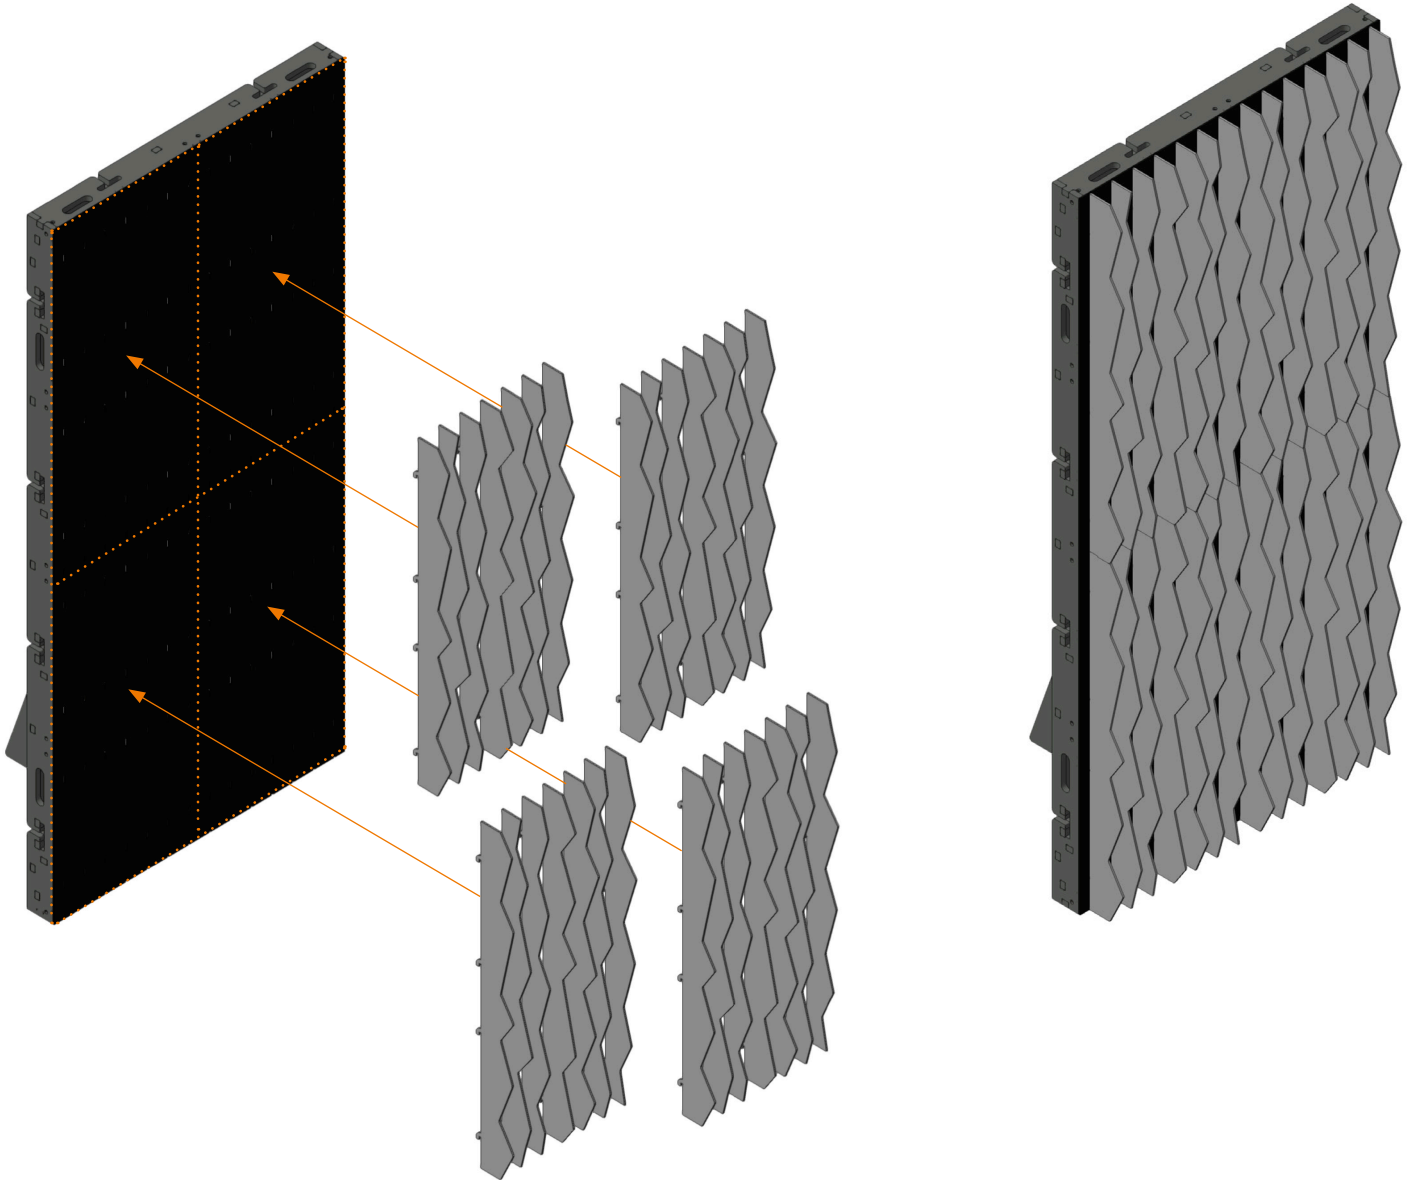


NOTE:

- A single SlotLok Unit consists of 7 SlotLok Inserts. Combine SlotLok Units into infinite combinations!

TALL SUPERFLAT

- A Tall SuperFlat will have a slotted face panel that can accommodate 2 SlotLok Units vertically.

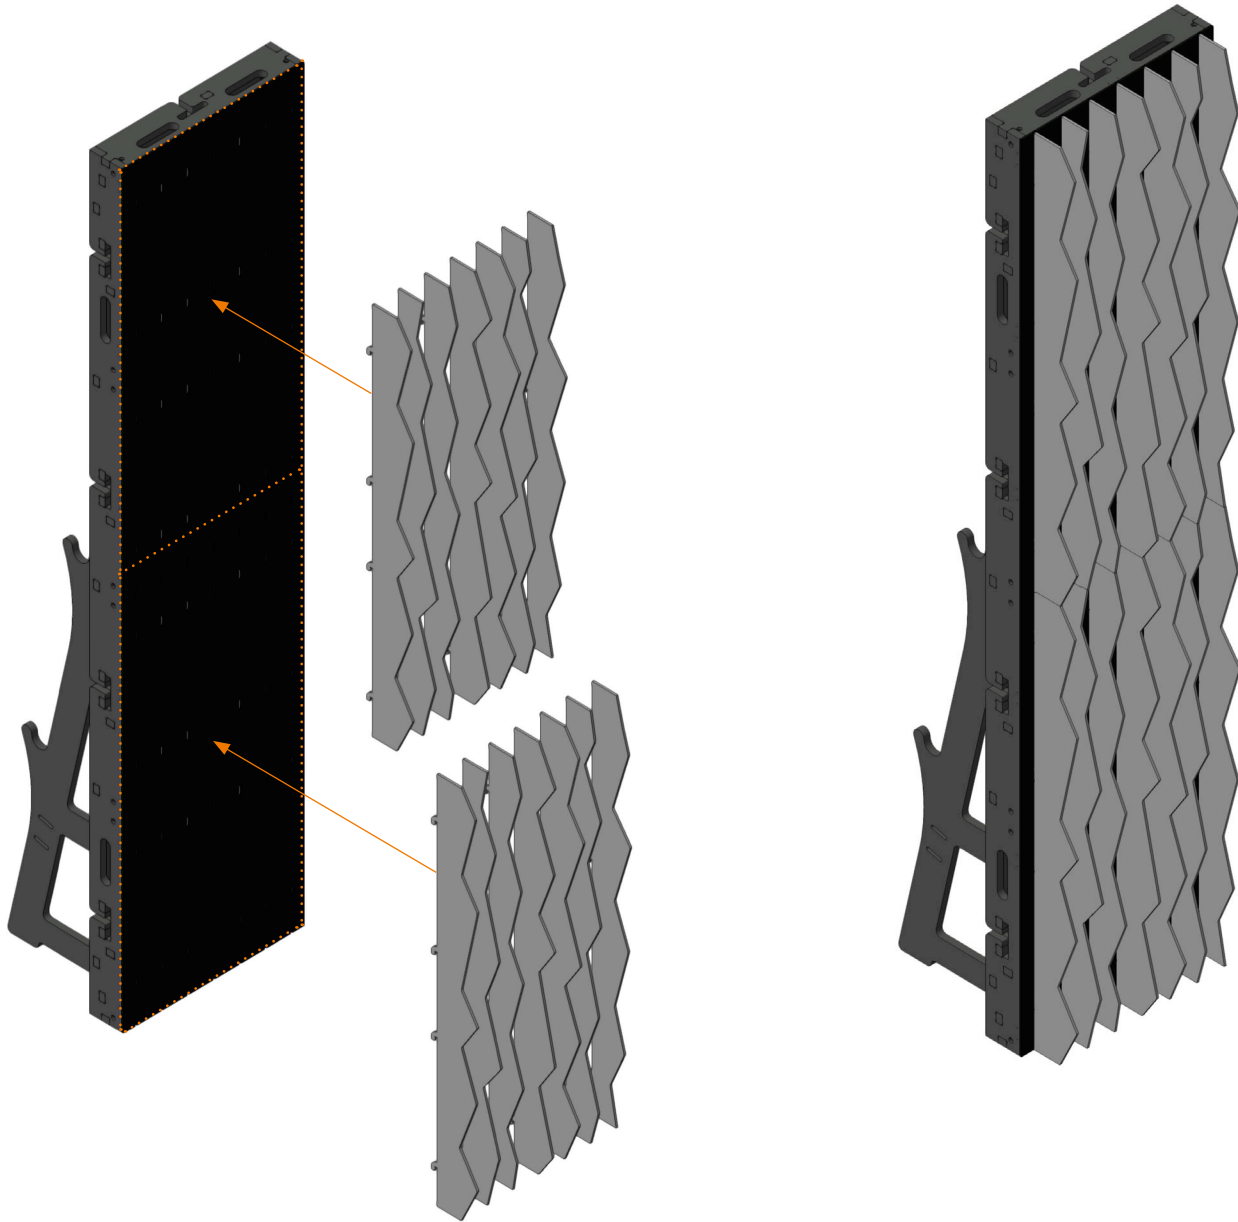

SQUAT SUPERFLAT

- A Squat SuperFlat will have a slotted face panel that can accommodate 2 SlotLok Units horizontally.

