
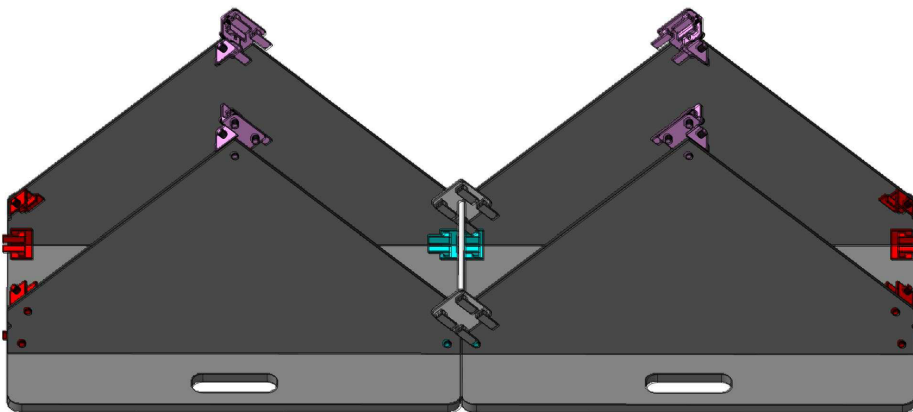


NOTE:

Actual product may vary. Superlever panels are interchangeable and instructions show a product representation. The Instructions reflect building the Diamond from the backside for illustration purposes.


STEP ONE

- Align SuperShape bases with handles facing the back of the SuperShape, and white feet facing down.
- Connect bases together using C4 Connectors as shown.
- Attach C2 Connectors on either side of base set-up per image.

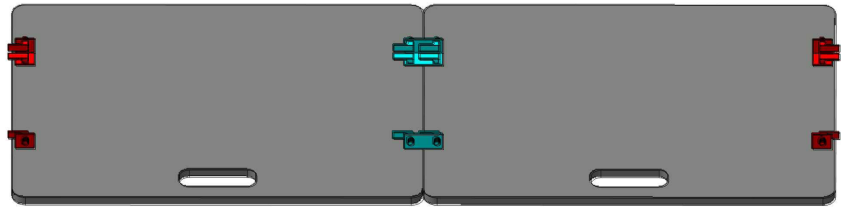

STEP TWO



- Attach SuperShape riser panels.
- Attach C2 connectors to the outer edge of the riser panels and a Dogbone connector as shown.
- Attach C5L and C5R connectors per the below image.

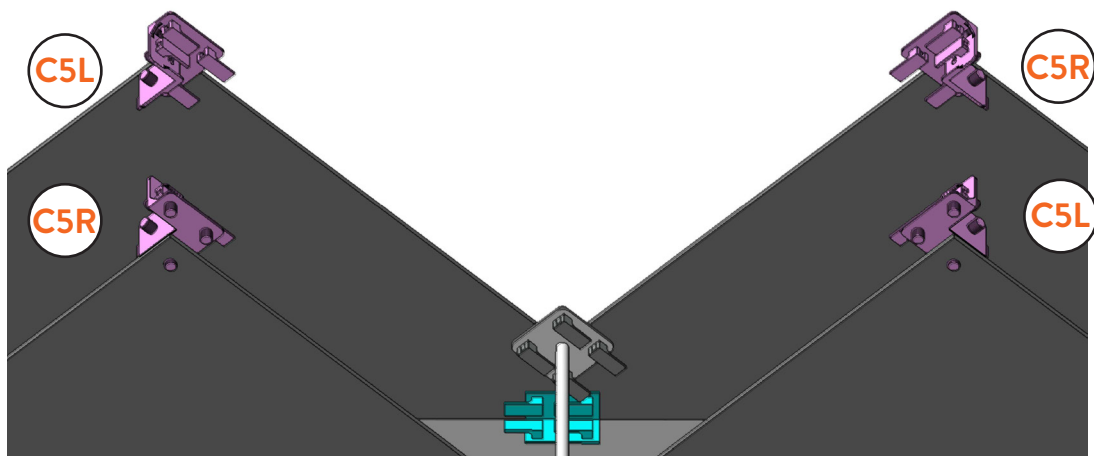

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact


STEP THREE

- Attach Half Panels to C2 and C5 connectors.
- Attach SuperLever Panels to front and back.
- Attach a Dogbone Connector in the center.

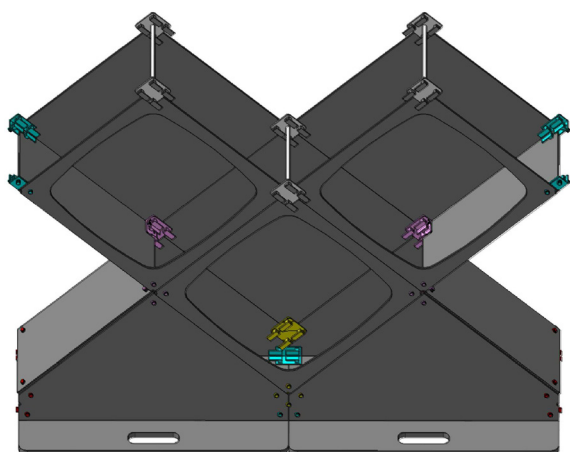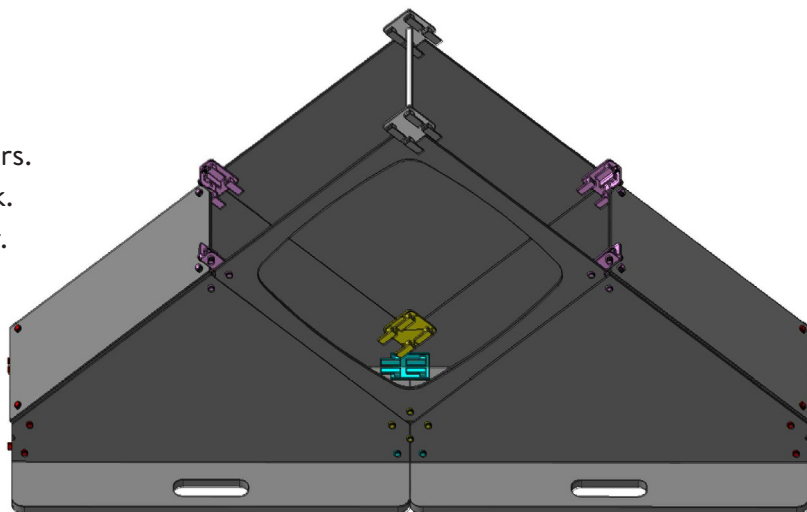


STEP FOUR

- Attach Half Panels to the C5 Left/Right.
- Attach SuperLever Panels to front and back.
- Attach C4 Connectors as shown.
- Attach Dogbone Connectors in the center.

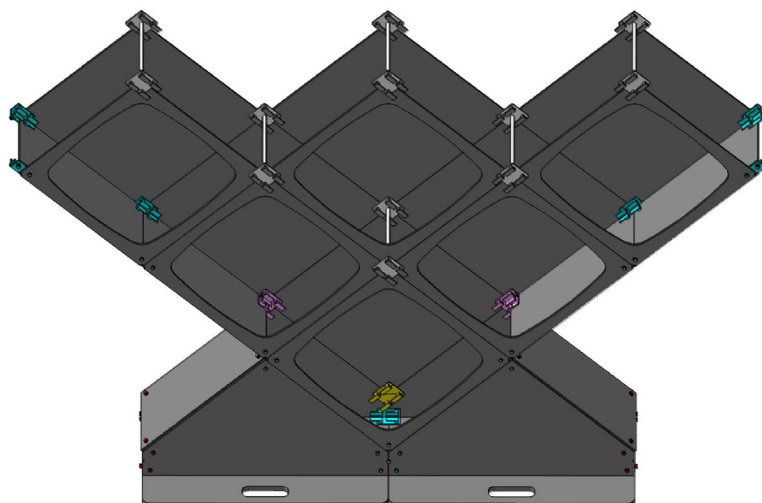

STEP FIVE

- Attach Half Panels to the C4 Connectors placed in STEP FOUR.
- Attach SuperLever Panels to front and back.
- Attach C4 Connectors as shown.
- Attach Dogbone Connectors in the center.

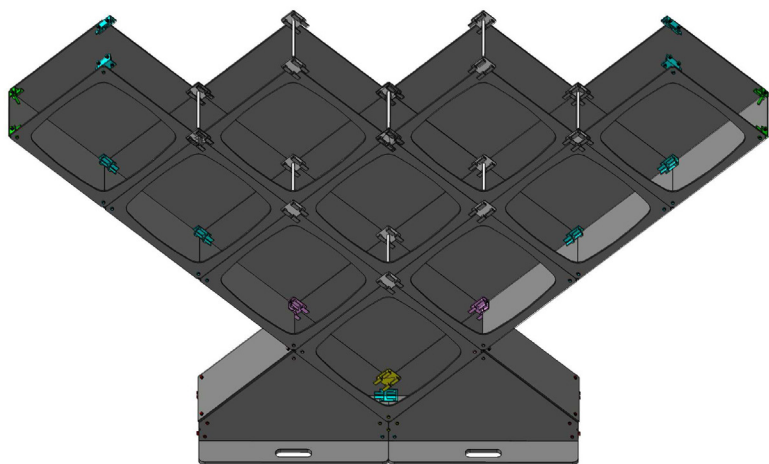



STEP SIX

- Attach Half Panels to the C4 Connectors placed in STEP FIVE.
- Attach C3 Connectors to the outside edges of the SuperShape Diamond.
- Attach SuperLever Panels as done previously.
- Attach C4 connectors to the top of the outer two sets of panels.
- Attach Dogbone Connectors in the centers.

STEP SEVEN

- Attach Half Panels.
- Attach SuperLever Panels as done previously.
- Attach C4 connectors to the top of the outer two sets of panels.
- Attach a Dogbone Connector in the center.

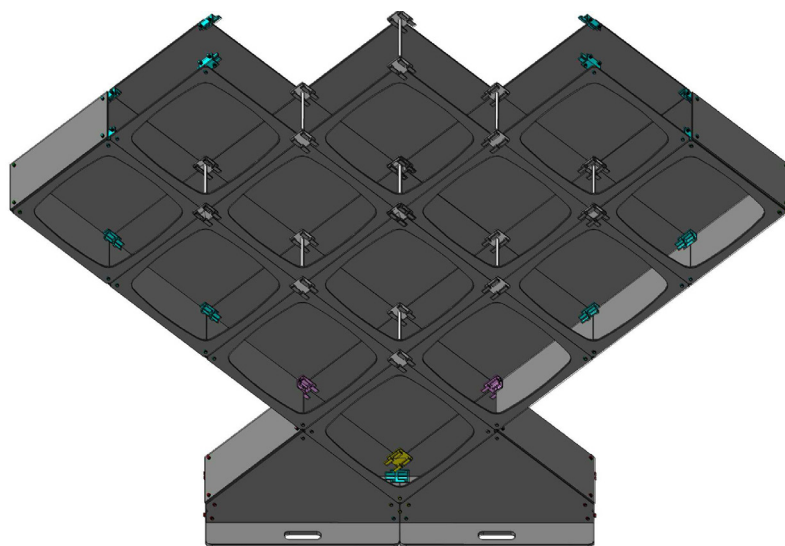

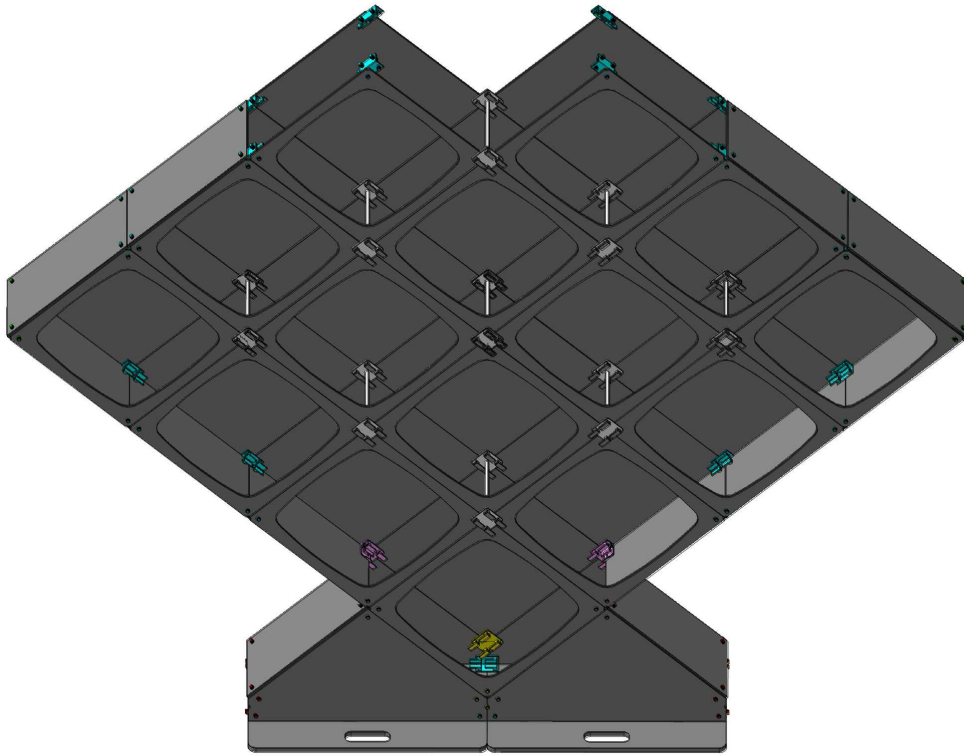


STEP EIGHT

- Attach Half Panels.
- Attach SuperLever Panels as done previously.
- Attach C4 connectors to the top of the sets of panels.


STEP NINE

- Attach Half Panels.
- Attach SuperLever Panels as done previously.
- Attach C3 connectors to the top of the set of panels.

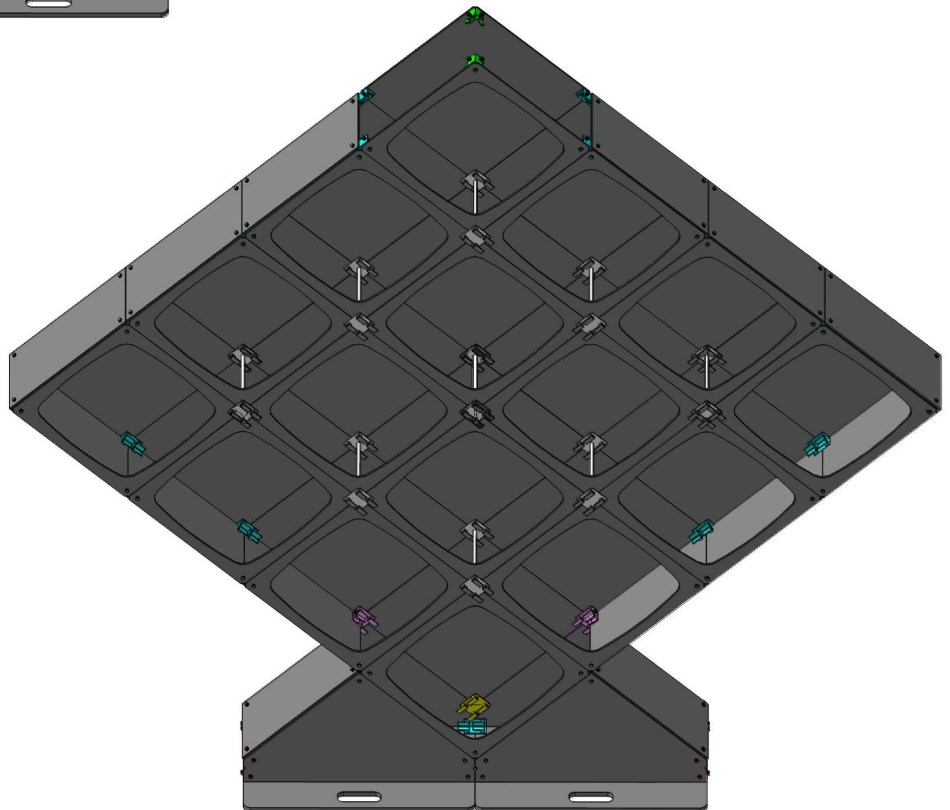

STEP TEN

- Attach the final Half panels onto the top sides of the SuperShape Diamond.

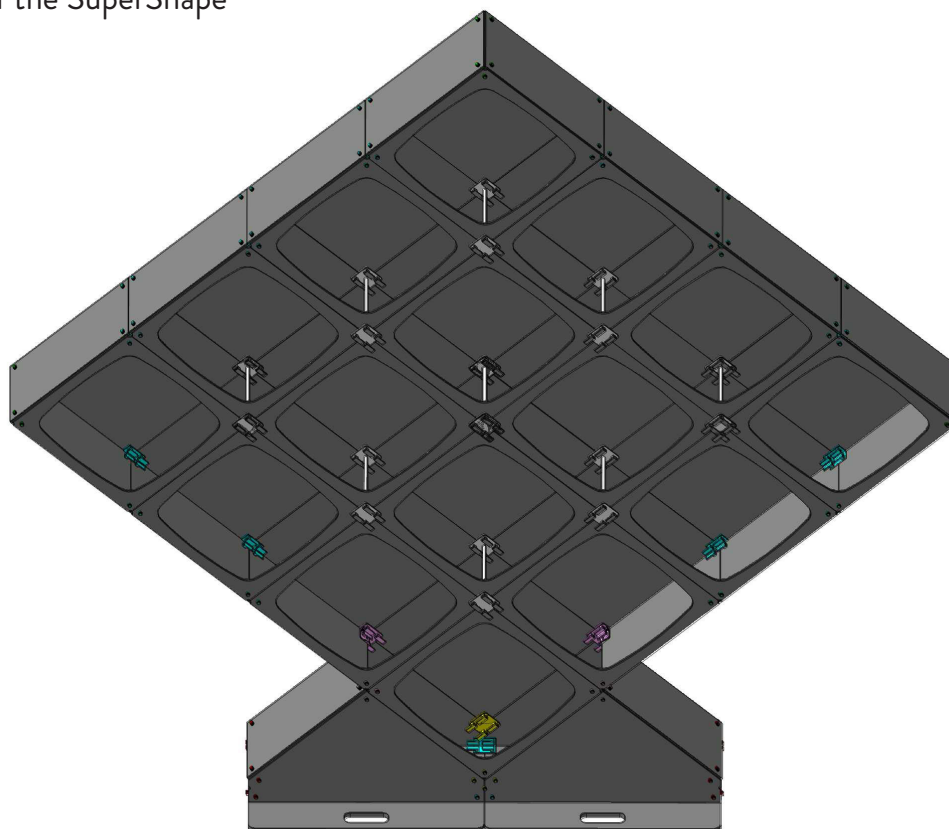

DISASSEMBLY INSTRUCTIONS:

SuperShape *MUST* be disassembled from top down, in reverse order as the instructions listed. Removal of bottom panels first may result in toppling of the SuperShape.