


NOTE:

Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.

STEP ONE

- Align SuperShape bases with handles facing the back of the SuperShape, and white feet facing down.
- Connect bases together using C4 connectors as shown.
- Attach C2 connectors.

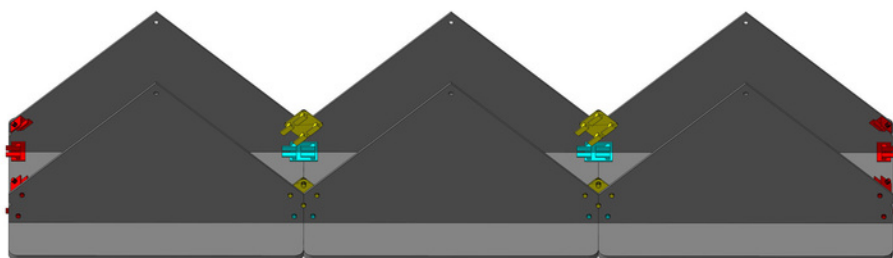



STEP TWO

- Attach SuperShape riser panels.
- Attach C2 and F4 connectors as shown.

STEP THREE

- Attach Half panels to C2 Connectors.
- Attach C5 Connectors to side where arrow will be pointing, and C4 connectors on the other side.
- Attach a dogbone connector in the center.
- Attach SuperLever Panels to front and back.

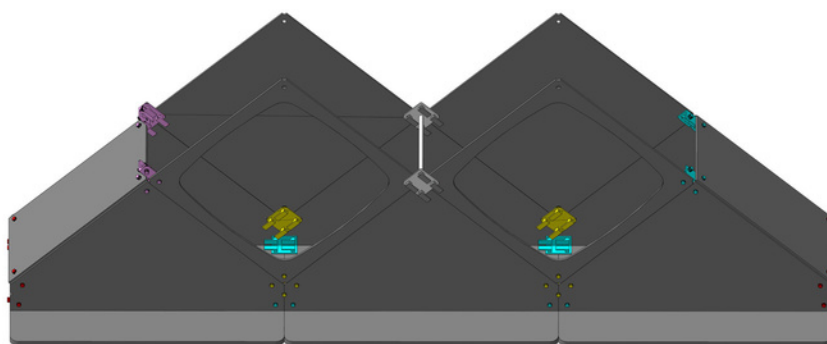


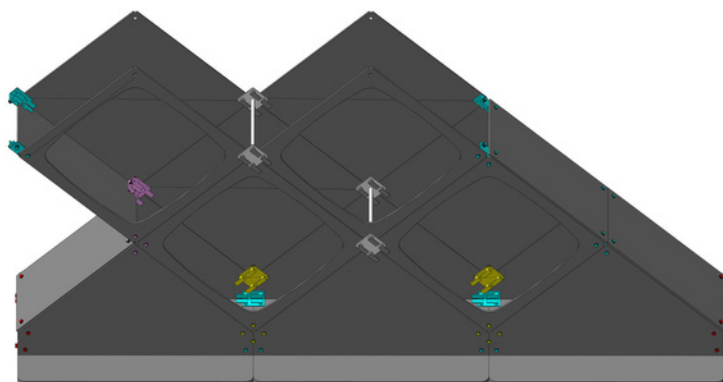


STEP FOUR

- Attach Half Panels to the C5 and C4 connectors placed in STEP THREE.
- Attach SuperLever Panels to front and back.
- Attach C4 Connectors as shown.
- Attach Dogbone Connector in the center.


STEP FIVE

- Attach Half panels to the C4 connectors placed in STEP FOUR.
- Attach C3 connectors to create the point of the Arrow.
- Attach Dogbone Connector in the center. Attach C5 Connectors to create the return of the Arrow.
- Attach SuperLever Panels to front and back.

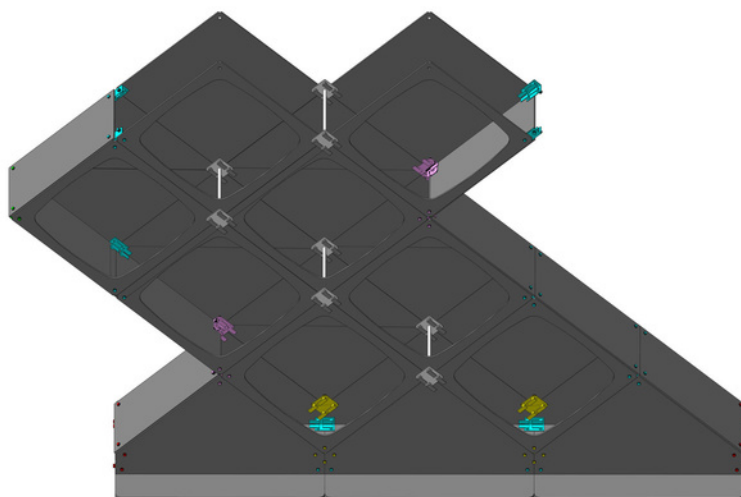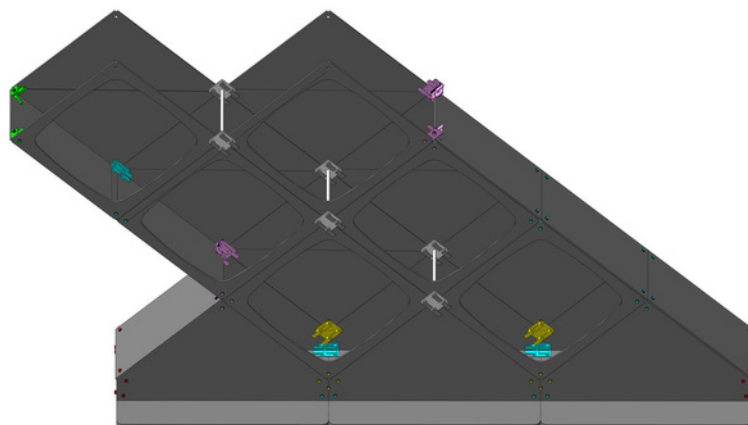

STEP SIX

- Attach Half Panel's to the C5 and C3 connectors placed in STEP FIVE.
- Attach C4 Connectors to the Half panels.
- Attach SuperLever Panels as done previously.
- Attach Dogbone Connector in the center.

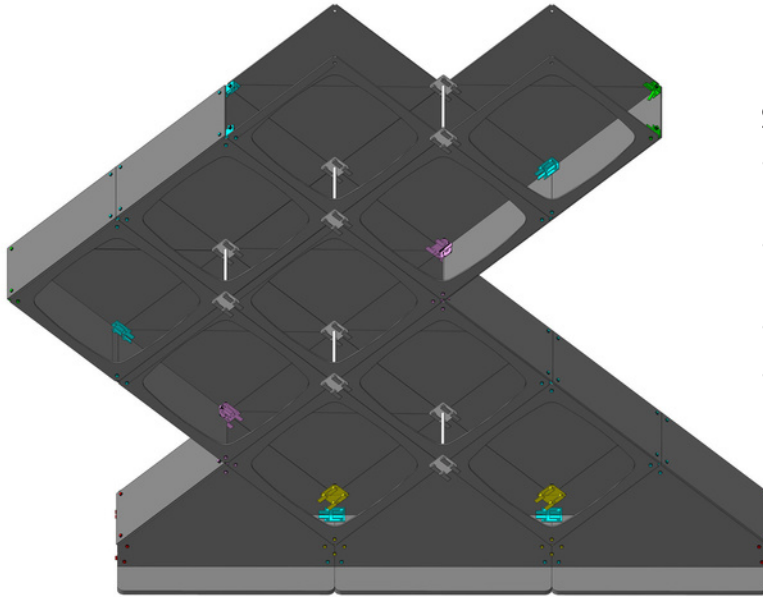


STEP SEVEN

- Attach Half panels to the C4 connectors placed in STEP SIX.
- Attach C4 & C3 Connectors to the Half panels.
- Attach SuperLever Panels as done previously.
- Attach Dogbone Connector in the center.


STEP EIGHT

- Attach Half Panel's to the C4 and C3 connectors placed in STEP SEVEN.
- Attach C4 Connectors to the Half panels.
- Attach SuperLever Panels as done previously.
- Attach C3 Connectors to the top of the Arrow.

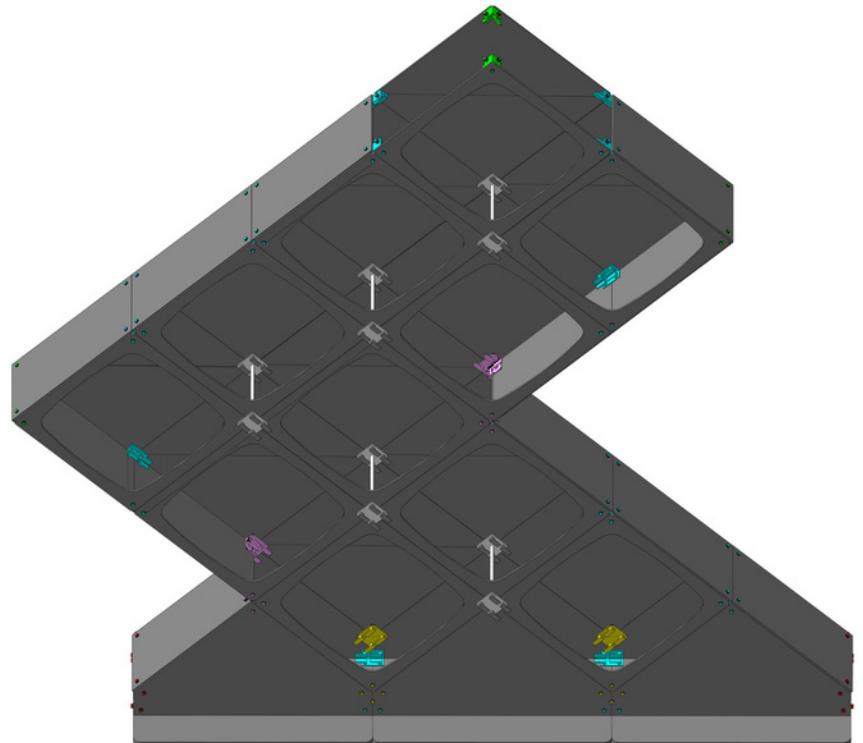

STEP NINE

- Attach the final Half panels onto the top sides of the SuperShape Arrow.
- Ensure structure is stable before repositioning.

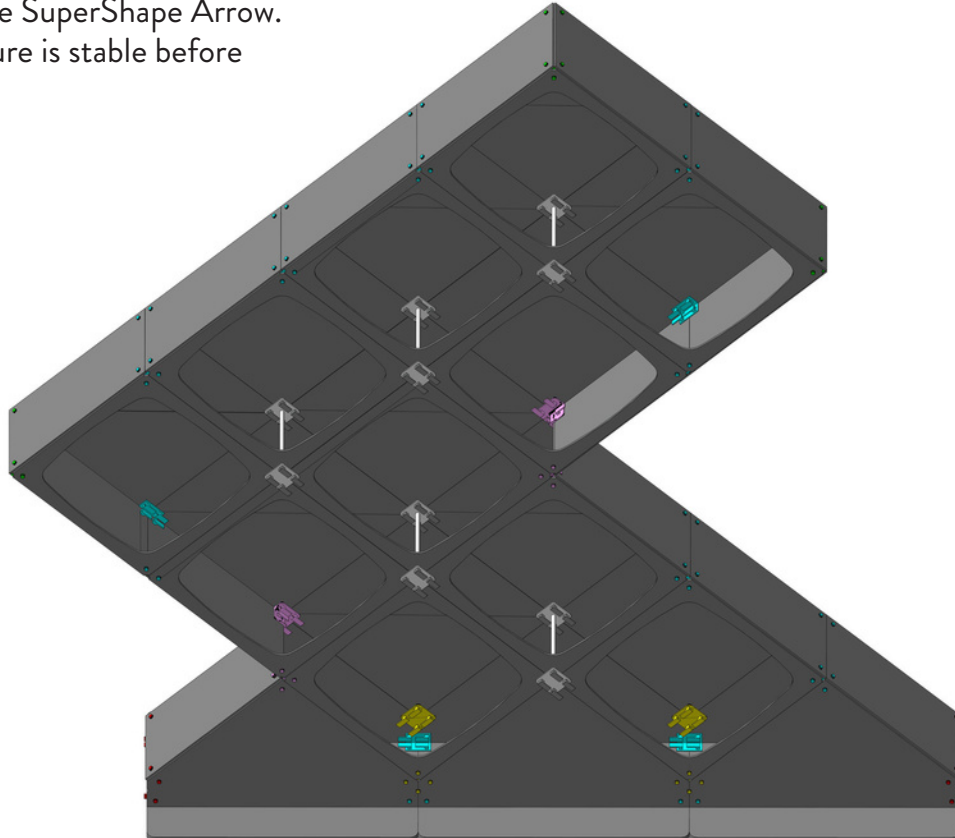

DISASSEMBLY INSTRUCTIONS:

SuperShape **MUST** be disassembled from top down, in reverse order as the instructions listed. Removal of bottom panels first may result in toppling of the SuperShape.


Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

NOTE:

Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.


STEP ONE

- Align SuperShape bases with handles facing the back of the SuperShape, and white feet facing down.
- Connect bases together using C4 connectors as shown.
- Attach C2 connectors.

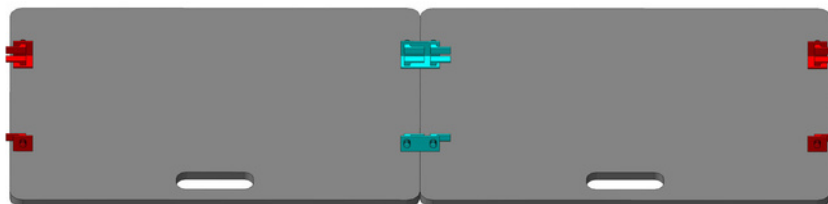


STEP TWO

- Attach SuperShape riser panels.
- Attach C2 and F4 connectors as shown.

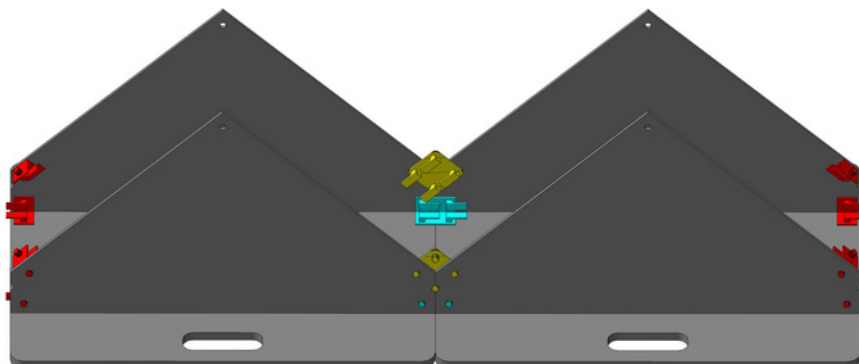


STEP THREE

- Attach half panels to C2 Connectors.
- Attach C5 Connectors to side where arrow will be pointing, and C4 connectors on the other side.
- Attach SuperLever Panels to front and back.

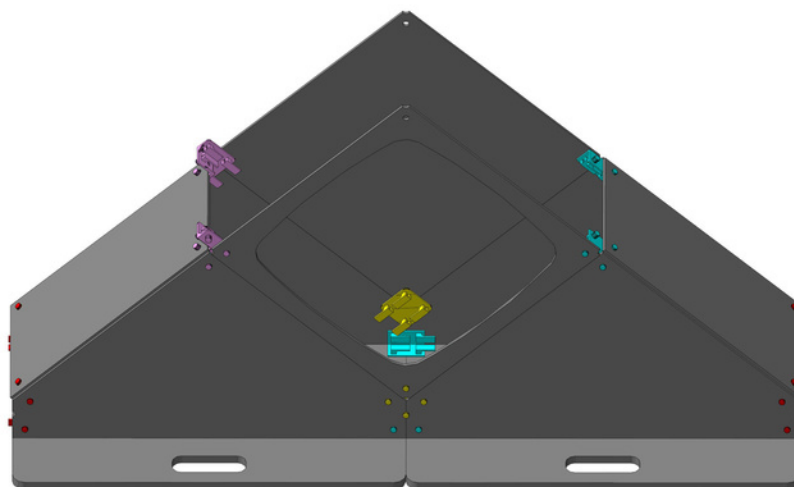


Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

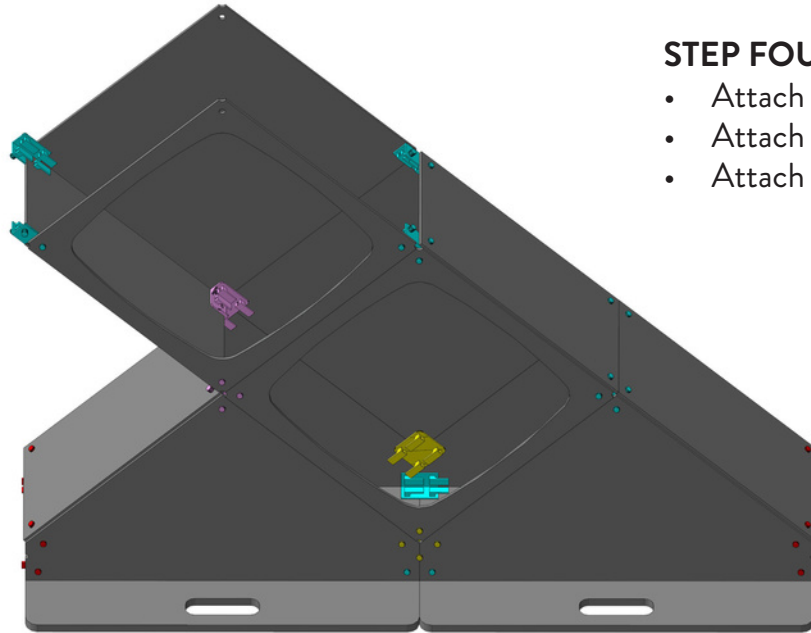

STEP FOUR

- Attach half panels to C5 Connectors.
- Attach SuperLever Panels to front and back.
- Attach C4 Connectors as shown.


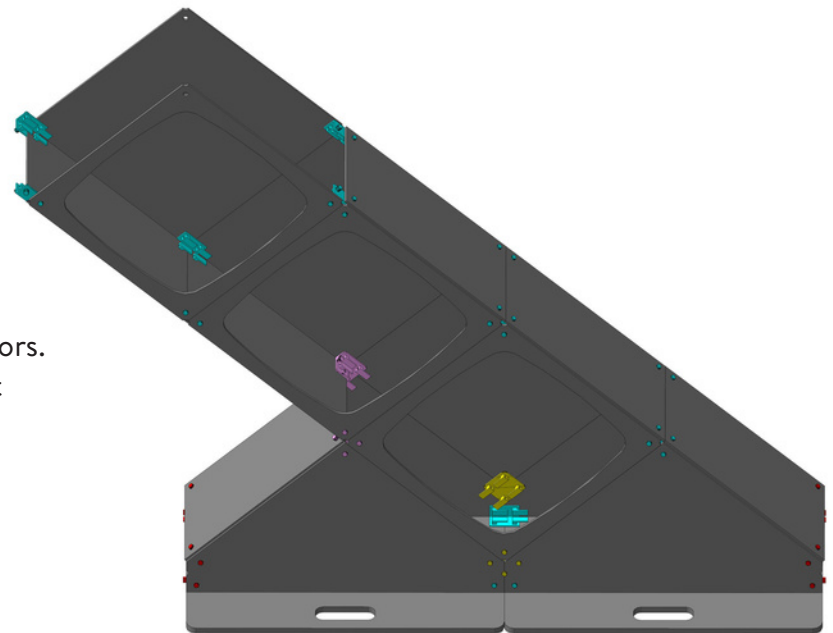


STEP FIVE

- Attach half panels to C4 Connectors.
- Attach SuperLever Panels to front and back.
- Attach C4 Connectors as shown.


STEP SIX

- Attach half panel on top of panels placed in STEP FIVE.
- Attach C5 Connectors to create the return of the Arrow.
- Attach SuperLever Panels to front and back.
- Attach C3 connectors to create the point of the Arrow.

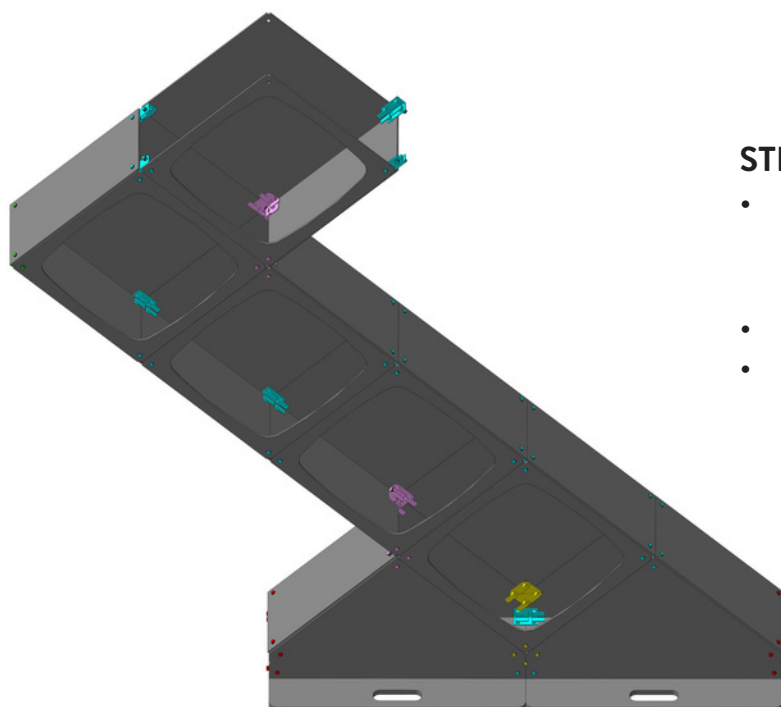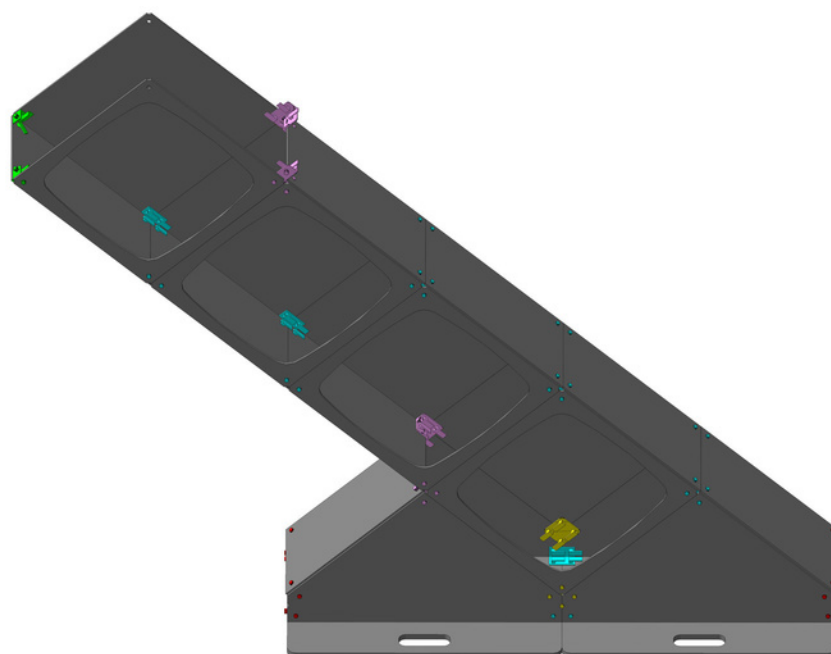


STEP SEVEN

- Attach a Half Panel on the underside of the Arrow top, and a Half Panel to the top of the C3's.
- Attach C4 Connectors to the half panels.
- Attach SuperLever Panels as done previously.

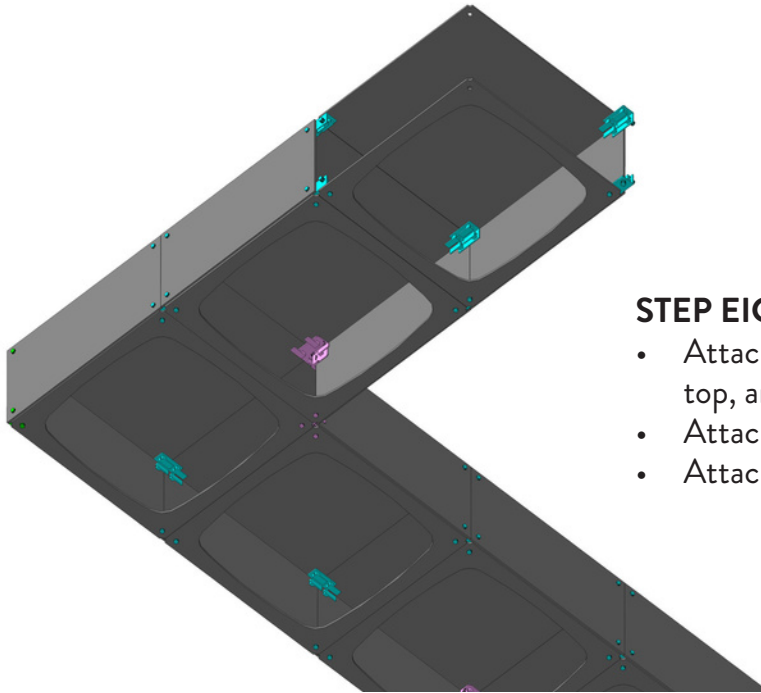


STEP EIGHT

- Attach a Half Panel on the underside of the Arrow top, and a Half Panel to the top of the C4's.
- Attach C4 Connectors to the half panels.
- Attach SuperLever Panels as done previously.

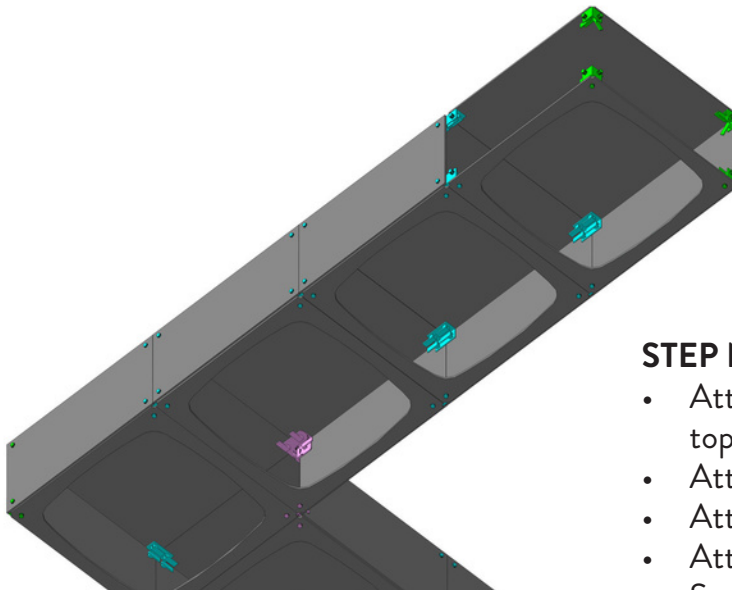

STEP NINE

- Attach a Half Panel on the underside of the Arrow top, and a Half Panel to the top of the C4's.
- Attach C4 and C3 Connectors to the half panels.
- Attach SuperLever Panels as done previously.
- Attach C3 connectors to the top of the SuperLever Panels.

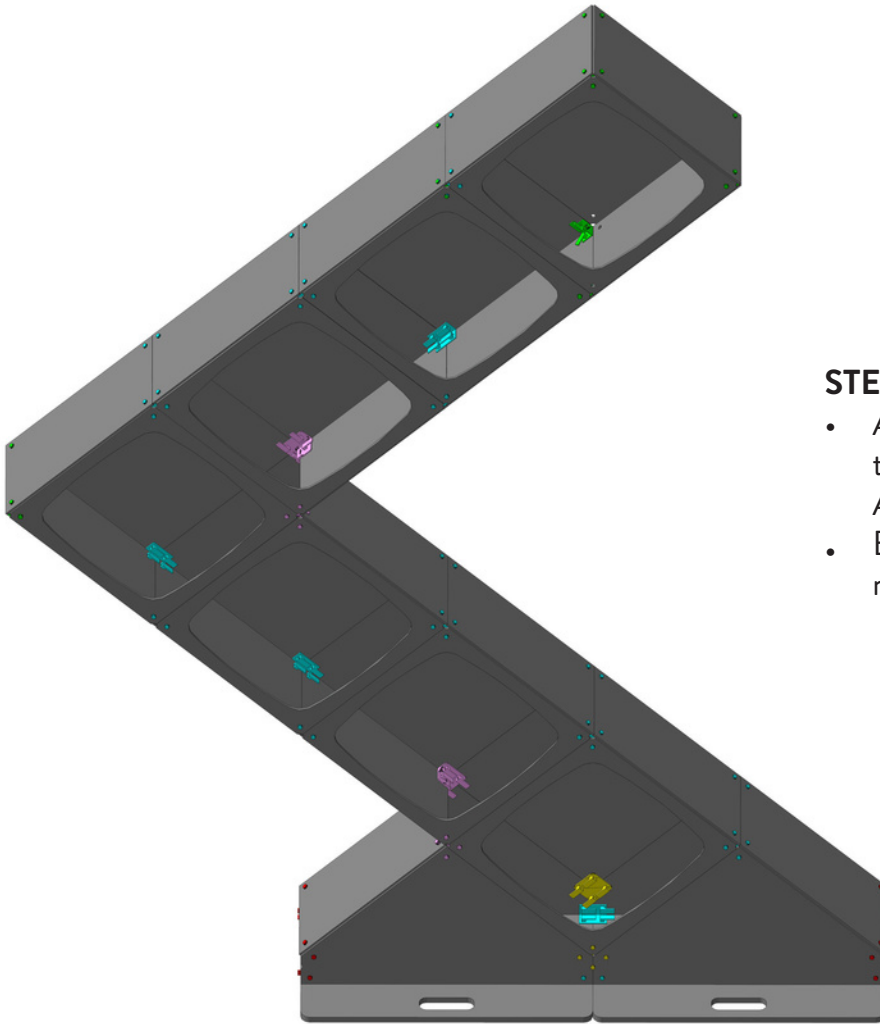

STEP TEN

- Attach the final half panels onto the top sides of the SuperShape Arrow.
- Ensure structure is stable before repositioning.

DISASSEMBLY INSTRUCTIONS:

SuperShape **MUST** be disassembled from top down, in reverse order as the instructions listed. Removal of bottom panels first may result in toppling of the SuperShape.



Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

NOTE:

Actual product may vary. Superlever panels are interchangeable and instructions show a product representation.


STEP ONE

- Align SuperShape bases with handles facing the back of the SuperShape, and white feet facing down.
- Connect bases together using C4 connectors as shown.
- Attach C2 connectors.

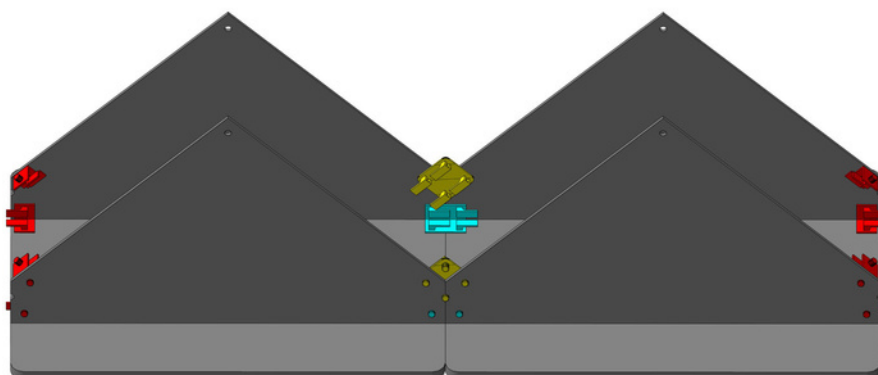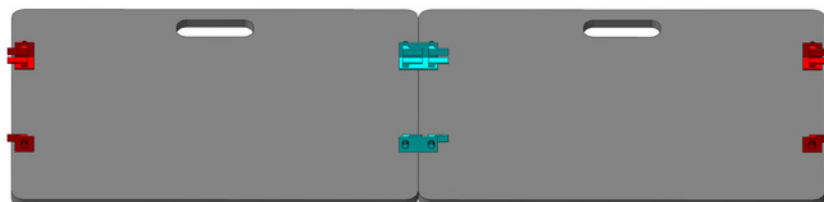

STEP TWO


- Attach SuperShape riser panels.
- Attach C2 and F4 connectors as shown.

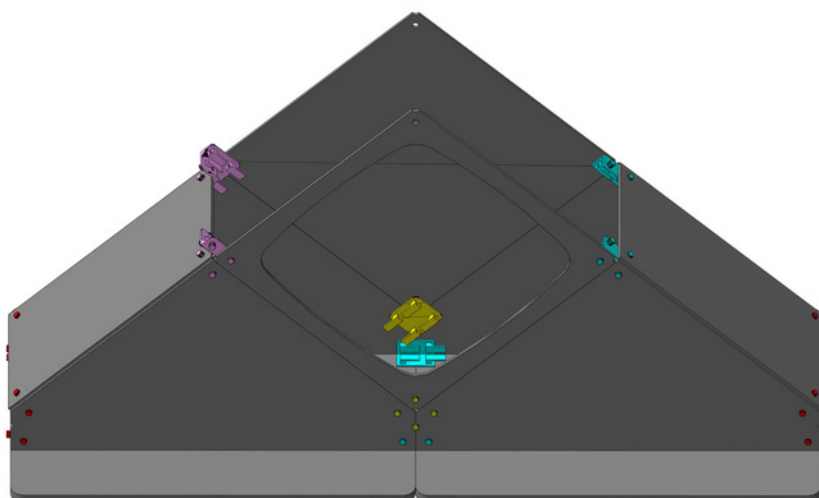

STEP THREE

- Attach half panels to C2 Connectors.
- Attach C5 Connectors to side where arrow will be pointing, and C4 connectors on the other side.
- Attach SuperLever Panels to front and back.

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

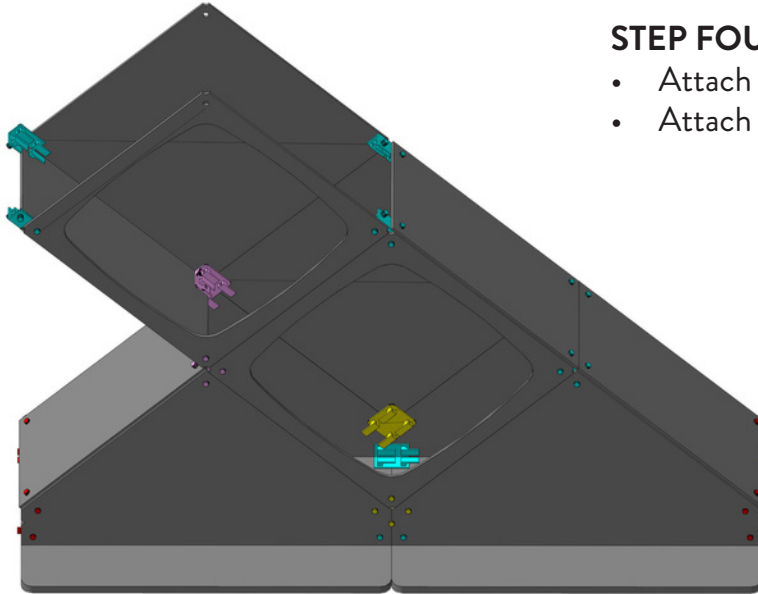


STEP FOUR

- Attach SuperLever Panels to front and back.
- Attach C4 Connectors as shown.



STEP FIVE

- Attach half panel on top of panels placed in STEP FOUR.
- Attach C5 Connectors to create the return of the Arrow.
- Attach SuperLever Panels to front and back.
- Attach C3 connectors to create the point of the Arrow.

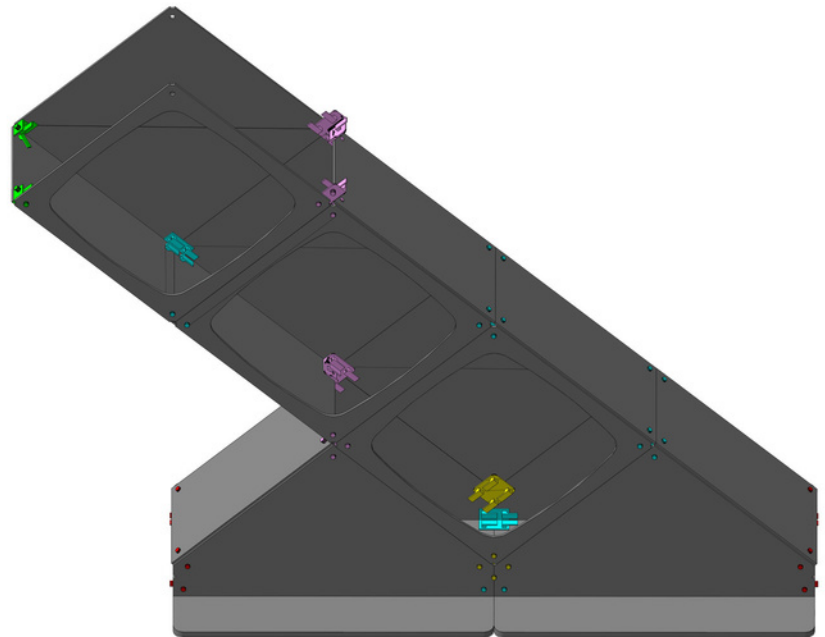


STEP SIX

- Attach a Half Panel on the underside of the Arrow top, and a Half Panel to the top of the C3's.
- Attach C4 Connectors to the half panels.
- Attach SuperLever Panels as done previously.

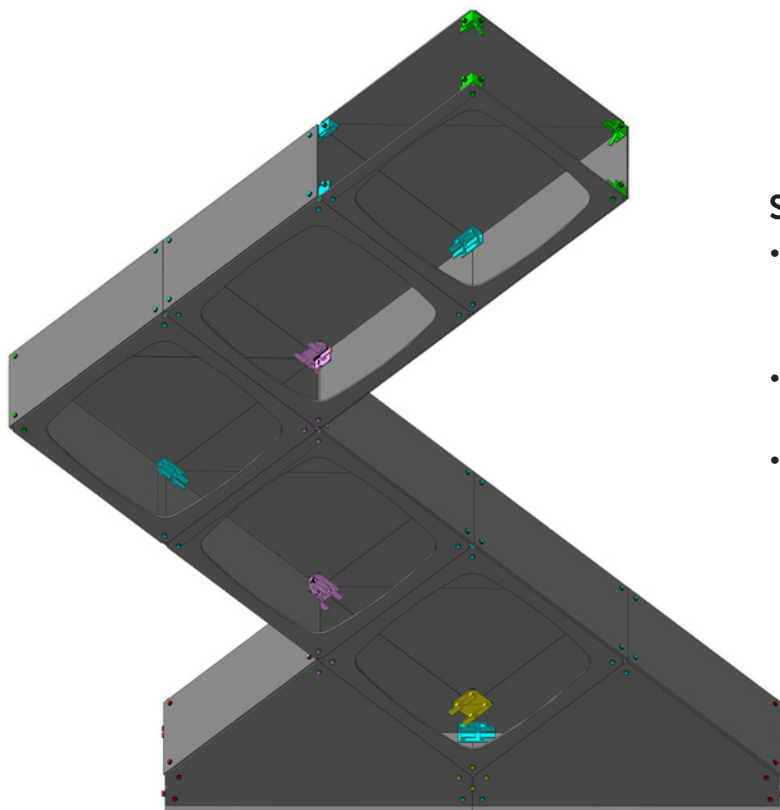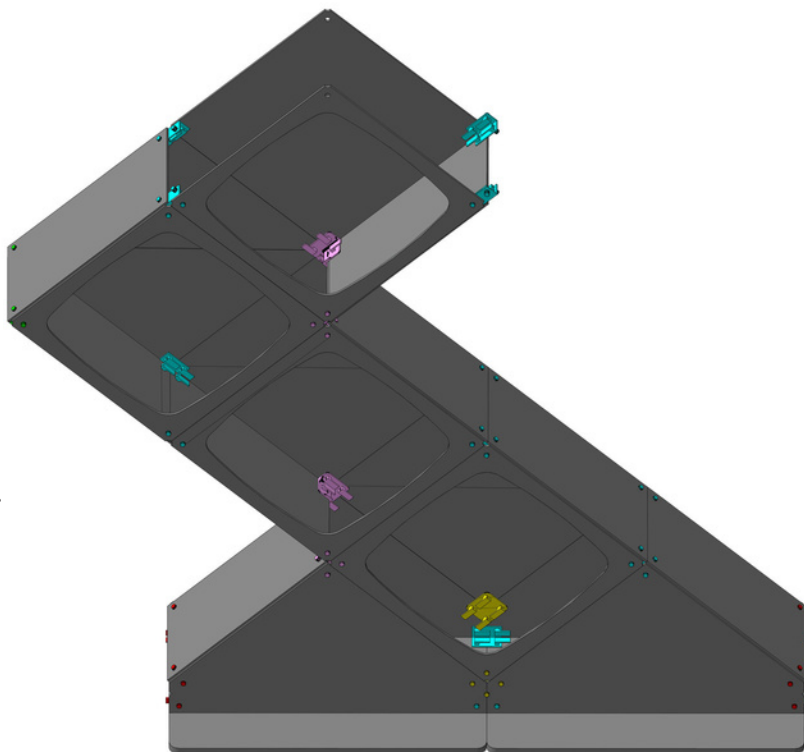

STEP SEVEN

- Attach a Half Panel on the underside of the Arrow top, and a Half Panel to the top of the C4's.
- Attach C4 & C3 Connectors to the half panels.
- Attach SuperLever Panels as done previously.

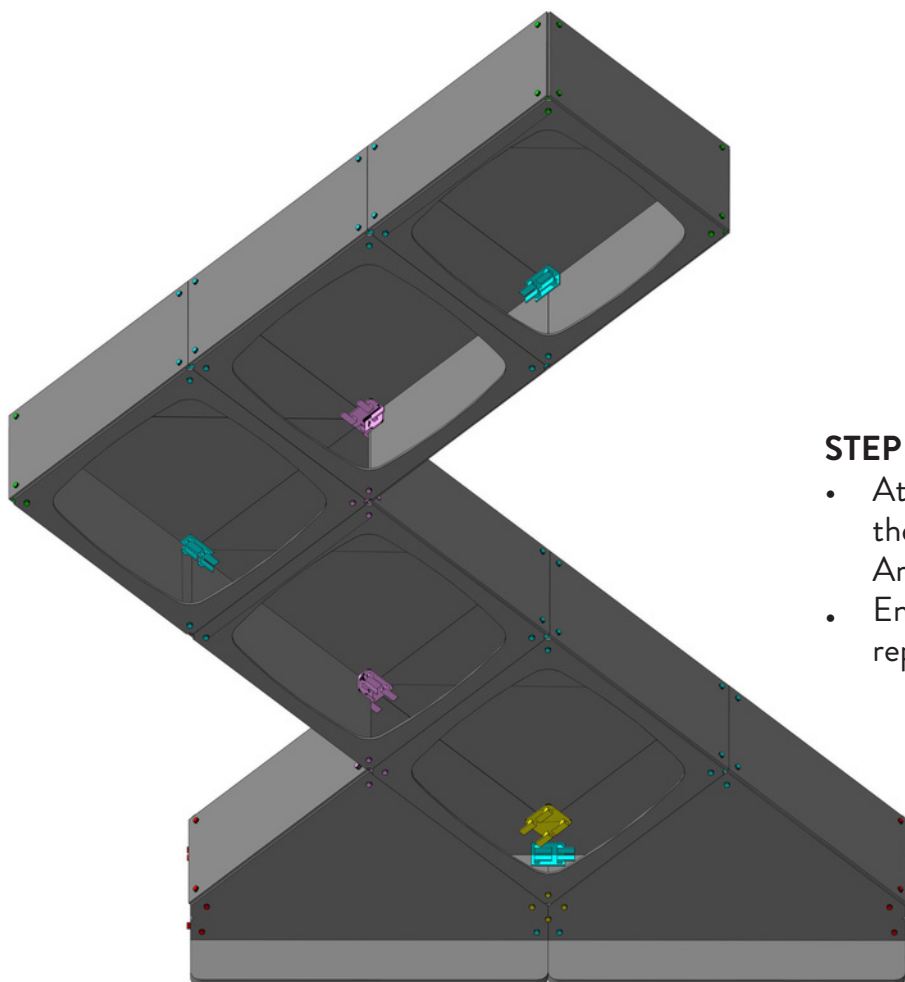

STEP EIGHT

- Attach the final half panels onto the top sides of the SuperShape Arrow.
- Ensure structure is stable before repositioning.

DISASSEMBLY INSTRUCTIONS:

SuperShape **MUST** be disassembled from top down, in reverse order as the instructions listed. Removal of bottom panels first may result in toppling of the SuperShape.

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact