SUPERWALL NO-SHOW

INSTALLATION INSTRUCTIONS

NOTE:
Actual product may vary. SuperLever No-Show panels are interchangable and instructions show a product representation.

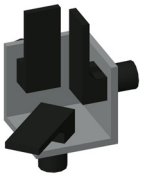

NOTE:
We recommend using black connectors with No-Show SuperLever panels; however, the white connectors will also work.

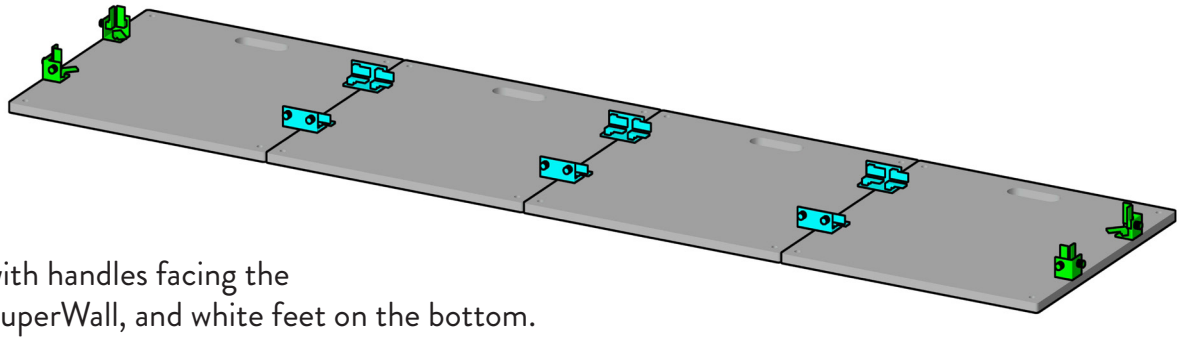

STEP ONE

Align bases with handles facing the
back of the SuperWall, and white feet on the bottom.
Connect bases together using C4 connectors as shown.
Attach C3 connectors to both ends.

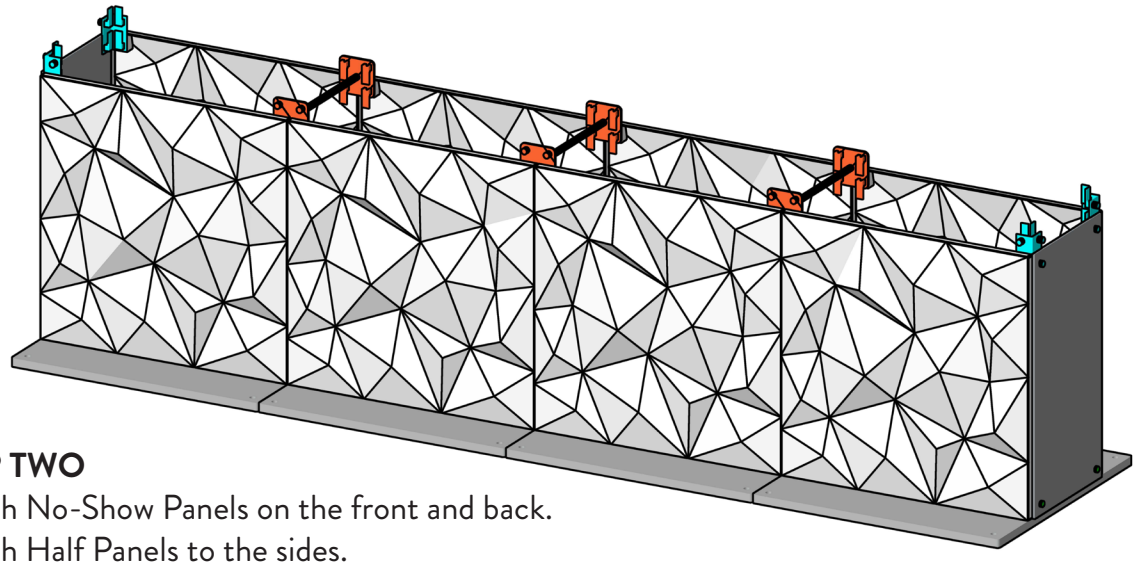

STEP TWO

Attach No-Show Panels on the front and back.
Attach Half Panels to the sides.
Attach C4 and Reverse dogbone connectors as shown.

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

STEP THREE
Reapeat STEP TWO for the middle rows of your SuperWall.

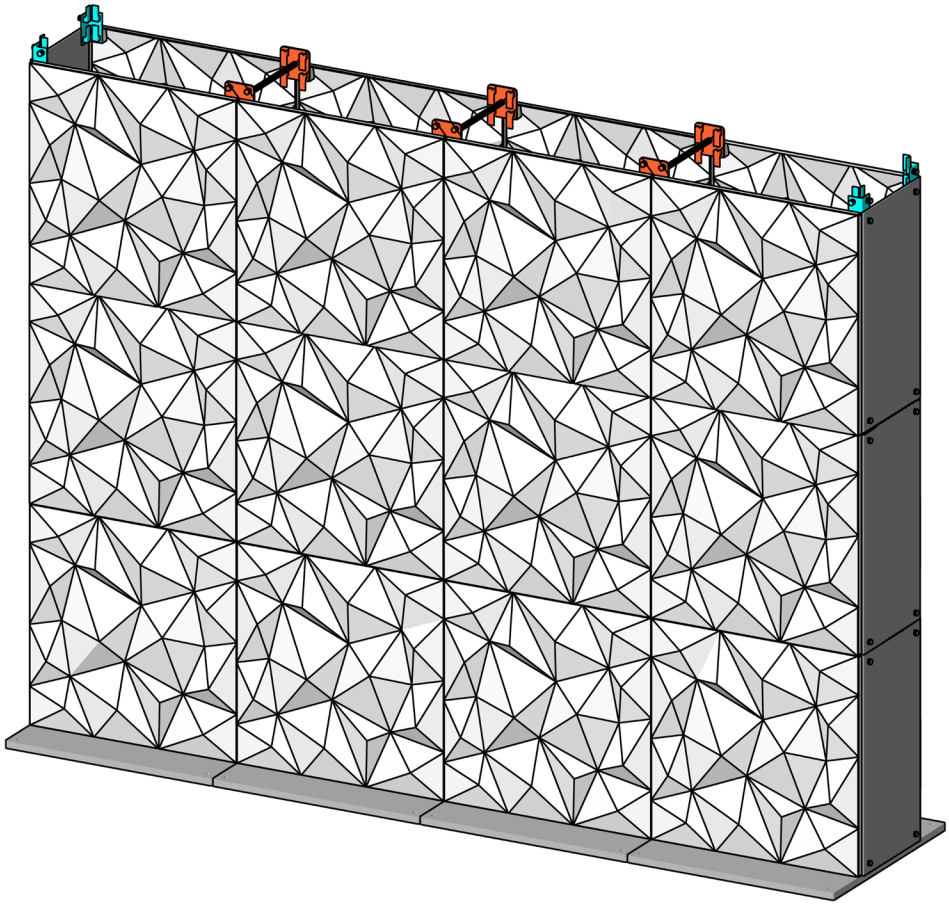

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact

STEP FOUR

For top of SuperWall, add the top row of the No-Show panels and Half Panels.
Attach C3 and C4 connectors as shown.

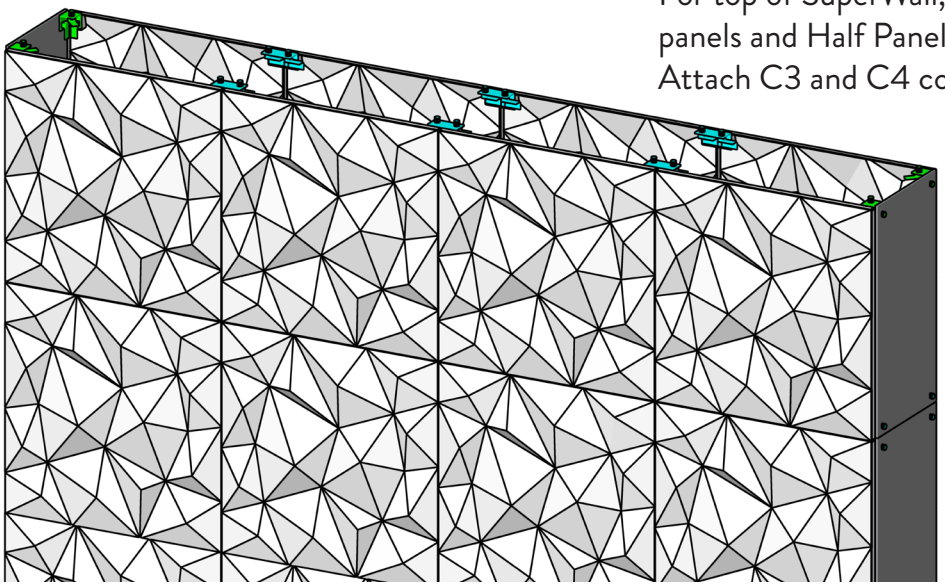

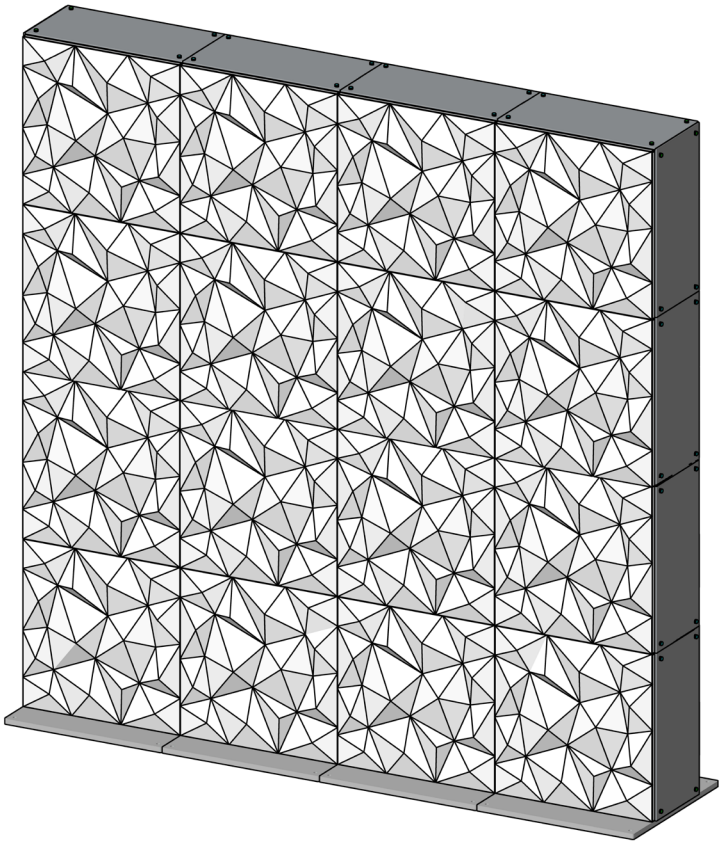

STEP FIVE

Complete SuperWall by attaching Half Panels to the top of the SuperWall. Ensure structure is stable before repositioning.

DISASSEMBLY INSTRUCTIONS:

SuperWall MUST be disassembled from top down, in reverse order as the assembly process. Removal of bottom panels first may result in a collapsing wall.

Questions about ATOMIC products?
Contact your Modular Systems Account Manager!
www.atomicdesign.tv/contact